



INSTRUCTIONS

-J06090

2014-09-15

TRANSMISSION SIDE COVERS: HYDRAULIC

GENERAL

Kit Number

34800026

Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

Kit Contents

See Figure 2 and Table 1.

INSTALLATION

NOTE

- **For vehicles equipped with security siren:** With security fob present, turn ignition switch ON. See the service manual. After system is disarmed, turn ignition switch OFF. **IMMEDIATELY** remove the main fuse.
- **For vehicles WITHOUT security siren:** See the service manual. Remove the main fuse.

1. Remove seat.

▲ WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

2. See the service manual. Remove main fuse.
3. Loosen or remove components necessary to access side covers.
4. See Figure 1. Remove outer side cover (2).

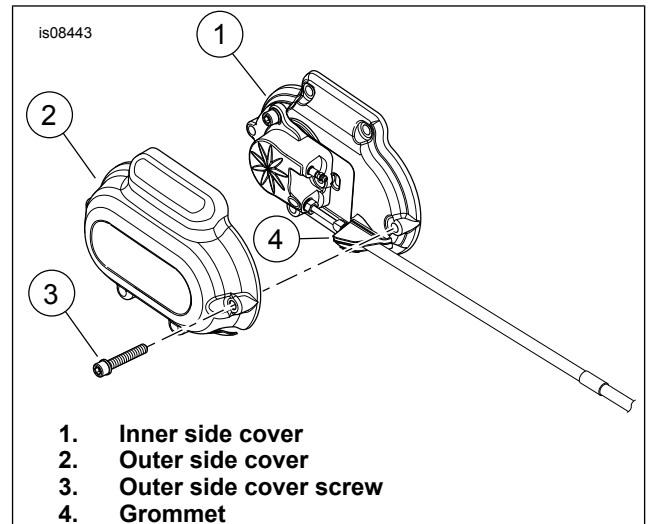


Figure 1. Transmission Side Covers

5. Install outer transmission side cover. Tighten screws to 11.2–13.6 N·m (100–120 in-lbs).
6. Verify that clutch fluid line grommet is seated securely between the inner side cover and the outer side cover.
7. Tighten or install components that were loosened or removed.
8. See the service manual. Install main fuse.

SERVICE PARTS

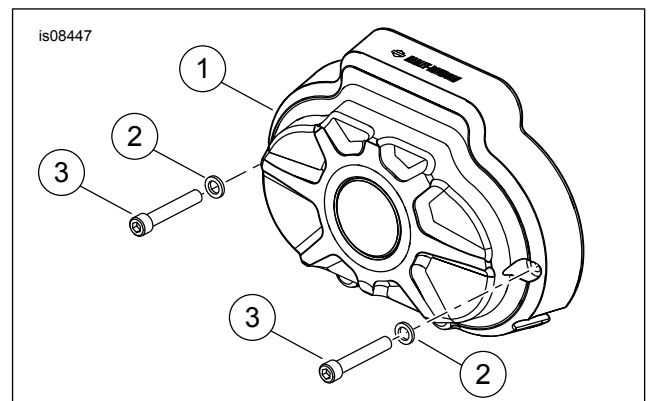


Figure 2. Service Parts: Transmission Side Cover

Table 1. Service Parts

| Item | Description (Quantity) | Part Number |
|------|------------------------|---------------------|
| 1 | Cover, outer (1) | Not Sold Separately |
| 2 | Washer (2) | 94062-03 |
| 3 | Screw (2) | 94316-91TS |