REAR NINE-SPOKE WHEELS

GENERAL

Kit Number

40789-08, 41883-07, 41889-07, 41889-09

Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

Additional Parts Required

These kits include the custom wheel only.

Proper installation of these kits require the separate purchase of the following parts which are available at a Harley-Davidson dealer.

- Wheel Bearing Remover and Installer (HD-44060-A).
- Wheel Installation Kit (See tables for part number)

The following Harley-Davidson Genuine Motor Accessories are recommended for proper maintenance and cleaning:

- Harley[®] Bright[™] Chrome Cleaner (94683-99)
- Harley[®] Glaze[™] Polish and Sealant (99701-84)
- Harley® Wheel and Spoke Brush (43078-99)
- Harley-Davidson[®] Wheel and Tire Cleaner (94658-98)

AWARNING

The rider's safety depends upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00333a)

NOTE

This instruction sheet references service manual information. A service manual for your model motorcycle is required for this installation and is available from a Harley-Davidson dealer.

Kit Contents

See Figure 1 and Service Parts Tables.

INSTALLATION

 Remove existing rear wheel assembly. Save axle, axle nut, brake disc and wheel spacers for kit installation. Refer to the service manual.

NOTES

Prior to removing or installing the wheel, the rear brake caliper must be removed. See the service manual.

The cotter pin or spring clip for the axle nut must be replaced. They are available for purchase from you dealer. See your dealer for the correct part number for your model motorcycle.

CAUTION

Do not re-use brake disc screws. Re-using disc screws can result in torque loss and damage to rotor and/or brake assembly. (00319b)

CAUTION

Do not re-use sprocket mounting screws. Re-using sprocket mounting screws can result in torque loss and damage to the sprocket and/or belt assembly. (00480b)

- 2. See Figure 1. Install valve stem assembly (E) on wheel. Refer to the service manual.
- Assemble wheel installation kit components, stock brake disc, and sprocket to wheel using the appropriate service parts table. Refer to the service manual.

NOTES

Install the primary bearing first using appropriate service manual and WHEEL BEARING REMOVER/INSTALLER.

The machined grooves in the hub face indicate the primary bearing side.

4. Install rear wheel (1), stock axle, and stock spacers to motorcycle. Refer to the service manual.

MAINTENANCE AND CLEANING

NOTE

This wheel assembly includes plugs that have been installed in the openings between the brake disc mounting holes on one side of the wheel. Missing or damaged plugs can be replaced using the Wheel Plug Kit 41966-07.

Chrome parts must be maintained regularly so they keep their original shine and luster.

- Clean heavily-soiled wheel surfaces using Harley-Davidson Wheel and Tire Cleaner, applied with Harley Wheel and Spoke Brush.
- 2. Thoroughly clean chrome with a good quality chrome cleaner, such as Harley Bright Chrome Cleaner.
- 3. After cleaning and polishing, seal the finish with a good quality sealer, such as Harley Glaze Polish and Sealant.

-J04062 1 of 6

SERVICE PARTS

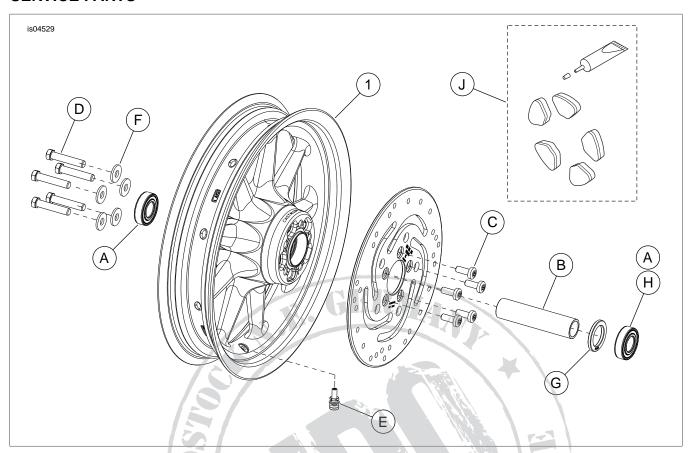


Figure 1. Service Parts: Rear Nine-Spoke Wheels (16 Inch Shown)

Table 1. Service Parts Table

Kit	Installation Kit	Item	Description (Quantity)	Part Number	
41883-07	*	1	Wheel	Not Sold Separately	
		J	Plug Service Kit	41966-07	
2003-2007 FLST, FLSTN and	43854-08	Α	Bearing (2)	9267	
FLSTC; 2003-2006 FLSTF (except FLSTFSE2); 2003-2005	16x3 inch rear wheel	В	Sleeve, bearing spacer	Not Sold Separately 41966-07 9267 43608-00 43567-92 3737A 3109 43206-01 6516HW provided with this 43618-06 43618-07	
FXST, FXSTB and FXSTS		Е	Disc screw (5)	43567-92	
		D	Sprocket screw (5) (2006 and earlier models)	3737A	
			Sprocket screw (5) (2007 models)	3109	
		Е	Valve stem assembly (long)	43206-01 6516HW	
		F	Washer (5) (2006 and earlier models)		
		NOTE: Discard the following components which are provided with this installation kit, but are not required for this fitment.			
		Sleeve,	bearing spacer	41966-07 9267 43608-00 43567-92 3737A 3109 43206-01 6516HW provided with this	
			Sleeve, bearing spacer		43618-07
		Sprocke	t screw (5)	3899	
		Valve st	em assembly (short)	43157-83A	

-J04062 2 of 6

Table 2. Service Parts Table

Kit	Installation Kit	Item	Description (Quantity)	Part Number	
41889-07		1	Wheel	Not Sold Separately	
		J	Plug Service Kit	41966-07	
2000-2005 Dyna; 2000-2004	43854-08 16x3 inch rear wheel	Α	Bearing (2)	9267	
XL; 2000-2002 Softail (except FXSTD); 2000-2001 FLT		В	Sleeve, bearing spacer	43608-00	
FASID), 2000-2001 FLI		С	Disc screw (5)	43567-92	
		D	Sprocket screw (5) (Dyna and Softail models)	3737A	
			Sprocket screw (5) (XL and FLT models)	3899	
		Е	Valve stem assembly (short)	43157-83A	
		F	Washer (5)	6516HW	
		NOTE: Discard the following components which are provided with this installation kit, but are not required for this fitment.			
		Sleeve, l	pearing spacer	43618-06	
	N.E.	Sleeve, bearing spacer		43618-07	
		Sprocket	screw (5)	3109	
		Valve ste	em assembly (long)	43206-01	
2002-2007 Touring;	43861-08 16x3 inch rear wheel	Α	Bearing (2)	9247	
2005-2007 XL		В	Sleeve, bearing spacer	43517-00	
		C	Disc screw (5)	43567-92	
ROSZ		D	Sprocket screw (5) (2004-2006 FLT models)	3737A	
			Sprocket screw (5) (2007 FLT models)	3109	
			Sprocket screw (5) (XL and 2000-2003 FLT models)	3899	
		E	Valve stem assembly (short)	43157-83A	
		F	Washer (5) (XL and 2006 and earlier FLT models)	6516HW	
			biscard the following components which are not kit, but are not required for this fitment.	provided with this	
		Sleeve, bearing spacer		43704-01	
		Sprocket	t bolt (5)	3873	
		Sprocke	t bolt (5)	40439-01	
		Sprocket	washer (5)	7039	
		TORX® bolt (5)		4552	
		Valve ste	em assembly (long)	43206-01	

-J04062 3 of 6

Table 2. Service Parts Table

Kit	Installation Kit	Item	Description (Quantity)	Part Number	
2008 Touring (Non-ABS); 2008 and later XL	43878-08	Α	Bearing (2)	9276	
	16x3 inch rear wheel	В	Sleeve, bearing spacer	41900-08	
		С	Disc screw (5)	43567-92	
		D	Sprocket screw (5) (Touring models)	3814	
			Sprocket screw (5) (XL models)	3899	
		Е	Valve stem assembly (short)	43157-83A	
		F	Washer (5) (XL models)	6516HW	
		G	Shim, bearing (install under primary bearing)	43904-08	
		NOTE: Discard the following components which are provided with this installation kit, but are not required for this fitment.			
		Sleeve, bearing spacer		41696-08	
		Sprocket screw (5)		3109	
		Valve ste	em assembly (long)	43206-01	
2008 Touring (ABS)	41453-08A	Α	Bearing	9276	
	16x3 inch rear wheel	В	Sleeve, bearing spacer	41900-08	
		С	Disc screw (5)	43567-92	
		D	Sprocket screw (5)	3814	
		Е	Valve stem assembly (short)	43157-83A	
		G	Shim, bearing (install under primary bearing)	43904-08	
		ч	Bearing, ABS (red side must face inward)	9252	
		NOTE: Discard the following components which are provided with this installation kit, but are not required for this fitment.			
		Shim, bearing		41447-08	
		Sleeve, bearing spacer		43704-08	
	1 7 1	Sleeve, bearing spacer		41349-07	
		TORX bolt (5)		4552	
		Valve stem assembly (long)		43206-01	
		Washer ((5)	7039	

Table 3. Service Parts Table

Kit	Installation Kit	Item	Description (Quantity)	Part Number
40789-08		1	Wheel	Not Sold Separately
		J	Plug Service Kit	41966-07

-J04062 4 of 6

Table 3. Service Parts Table

Kit	Installation Kit	Item	Description (Quantity)	Part Number		
2008 FLSTN and FLSTC	43878-08 16x3 inch rear wheel	Α	Bearing (2)	9276		
		В	Sleeve, bearing spacer	41696-08		
		С	Disc screw (5)	43567-92		
		D	Sprocket screw (5)	3109		
		Е	Valve stem assembly (long)	43206-01		
		NOTE: Discard the following components which are provided with this installation kit, but are not required for this fitment.				
		Shim, bea	aring	43904-08		
		Sleeve, bearing spacer		41900-08		
		Sprocket screw (5)		3814		
		Sprocket screw (5)		3899		
		Valve ster	m assembly (short)	43157-83A		
		Washer (5) 6516HW				
Table 4. Service Parts Table						

Kit	Installation Kit	Item	Description (Quantity)	Part Number			
41889-09		701	Wheel	Not Sold Separately			
		J	Plug Service Kit	41966-07			
2009 and later Touring (Non-	41456-08A	Α	Bearing (2)	9276			
ABS)	16x5 inch rear wheel	В	Sleeve, bearing spacer	41349-07			
		С	Disc screw (5)	43567-92			
		E	Valve stem assembly (short)	43157-83A			
		NOTE: Discard the following components which are provided with this installation kit, but are not required for this fitment.					
		Shim, bearing		41447-08			
		Sleeve, b	leeve, bearing spacer 41358-08				
		Sleeve, b	earing spacer	43704-08			
		Sprocket	screw (5)	3109			
		TORX® b	olt (5)	4552			
		Washer		7039			
		Valve ste	43206-01				

-J04062 5 of 6

Table 4. Service Parts Table

Kit	Installation Kit	Item	Description (Quantity)	Part Number	
2009 and later Touring (ABS)	41453-08A	А	Bearing	9276	
	16x5 inch rear wheel	В	Sleeve, bearing spacer	41349-07	
		C Disc screw (5)	43567-92		
		Е	Valve stem assembly (long)	43206-01	
	in S S S S S T	Н	Bearing, ABS (red side must face inward)	9252	
		NOTE: Discard the following components which are provided with this installation kit, but are not required for this fitment.			
		Shim, bearing		41447-08	
		Shim, bear	ring	43904-08	
		Sleeve, be	aring spacer	43704-08	
		Sleeve, bearing spacer		41900-08	
		Sprocket screw (5)		7039	
		Sprocket screw (5)		3814	
		TORX® bo	lt (5)	4552	
		Valve stem	n assembly (short)	43157-83A	



-J04062 6 of 6