

INSTRUCTIONS

-J05776

2014-09-04

LOWER BELT GUARD

GENERAL

Kit Number

57100226, 57100297

Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

Kit Contents

There are no Service Parts available with this kit.

INSTALLATION

WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 1. Refer to the owner's manual and follow the instructions given to remove the main fuse.
- 2. See Figure 1. Remove the three screws (3) and retain for installation. Remove and discard the lower belt guard.
- Align the slotted holes in the new belt guard with the holes in the fork. Insert the three saved screws and adjust to desired position. Tighten the screws to 4.1–6.8 N⋅m (36–60 in-lbs).
- 4. Verify that the Ignition/Light Key Switch is turned to OFF. Refer to the owner's manual to install main fuse.

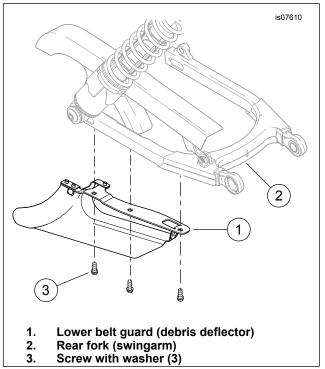


Figure 1. Lower Belt Guard Installation