



# INSTRUCTIONS

-J00711

REV. 6-26-03

Kit Numbers 59333-97, 59334-97, 59002-98, and 59052-98

## FRONT AND REAR FENDER TIP TRIM

### General

This kit is designed for installation on 1980 and later FLT®, FLHR®, FLSTC® and FLSTN® models. (Part Number 59333-97 replaces front fender tip lamp assembly and Part Number 59334-97 replaces rear fender tip lamp assembly) **NOTE:** Will not fit FLTR®, FLSTS® or FLHRS®).

The part numbers and their finishes are as follows:

|               |          |                     |
|---------------|----------|---------------------|
| Front fender: | 59333-97 | 2-tone gold, V-Wing |
| Rear fender:  | 59334-97 | 2-tone gold, V-Wing |
| Front fender: | 59002-98 | H-D Classic         |
| Rear fender:  | 59052-98 | H-D Classic         |

### Kit Contents

| QTY | DESCRIPTION                                     |
|-----|---|
| 1   | Front or rear, as listed above, fender tip trim |
| 2   | Locknuts, M4 - 0.7 (kits 59333-97 and 59334-97) |
| 2   | Panhead screws (kit 59002-98 and 59052-98)      |

#### NOTE

There are no Service Parts for these kits.

### Installation

#### GENERAL

The original equipment (stock) fender tip lamp assemblies must be removed and the wire(s) must be unplugged or removed as specified in the following instructions.

#### FRONT FENDER TIP

##### REMOVAL OF STOCK FRONT FENDER TIP LAMP ON 1994 AND LATER FLT MODELS

1. Refer to FLT Service Manual that covers motorcycle being worked on. Remove headlamp assembly with housing.
2. Locate the 3-place connector [32 in wiring diagram] through which 12vdc and electrical ground are connected to the fender tip lamp assembly. The connector locations are as follows:

|             |  |
|-------------|--|
| FLTC Ultra: | Under fuse and circuit breaker block     |
| FLHT/C/C-U: | On bottom of left outer fairing bracket  |
| FLHR:       | On left front above air suspension valve |

#### NOTE

Before disassembling the connector in the next step, refer to the applicable wiring diagram and check wire colors and connections to assure that connector [32] has been located.

3. Refer to the "DEUTSCH ELECTRICAL CONNECTOR" section in the FLT Service Manual and remove the leads, connected to the fender tip lamp, from the socket half, connector [32B].

4. Insert a small screwdriver blade in rectangular slot at top center of fender tip lamp lens and gently pry lens from lamp.
5. Remove two screws and nuts that fasten fender tip lamp assembly to front fender. Gently remove the lamp assembly taking care not to damage wires connected to lamp assembly.
6. Reach under left side of fender and gently pull wires through rear hole in left side of fender and then through clips on left side of fender and finally through front hole and out of trim strip.

##### REMOVAL OF STOCK FRONT FENDER TIP LAMP ON 1993 AND EARLIER FLT MODELS, FLSTC & FLSTN

1. Insert a small screwdriver blade in rectangular slot at top center of fender tip lamp lens and gently pry lens from lamp.
2. Remove two screws and nuts that fasten fender tip lamp assembly to front fender. Gently remove the lamp assembly taking care not to damage wire connected to lamp assembly.
3. Unplug wire connector located about 3 in. from lamp assembly. Cover the socket half of connector (connected to motorcycle wiring) with electrical tape.

##### INSTALLING FRONT FENDER TIP TRIM FROM KIT-ALL MODELS

1. Position fender tip trim over holes in fender and guide outer ends of fender tip trim into trim strips on sides of fender.
2. Place fender tip trim in position and secure with nuts or screws included in kit. Tighten hardware to 6 in-lbs.

#### REAR FENDER TIP

##### REMOVAL OF STOCK REAR FENDER TIP LAMP ON ALL MODELS

Follow steps 1 through 3 given above for "1993 AND EARLIER FLT MODELS, FLSTC & FLSTN"

##### INSTALLING REAR FENDER TIP TRIM FROM KIT-ALL MODELS

1. Position fender tip trim over holes in rear fender.
2. Place fender tip trim in position and secure with nuts or screws included in kit. Tighten hardware to 6 in-lbs.