



INSTRUCTIONS

-J00335

REV.1-1-96

Kit Number 59213-96

FLHT CHROME WINDSHIELD MOLDING KIT

General

This kit is designed for 1996 and later FLHT model motorcycles.

Kit contents:

QTY	DESCRIPTION	PART NO.
3	Spacers	3673
1	Windshield molding	Not sold
3	Screws, Phillips, oval head, 1/4-20 x 1/2 in.	94539-96

NOTE

Part numbers for service parts are listed above.

Installation

1. Insert three screws from kit into countersunk holes in molding.
2. Slip rubber spacers from kit onto screws with countersunk end facing the molding.

CAUTION

Be careful that windshield does not fall after screws are removed in step 3.

3. With a T27 Torx driver remove the three screws and washers at the bottom of the windshield. DO NOT REMOVE OUTER FAIRING.
4. Align the windshield molding with the three mounting holes and thread screws into threaded inserts in inner fairing.

CAUTION

In the following step, don't exceed 13 in-lbs to avoid damage to the inner fairing.

5. Check that molding is aligned with top of outer fairing and tighten screws to 10-13 in-lbs.



INSTRUCTIONS

-J00335

REV.1-1-96

Kit Number 59213-96

FLHT CHROME WINDSHIELD MOLDING KIT

General

This kit is designed for 1996 and later FLHT model motorcycles.

Kit contents:

QTY	DESCRIPTION	PART NO.
3	Spacers	3673
1	Windshield molding	Not sold
3	Screws, Phillips, oval head, 1/4-20 x 1/2 in.	94539-96

NOTE

Part numbers for service parts are listed above.

Installation

1. Insert three screws from kit into countersunk holes in molding.
2. Slip rubber spacers from kit onto screws with countersunk end facing the molding.

CAUTION

Be careful that windshield does not fall after screws are removed in step 3.

3. With a T27 Torx driver remove the three screws and washers at the bottom of the windshield. DO NOT REMOVE OUTER FAIRING.
4. Align the windshield molding with the three mounting holes and thread screws into threaded inserts in inner fairing.

CAUTION

In the following step, don't exceed 13 in-lbs to avoid damage to the inner fairing.

5. Check that molding is aligned with top of outer fairing and tighten screws to 10-13 in-lbs.