






PULSATING BRAKE LIGHT CONTROLLER

908

THANK YOU FOR CHOOSING KÜRYAKYN!

PROTECT YOURSELF AND OTHERS FROM POSSIBLE INJURY AND PROPERTY DAMAGE OR LOSS. PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS, AND NOTICES REGARDING THE INSTALLATION, USE, AND CARE OF THIS PRODUCT.


 WARNING	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
 CAUTION	This indication alerts you to the fact that ignoring the contents described herein can result in minor or moderate potential injury.
 NOTICE	This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Pulsating Brake Light Controller
- 1 Installation Instructions

TOOLS SUGGESTED:

Small flat blade screwdriver, wire cutters, and test light

 **These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future reference.**

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

STEP 2 Before installing the controller, be sure the maximum load will not exceed 100 watts. Check your service manual for total brake light wattage; also remember to include the wattage of any aftermarket brake lights when determining the total brake light wattage.

NOTE: **STEP 2 through STEP 4 refer specifically to 1800 models. For 1500 models, refer to your factory service manual.**

STEP 3 Remove the backrest and seat; refer to your factory service manual for detailed instructions.

STEP 4 Locate the brake light wiring harness. Turn IGN ON and activate the brake lights. Locate the connector with the brake-light wire by disconnecting and reconnecting the wiring connectors until the brake light goes out.

STEP 5 Locate the brake light power wire in the connector; refer to your factory service manual for the correct terminal number or wire color.

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Küryakyn and a customer.
- Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.

• Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Küryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.

• Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Küryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Küryakyn
454 County Road V V
Somerset, WI 54025-9031
Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.






STEP 6 Refer to **PIC 1**. Clip the wire apart about four inches away from the connector. Strip both ends of the brake wire.

STEP 7 Refer to **PIC 1 and FIG 1**. Insert the wire end from the connector into the "brake input" terminal of the brake light controller. Tighten the terminal screw against the wire.

STEP 8 Refer to **PIC 1 and FIG 1**. Insert the wire end from the taillight into the "output to bulbs" terminal of the brake light controller. Tighten the terminal screw against the wire.

STEP 9 Refer to **PIC.2 and FIG 2**. Connect a ground wire from the ground terminal on the controller to the chassis.

STEP 10 Check the brake lights for proper operation. When the brake is applied, the brake lights should flash for approximately four seconds then illuminate steady.

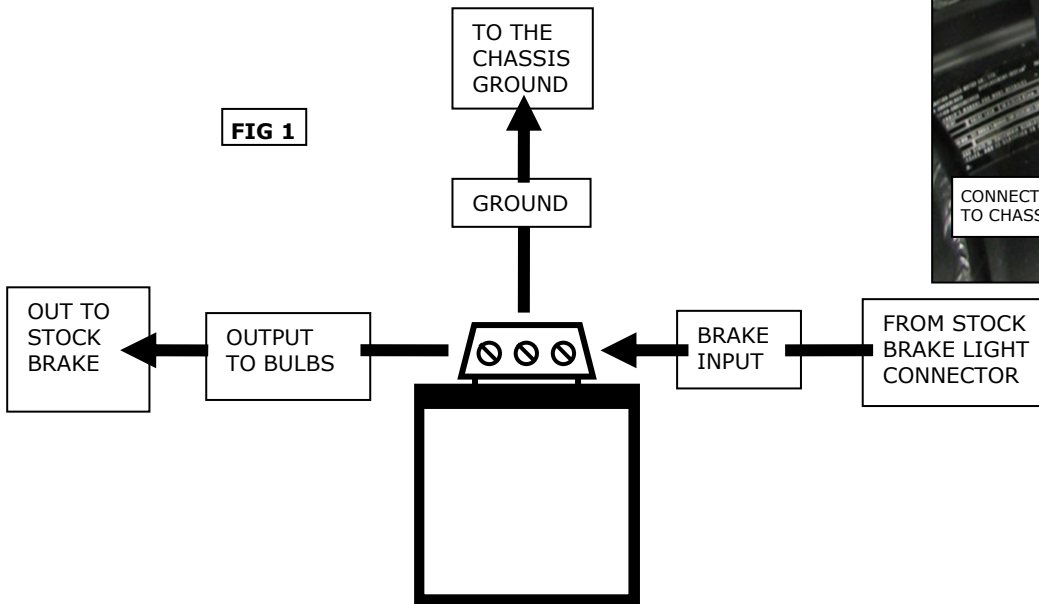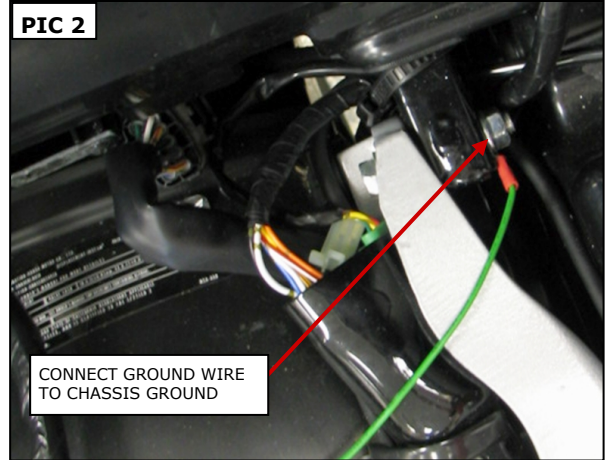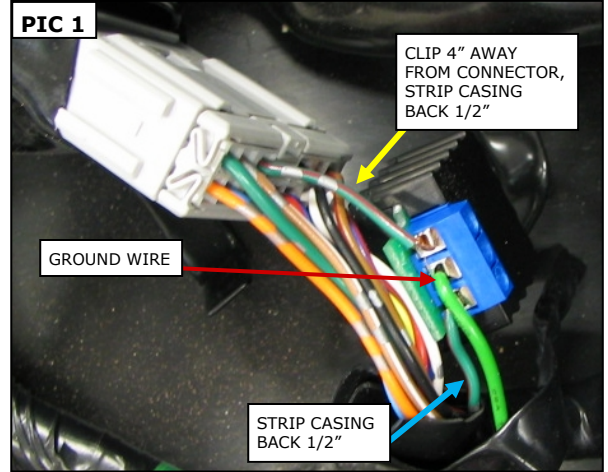

WARNING

VISIBILITY IS A **MAJOR CONCERN** FOR MOTORCYCLISTS. A LIGHT MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY. ENSURE PROPER LIGHT OPERATION **BEFORE RIDING** THE MOTORCYCLE.

CAUTION

Reduce the risk of sparks and unintentional engine start-up; disconnect the negative battery cable.

NOTICE

Use Cable Ties to secure the wiring away from moving parts, pinch points, or extreme heat. Kuryakyn will not provide warranty coverage on any electrical component that fails due to pinched, crimped, broken, abraded, melted, or frayed wires.

NOTICE

It is the end user's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not provide warranty coverage on products or components lost or damaged due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

Ride On!