



10" DARK SMOKE WINDSHIELD

1263

THANK YOU FOR CHOOSING KÜRYAKYN!

PROTECT YOURSELF AND OTHERS FROM POSSIBLE INJURY AND PROPERTY DAMAGE OR LOSS. PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS, AND NOTICES REGARDING THE INSTALLATION, USE, AND CARE OF THIS PRODUCT.

NOTICE This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 10" Dark Smoke Windshield
- 1 Hardware Kit containing:
 - 4 Windshield Spacers
- 1 Installation Instructions

YOU WILL ALSO NEED:

Warm, soapy water and a clean rag, Metric hex wrenches, socket set and a ratchet



NOTICE These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future reference.

STEP 1 Read and understand all **STEPS** in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn **IGN OFF**.

STEP 2 Use warm, soapy water and a clean rag to remove all dirt and debris from the installation area; allow the area to dry completely.

STEP 3 **ALL MODELS EXCEPT CROSS COUNTRY TOUR:** Remove the four (4) screws securing the existing windshield; save the screws for later use.

CROSS COUNTRY TOUR: Refer to **PIC 1,2, and 3**. Remove the six (6) screws securing the windshield; save four (4) of them for later. Remove the hex head screws and t-nuts securing the windshield support brackets; remove the brackets; set them aside, they will not be reused.

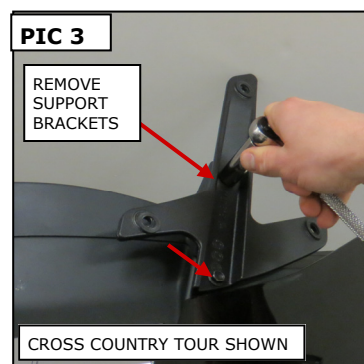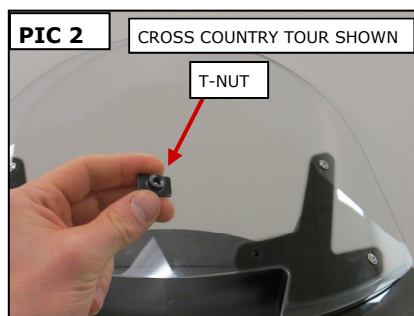

CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG


For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn 454 County Road V V Somerset, WI 54025-9031 Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.

PROOF OF PURCHASE

STEP 4 Refer to **PIC 4**. Place the included Windshield Spacers over the screws; set them within arm's reach of the work area.

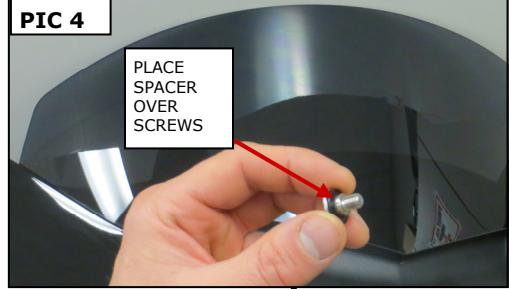

STEP 5 Remove any remaining dirt and debris from the installation area with a damp rag. Ensure the installation area is clean and dry.

STEP 6 Slide the new windshield in between the outer fairing and dash as shown in **PIC 5**; align the holes.



STEP 7 Secure the windshield with the four screws and Spacers; ensure that the Spacers remains in place and the screw shoulders fit all the way in the hole as they are tightened.

Begin the four screws in their threads before tightening them all the way.

TIPS FOR PROPER CARE:

Remove dirt and debris from the new windshield with warm, soapy water and a CLEAN rag.

Rinse thoroughly with CLEAN water and dry immediately to prevent water spots.

Use of ammonia based cleaning products is acceptable.

ONLY use cleaning/care products formulated for hard coated polycarbonate surfaces.

Do not use abrasives, squeegees, or other cleaning products that could scratch the surface.

NOTICE

It is the end user's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not provide warranty coverage on products or components lost or damaged due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.