



### ZOMBIE™ WINDSHIELD FOR VICTORY CROSS COUNTRY

1265

#### Thank You For Choosing Kuryakyn!

Protect yourself and others from potential injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

#### NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

#### ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 10" Dark Smoke Windshield
- 1 Hardware Kit containing:
  - 4 Windshield Spacers
- 1 Installation Instructions

#### YOU WILL ALSO NEED:

Warm, soapy water and a clean rag, Metric hex wrenches, socket set and a ratchet

#### NOTICE



These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future use.

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn **IGN OFF**.

**STEP 2** Use warm, soapy water and a clean rag to remove all dirt and debris from the installation area; allow the area to dry completely.


**STEP 3** **ALL MODELS EXCEPT CROSS COUNTRY TOUR:** Remove the four (4) screws securing the existing windshield; save the screws for later use.

**CROSS COUNTRY TOUR:** Refer to **PIC 1, 2, and 3**. Remove the six (6) screws securing the windshield; save four (4) of them for later. Remove the hex head screws and t-nuts securing the windshield support brackets; remove the brackets; set them aside, they will not be reused.

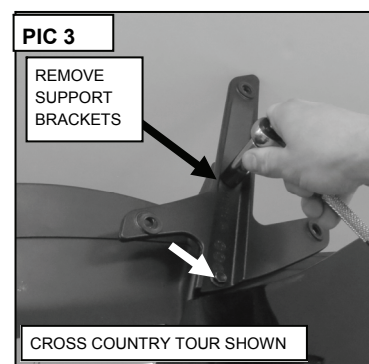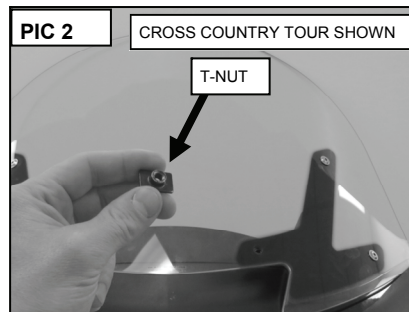



**STEP 4** Refer to **PIC 4**. Place the included Windshield Spacers over the screws; set them within arm's reach of the work area.

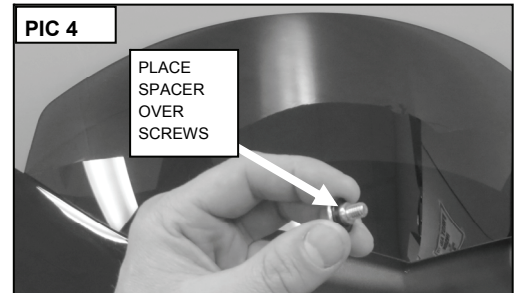

**STEP 5** Remove any remaining dirt and debris from the installation area with a damp rag. Ensure the installation area is clean and dry.

**STEP 6** Slide the new windshield in between the outer fairing and dash as shown in **PIC 5**; align the holes.



**STEP 7** Secure the windshield with the four screws and Spacers; ensure that the Spacers remain in place and the screw shoulders fit all the way in the hole as they are tightened.

Begin the four screws in their threads before tightening them all the way.

### TIPS FOR PROPER CARE:

**Remove dirt and debris from the new windshield with warm, soapy water and a CLEAN rag.**

**Rinse thoroughly with CLEAN water and dry immediately to prevent water spots.**

**Use of ammonia based cleaning products is acceptable.**

**ONLY use cleaning/care products formulated for hard coated polycarbonate surfaces.**

**Do not use abrasives, squeegees, or other cleaning products that could scratch the surface.**

### NOTICE

It is the end user's responsibility to ensure that all fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not provide warranty coverage on products or components lost or damaged due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

#### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials & workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

1. Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
2. The product must be properly installed, maintained & operated under normal conditions.
3. Kuryakyn shall not be liable for any consequential & incidental damages, including labor & paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn & a customer.
4. Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
5. Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'s contained in components of Kuryakyn products will be warranted for defects in materials & workmanship for 3 years from the date of purchase whereas all other components shall be warranted for one (1) year.
6. Merchandise purchased directly from Internet auction sites or any other third party seller is considered sold as is & shall not carry a Kuryakyn warranty. All warranty claims must be directed to the original seller. If unsure please contact the seller to verify they are an authorized Kuryakyn retailer.

#### RETURN POLICY

Merchandise determined to be defective may be returned up to one year from the date of purchase. Returns must be processed through original seller. Returned merchandise for any other reason other than warranty claims must be in like new condition & subject to a 20% restocking fee. All returns are subject to inspection for determination of full or partial credit. Any returned part that shows evidence of being used or installed contrary to manufacturer's instructions, &/or subjected to improper handling, packaging or return shipping by the customer, will not be eligible for exchange, refund or warranty consideration. All returned electrical items will be inspected & tested. If electrical item is deemed functional, no credit will be issued & item will be returned. All sales are final on discontinued or closeout merchandise.