



WINDSHIELD MOUNTED MIRRORS

1453

PARTS INCLUDED

- 1 Right Side Fairing Bar
- 1 Left Side Fairing Bar
- 1 Right Side Ellipse Mirror
- 1 Left Side Ellipse Mirror
- 1 Hardware Kit Containing:
 - 1 Center Fairing Bar
 - 3 1/4"-20 x 3/4" Button Socket Cap Screws
 - 3 Snap Caps
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

NOTICE

IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.

TOOLS SUGGESTED

Set of Hex Wrenches, Torx Drivers, Bits or Sockets, Set of Combination Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.


NOTE: Pictures shown are of chrome parts. Installation of Black parts will be the same.

STEP 2

Remove the existing mirrors. Remove the three Torx screws securing the windscreen to the fairing; set them aside, they will not be used again.
PIC 1

NOTICE

Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.

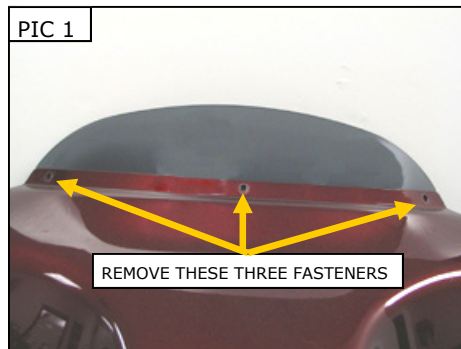

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



NOTE: Left and right are sitting on the bike.

STEP 3 Locate the Left Side Fairing Bar. PIC 2

STEP 4 Determine the Left from the Right Ellipse mirror head. FIG 1

STEP 5 Thread the mirror-mounting stud on the back of the Left Ellipse mirror head into the fairing bar. Tighten the mirror-mounting stud tight against the fairing bar with an open-end wrench.

STEP 6 Hold the Left Side Fairing Bar assembly in place and secure it to the fairing with one of the included 1/4"-20 X 3/4" button socket cap screws. Leave the screw finger tight for now. PIC 4

NOTE: Apply a small amount of blue thread locker to the screws that secure the bars to the fairing.

STEP 7 Locate the Right Side Fairing Bar. PIC 2

STEP 8 Thread the mirror-mounting stud on the back of the Right Ellipse mirror head into the fairing bar. Tighten the mirror-mounting stud tight against the fairing bar with an open-end wrench.



STEP 9 Hold the Right Side Fairing Bar assembly in place and secure it to the fairing with one of the included 1/4"-20 X 3/4" button socket cap screw. Leave the screw finger tight for now. PIC 4

STEP 10 Install the Center Fairing Bar as shown in PIC 4, with one of the included 1/4"-20 X 3/4" button socket cap screws; leave finger tight for now.

STEP 11 Align all three bars and tighten the 1/4"-20 X 3/4" button socket cap screws.

STEP 12 Install the three included Snap Caps over the screws in STEP 11. The small drain hole should be on the bottom when installed.

STEP 13 Adjust the mirrors for proper view before riding the motorcycle.

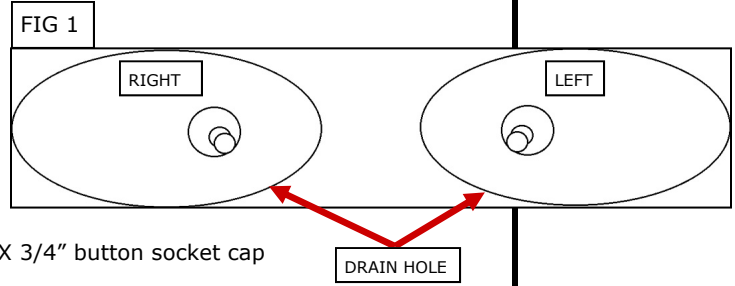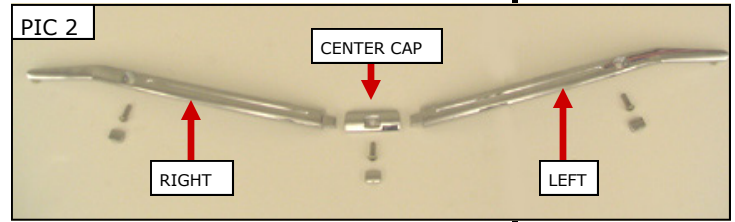

NOTICE

It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

-cont.-

ADJUST SWIVEL BALL TENSION

STEP 14 Remove the mirror head from the stem using an open end wrench on the flat on the end of the ball stud. Using the included hex wrench, remove the two fasteners from the back of the mirror cover; PIC 5 carefully remove the front bezel and mirror glass.



NOTE: Make sure the hex wrench is fully seated in the bolt before you try to loosen the two bolts. Improper fitting wrenches will strip the head on these bolts!

STEP 15 Turn the tension screws inside the mirror housing (PIC 6) to increase or decrease the tension on the ball joint. Turn the screws clockwise to increase tension; turn the screws counter-clockwise to decrease tension. Place a drop of light lube (WD-40) on ball. PIC 6

STEP 16 Replace the mirror glass and bezel to the back cover, secure with the two fasteners removed in Step 14.

STEP 17 Reinstall the mirror head to the stem.

STEP 18 Tighten all fasteners securely.

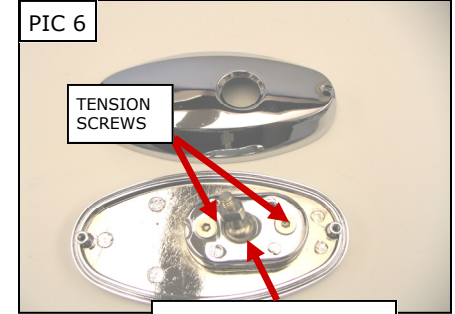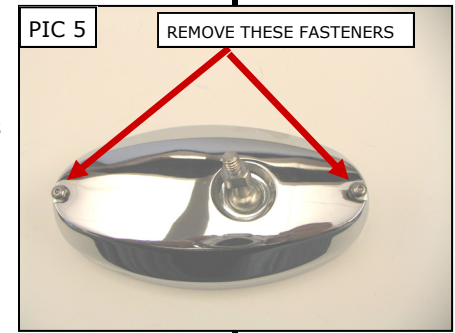

NOTICE

It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.