

# INSTALLATION

### **GROOVED SADDLEBAG LATCH ACCENTS** 1599

FITS: '93-UP DRESSERS, ROAD KINGS, ROAD GLIDES, AND STREET GLIDES WITH HARD BAGS

#### PARTS INCLUDED

- 1 Right Latch Cover
- 1 Left Latch Cover
- 1 Hardware Kit including:
  - 6 8-32 x 5/16" Button Head Cap Screws (BHCS)
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

#### THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

#### **TOOLS SUGGESTED**

Set of hex wrenches, set of Torx drivers, and set of combination wrenches.

## STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

#### PROCEDURE

**STEP 1** Park the motorcycle on a hard, level surface & turn off the ignition.

#### **RIGHT SIDE PROCEDURE**

**STEP 2** Open the saddlebag lid, and remove the two Torx head screws that secure the tether strap to the lid shown in <u>PIC. 1</u>. Set these screws aside, they will be re-used.

CAUTION! Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.

**STEP 3** Note the orientation of the lock and remove the screws that secure it to the latch assembly, remove the lock and screws, set them aside; they will be re-installed later. (See <u>PIC. 2</u>)

**STEP 4** Remove the nut shown in <u>PIC. 2</u>, this will not be used again.

**STEP 5** Close the lid and hold onto the faceplate while removing the two Torx screws shown in <u>PIC. 3</u>. These screws will not be used again.

-cont.-





#### **CUSTOMER SERVICE**

877.370.3604 (toll free)

#### INSTALLATION QUESTIONS

techsupport@kuryakyn.com or call 715.247.2983

#### LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

 Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).

· The product must be properly installed, maintained and operated under normal conditions.

• Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.

 Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breech of contract or duty between Küryakyn and a customer.

> Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.

 Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Küryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.

 Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

#### ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today-select the "CATALOGS" icon. Each Küryakyn<sup>®</sup> product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Küryakyn<sup>®</sup> products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.

kuryakyn.com

**STEP 6** Place the right (left) latch cover on the latch assembly, lining up the holes; install two of the included 8-32 x 5/16" BHCS screws through the holes on the outside of the latch cover, do not fully tighten yet. (See <u>PIC. 4</u>)


**STEP 7** Open the lid and install a 8-32 x 5/16'' BHCS screw from the hardware kit in the front hole (shown in <u>PIC. 2</u>) do not fully tighten the screw at this point.

**STEP 8** Reinstall the lock, making sure to install it in the correct orientation. Secure with the two screws that were removed in STEP 3.

**STEP 9** Secure the tether strap to the lid, using the two screws that were removed in STEP 2.

- **STEP 10** Fully tighten the screws from STEP 6, STEP 7, and STEP 8.
- **STEP 11** Check to make sure that the lid, latch and lock all function properly.
- **STEP 12** Repeat STEP 2 through STEP 11 for the left side.

## Ride On!

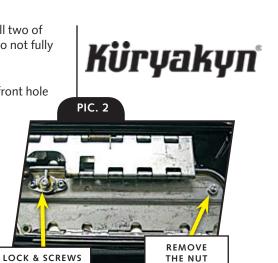

(FRONT HOLE)





PAGE

SADDLEBAG LATCH ACCENTS INSTALLATION