



INSTRUCTIONS

-J05659

2012-11-06

CHROME FRONT ENGINE MOUNT STABILIZER LINK

GENERAL

Kit Number

16400020

Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

Additional Parts Required

Loctite® 243 Threadlocker and Sealant (99642-97).

Kit Contents


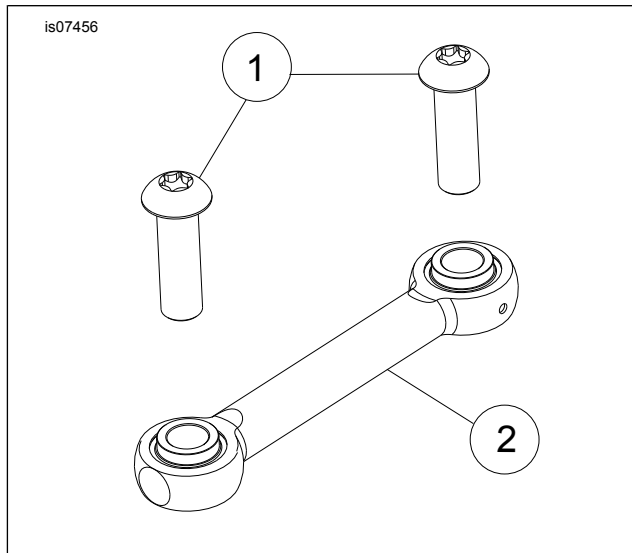


Figure 1. Service Parts

Table 1. Service Parts

Item	Description (Quantity)	Part Number
1	TORX® screw (2) (chrome)	94606-98
2	Stabilizer link (chrome)	Not Sold Separately

INSTALLATION

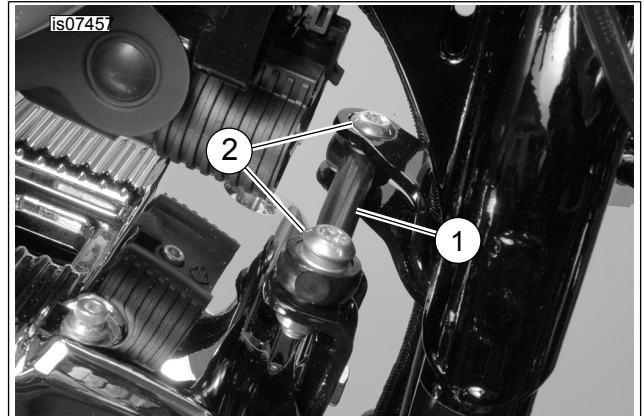

1. Stabilizer link
2. TORX Button head screw

Figure 2. Service Parts for Stabilizer Link

1. Remove the two screws and stabilizer link.
2. Clean the threads of the bracket. Apply Loctite 243 to the screw threads from the kit.
3. Install chrome stabilizer link (2) and screws (1) from kit. Tighten screws to 33.8–47.45 N·m (25–35 ft-lbs).