



# INSTRUCTIONS

-J01882

REV. 2-22-2002

Kit Number 33920-00

## CHROME FORWARD CONTROL BRACKET KIT

### General

This kit is designed to fit all 2000 and later FX Softail models.

See *Service Parts illustration* for kit contents.

### Installation

#### WARNING

A Service Manual is needed to install this kit. The rider's safety depends upon the correct installation of this kit. If the procedure is not within your capabilities or you do not have the correct tools, have your Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury.

#### NOTE

A Service Manual is available from your Harley-Davidson dealer.

#### NOTE

Save all hardware. Clean for reuse.

### SHIFTER SIDE, LEFT

1. Remove footpeg.
2. Remove jiffy stand, shifter linkage and bracket per applicable Service Manual instructions, retaining hardware.

3. Push bushings in to depth similar to original bracket.
4. Install new bracket to frame with jiffy stand and shifter per applicable Service Manual instructions.
5. Reinstall footpeg. Torque screws to 10-16 ft-lbs.

### BRAKE SIDE, RIGHT

1. Remove master cylinder per applicable Service Manual instructions.
  2. Remove brake pedal and footpeg.
  3. Remove bracket from frame.
  4. Install new bracket to frame. Use Loctite® Threadlocker 243 (blue) on bolt. Torque bolt to 25-30 ft-lbs.
  5. Reinstall footpeg. Torque screws to 10-16 ft-lbs.
  6. Reinstall master cylinder and bleed rear brakes per applicable Service Manual instructions.
- (\*New banjo bolt gaskets are NOT supplied with this kit.)

#### WARNING

After completing bleeding the system, always test motorcycle brakes at low speed. If brakes are not operating properly, or braking efficiency is poor, testing at high speeds could result in death or serious injury.





## Service Parts

Part No. 33920-00

Date 2/02

### Chrome Forward Control Bracket Kit

i03389.eps

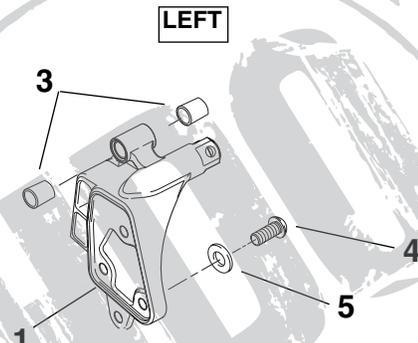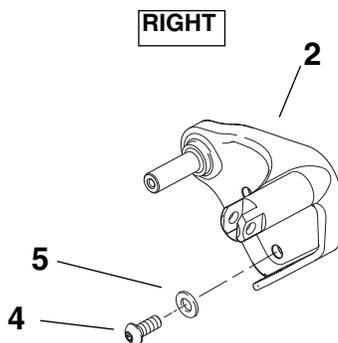

Item	Description	Part No.
1	Bracket, shift, chrome	33921-00
2	Bracket, brake lever and footrest	42646-00
3	Bearing, sleeve (2)	33708-94
4*	Bolt (2)	4163
5*	Washer (2)	6812

\*Items 4 and 5 not included in kit.