



# INSTALLATION

## LARGE UNIVERSAL ACCESSORY POUCH 4124

### PARTS INCLUDED

- 1 Large Universal Pouch Assembly
- 1 Bottom Foam Spacer
- 1 Thick Foam Pad
- 1 Hardware Kit Including:
  - 1 Thin Foam Pad
  - 1 8" x 1" Hook and Loop Strap
  - 4 #8 Flat Washers
  - 4 #8-32 Nylock Nuts
  - 4 #8-32 X 1/2" Button Socket Cap Screws
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

### THANK YOU FOR CHOOSING KÜRYAKYN!

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.**

<b>WARNING</b>	<b>THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.</b>
<b>NOTICE</b>	<b>This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.</b>
<b>CAUTION</b>	<b>This indication alerts you to the fact that ignoring the contents described herein can result in potential injury.</b>

**NOTICE**

**IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.**

### TOOLS SUGGESTED

Set of Hex Wrenches

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

**NOTICE**

**Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.**

**STEP 2** Test fit the pouch to the handlebars to decide the location where it will not interfere with any component on the motorcycle.

### CUSTOMER SERVICE

877.370.3604 (toll free)

### INSTALLATION QUESTIONS

techsupport@kuryakyn.com  
or call 715.247.2983

### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
  - The product must be properly installed, maintained and operated under normal conditions.
  - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
  - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.

- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.


kuryakyn.com



**STEP 3** Determine which mounting hardware better suits your application. The pouch comes with three different mounting options: A Rubber Bar Mount strap, a Hook and Loop strap and hardware to mount the Pouch to a Küryakyn Accessory mount or any other accessory mount using a 4 hole AMPS mounting system.

**NOTICE** Protect the clear window from damage, tools may scratch the window surface.


**STEP 4** Test fit the mobile device in the Large Accessory pouch. If all of the buttons on the device are not visible through the clear plastic front, you may need to install the included Bottom Foam Spacer. If needed, insert Foam Spacer width-wise as shown in PIC 1. This may be a tight fit, but it will fit all the way to the bottom of the Pouch.

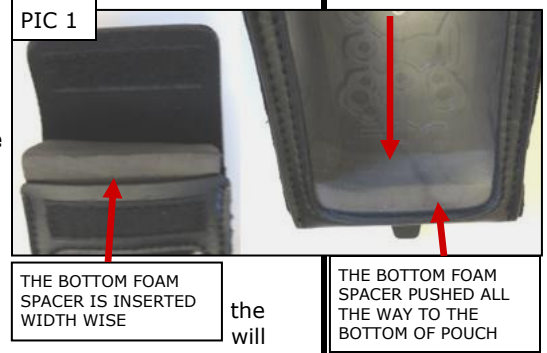


**POUCH WITH RUBBER BAR MOUNT ASSEMBLY**

**STEP 5** The accessory pouch comes assembled with the Rubber Bar Mount. This mount can be adjusted to a high or low position depending on your mounting location.

**STEP 6** To adjust the position, remove the three screws (inside the pouch) securing the Rubber Bar Mount. Be sure to keep the square nut and T-Clip for re-installation. PIC 2

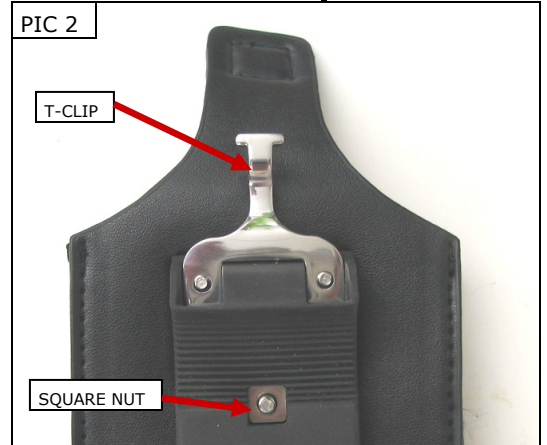

**STEP 7** The pouch and backing plate have two sets of holes drilled in them. PIC 3 Choose either the high or low mounting position and line up the holes with backing plate.

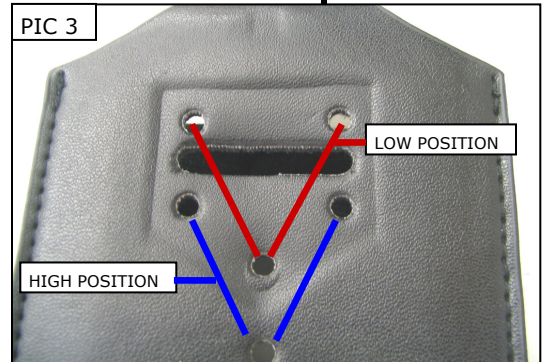

**STEP 8** Using the three screws removed in Step 6, insert one into each hole of the backing plate and into the holes in the pouch. Place the Rubber Bar Mount assembly (with square nut and T-Clip installed) over the three screws. Start by tightening the center screw and square nut; then the top two screws into the threaded T-Clip.

**NOTE:** Make sure that the T-Clip is installed as shown in PIC 4.

**STEP 9** Once you have all the screws tight, take the provided Thin or Thick foam pad and place it over the screw heads to protect anything that is in the pouch.



**STEP 10** Install the pouch by wrapping the rubber strap around the handlebar and hooking one of the holes in the rubber strap over the "T" hook. Pull the rubber strap to ensure the "T" hook is seated. PIC 5 Turn the handlebars lock to lock to check for clearance.

**WARNING** ENSURE THAT THERE IS CLEARANCE AT ALL POINTS WHEN THE HANDLEBARS ARE TURNED. INSUFFICIENT CLEARANCE MAY CAUSE DAMAGE TO THE MOTORCYCLE OR CAN CAUSE LOSS OF CONTROL THAT COULD RESULT IN SEVERE INJURY OR DEATH.


-cont.-

**NOTICE**

Küryakyn is not responsible for items that may be stolen or damaged in relation to the use of this product.


**NOTICE**

Ensure that the Mobile Device is secure in the Tech-Connect Holder. Küryakyn is not responsible for any Device that is stolen or damaged from use in this Holder or from the Holder not being properly secured to the motorcycle. It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

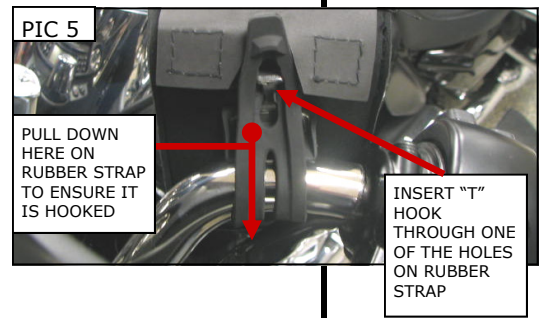

**NOTICE**

This Pouch is not waterproof. Remove the Mobile Device and stow during inclement weather. Küryakyn will not be responsible for any Mobile Device damaged when using this pouch.

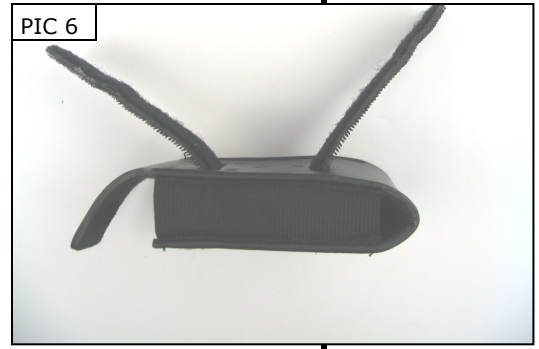

**NOTICE**

Motorcycling can be done in a harsh environment. Make sure your Mobile Device is appropriate for this application.

**POUCH WITH HOOK AND LOOP ASSEMBLY**

**STEP 11**

Take the pouch out of the package and remove the Rubber Bar Mount. Notice the mounting holes as well as the slots (the slots are used for the hook and loop strap).



**STEP 12**

Slide each end of the strap through the slots on the backside of the pouch. PIC 6

**STEP 13**

Place it over the desired mounting area and connect the ends to tighten. PIC 7

**STEP 14**

Once you have the Pouch mounted, take the provided Thin or Thick foam pad and place it in the Pouch between the plastic back and the mobile device to protect it.

**WARNING**

ENSURE THAT THERE IS CLEARANCE AT ALL POINTS WHEN THE HANDLEBARS ARE TURNED. INSUFFICIENT CLEARANCE MAY CAUSE DAMAGE TO THE MOTORCYCLE OR CAN CAUSE LOSS OF CONTROL THAT COULD RESULT IN SEVERE INJURY OR DEATH.

**NOTICE**

Küryakyn is not responsible for items that may be stolen or damaged in relation to the use of this product.

**NOTICE**

Ensure that the Mobile Device is secure in the Tech-Connect Holder. Küryakyn is not responsible for any Device that is stolen or damaged from use in this Holder or from the Holder not being properly secured to the motorcycle. It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

-cont.-

**NOTICE**

This Pouch is not waterproof. Remove the Mobile Device and stow during inclement weather. Küryakyn will not be responsible for any Mobile Device damaged when using this pouch.

**NOTICE**

Motorcycling can be done in a harsh environment. Make sure your Mobile Device is appropriate for this application.

**MOUNTING POUCH TO A KÜRYAKYN ACCESSORY MOUNT PLATE**

**STEP 15**

Remove the three screws (inside the pouch) securing the Rubber Bar Mount. Be sure to keep the square nut, screws, rubber strap and T-Clip for re-installation at a later date if desired. PIC 8



**STEP 16**

Line up the 4 AMPS mounting holes in the plastic back plate with the 4 AMPS mounting holes in the Pouch. Place one of the included #8-32 button socket cap screws through the backing plate through the Pouch, then, through the matching hole on the accessory mounting plate. Secure with one of the included #8 flat washers and #8 nylock nuts. Repeat for the other three holes.

**STEP 17**

Once you have all the screws tight, take the provided Thin or Thick foam pad and place it over the screw heads to protect anything that is in the pouch.

**STEP 18**

Tighten all hardware securely.

**WARNING**

ENSURE THAT THERE IS CLEARANCE AT ALL POINTS WHEN THE HANDLEBARS ARE TURNED. INSUFFICIENT CLEARANCE MAY CAUSE DAMAGE TO THE MOTORCYCLE OR CAN CAUSE LOSS OF CONTROL THAT COULD RESULT IN SEVERE INJURY OR DEATH.

**NOTICE**

Küryakyn is not responsible for items that may be stolen or damaged in relation to the use of this product.

**NOTICE**

Ensure that the Mobile Device is secure in the Tech-Connect Holder. Küryakyn is not responsible for any Device that is stolen or damaged from use in this Holder or from the Holder not being properly secured to the motorcycle. It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

**NOTICE**

This Pouch is not waterproof. Remove the Mobile Device and stow during inclement weather. Küryakyn will not be responsible for any Mobile Device damaged when using this pouch.

**NOTICE**

Motorcycling can be done in a harsh environment. Make sure your Mobile Device is appropriate for this application.