



UNIVERSAL GPS/ACCESSORY POUCH 4195

FITS: UNIVERSAL FOR 1-3/4" BARS AND INSTALLS DIRECTLY TO UNIVERSAL HANDLE-BAR ACCESSORY MOUNTS 1421, 1461, 1473, 1474 AND FUEL DOOR GPS/ACCESSORY MOUNT 1465 & 1466

PARTS INCLUDED

- 1 Universal Pouch Assembly
1 Foam Insert
1 Protection Pad
1 Hardware Kit
1 Rubber Bar Mount
1 T-Clip
4 6/32 x 5/8" Button Socket Cap Screws
1 6/32" Square Nut
1 8" x 1" Hook and Loop Strap
4 6" Cable Ties
2 Nylon Cord Keepers
4 6/32" Lock Nuts
1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN! IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Hex Wrenches, Combination Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE - There are several mounting options for this product

CAUTION! Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.

POUCH WITH RUBBER BAR MOUNT

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

STEP 2 The Pouch can be mounted in a horizontal (PIC 1) or vertical (PIC 2) position using the Rubber Bar Mount. Test fit the pouch to the handlebars and decide which orientation you would like the pouch mounted.

-cont.-

CUSTOMER SERVICE 877.370.3604 (toll free)

INSTALLATION QUESTIONS techsupport@kuryakyn.com or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer...

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
• The product must be properly installed, maintained and operated under normal conditions.
• Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
• Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
• Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
• Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
• Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today-select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



STEP 3 After you have decided the mounting orientation, place the Rubber Bar Mount assembly (with square nut and T-Clip installed) over the 3 holes in the back of the Pouch (either horizontal - PIC 1 or vertical - PIC 2).

STEP 4 Using 3 of the 6-32 x 5/8" Button Socket Cap Screws, insert the screws through the appropriate holes from inside the Pouch. Start by tightening the lower screw and square nut, then the top two screws in to the threaded T-Clip. Tighten the screws, be careful not to overtighten.

CAUTION! Protect the clear window from damage, tools may scratch the window surface.

NOTE Make sure that the T-Clip is installed as shown in PIC 3

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

STEP 5 Once you have all the screws tight, you can take the provided protection pad and insert the pad in to the Pouch, place it over the screw heads to protect anything that is in the pouch.

STEP 6 Install the pouch and check for clearance.

NOTE The foam insert included fits inside the pouch and can be cut-to-fit to secure smaller GPS units as well as other small electronics or accessories

POUCH WITH FUEL DOOR/HANDLEBAR ACCESSORY MOUNT

STEP 1 The Pouch can be mounted in a horizontal or vertical position using the Fuel Door/Handlebar Accessory Mount. Test fit the pouch and decide which orientation you would like the pouch mounted.

STEP 2 After you have decided the mounting orientation, place the Pouch over the Accessory Mount and line up the slotted holes (PIC 4) in either a horizontal or vertical position.

STEP 3 Using the 6-32 x 5/8" Button Socket Cap Screws and 6-32 Lock Nuts, insert the screws through the slotted holes from inside the Pouch. Thread the 6-32" Lock Nuts on to the installed screws and tighten.

CAUTION! Protect the clear window from damage, tools may scratch the window surface.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

STEP 4 Once you have all the screws tight, you can take the provided protection pad and insert the pad in to the Pouch, place it over the screw heads to protect anything that is in the pouch.

STEP 5 Install the pouch and check for clearance.

NOTE The foam insert included fits inside the pouch and can be cut-to-fit to secure smaller GPS units as well as other small electronics or accessories


POUCH WITH HOOK AND LOOP ASSEMBLY

STEP 1 From the inside of the Pouch, slide each end of the strap through the large slots on the backside of the pouch.


STEP 2 Place it over the desired mounting area and connect the ends to tighten.

NOTE The foam insert included fits inside the pouch and can be cut-to-fit to secure smaller GPS units as well as other small electronics or accessories

PIC. 1

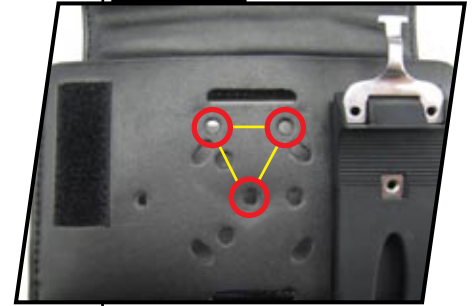

PIC. 2

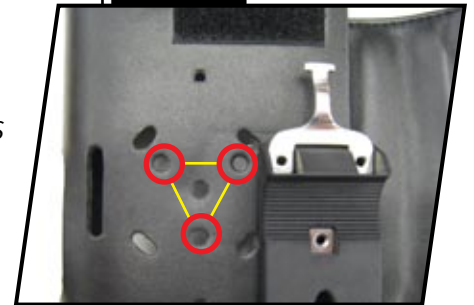

PIC. 3



PIC. 4

