



INSTRUCTIONS

-J05167

REV. 2010-05-15

CHROME FRONT WHEEL SPACER KITS

GENERAL

Kit Number

43300010

Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

WARNING

The rider's safety depends upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00333a)

Additional Parts Required

NOTE

This instruction sheet references service manual information. A service manual for your model motorcycle is required for this installation and is available from a Harley-Davidson Dealer.

Permatex® Anti-Seize Lubricant, (Part No. 98960-97) is required for proper installation of this kit.

Kit Contents

See Figure 1 and Table 1

REMOVAL

Remove the OE wheel spacers following the instructions in the service manual.

INSTALLATION

NOTE

The left and right wheel spacers are different. Install them on the correct side.

1. See Figure 1. Position ABS sensor cover (1) on sensor with slot lined up to wire connection. Place a block of wood on cover and with a soft mallet, tap cover onto sensor until sensor cover is flush with sensor or seated with slight protrusion of sensor.
2. Install the wheel spacers following the instructions in the service manual.

SERVICE PARTS

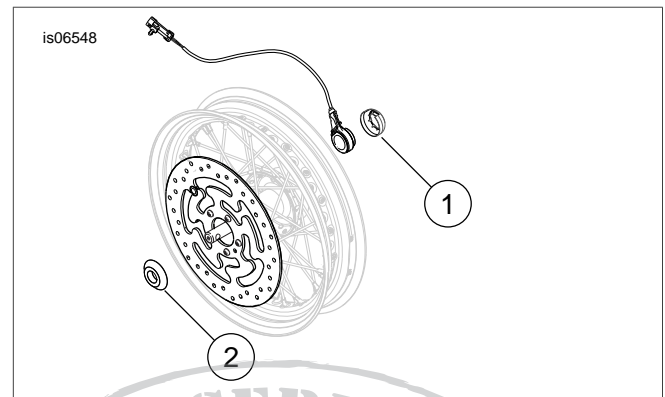


Figure 1. Service Parts: Chrome Front Wheel Spacer Kit

Table 1. Service Parts

Item	Description (Quantity)	Part Number
1	Front Wheel Speed Sensor Cover	42106-11
2	Hub Spacer, Right	11924