



INSTRUCTIONS

-J01216

2007-07-24

CHROME SPARK PLUG/HEAD BOLT COVERS

GENERAL

Kit Number

43835-98

Models

For model fitment information, please see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

Kit Contents

Table 1. Kit Contents

Description	Part Number
Head bolt cover, rear	Not Sold Separately
Head bolt cover, front	Not Sold Separately


INSTALLATION

1. See Figure 1. Pull the spark plug wire caps (1) off of each spark plug.
2. Turn each spark plug/head bolt cover (2) over. The cover for the front is stamped with an "F" and the cover for the rear is stamped with an "R".
3. Firmly push each cover in place over the corresponding front and rear spark plugs. Make sure the rubber grommets are in place over each head bolt and spark plug.

NOTE

It may be necessary to trim back the spark plug wire boot up to 1/4 inch to provide the proper "snap" fit between the wire connector and the spark plug.

4. Install the spark plug wires onto the spark plugs and push the wires on far enough so you can feel them snap into place.
5. After installing the spark plug wires, pull gently upward on spark plug wires to be certain they are locked into place. If spark plug wires are not properly attached, it may result in poor engine performance due to lack of spark to one or both cylinders.

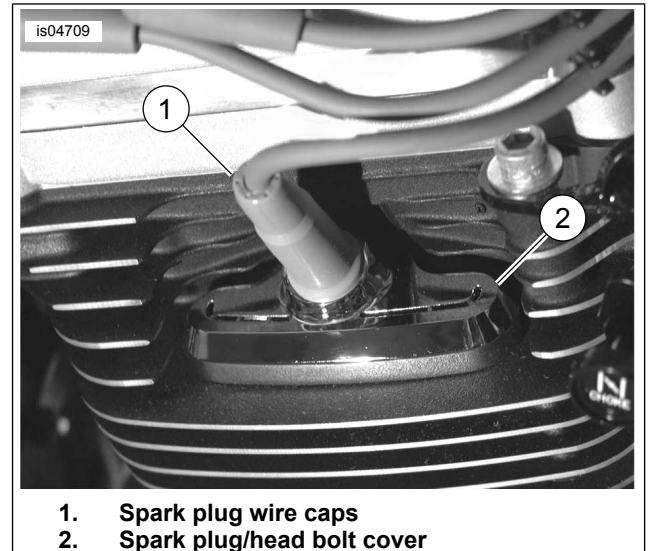

1. Spark plug wire caps
2. Spark plug/head bolt cover

Figure 1. Spark Plug/Head Bolt Covers

