



# INSTRUCTIONS

-J00717

REV. 11-5-96

Kit Numbers 43879-96, 43880-96, 43881-96, 43882-96, 43892-96, 43850-96


## HEXBOLT COVERS

### Description

- 43879-96: 1/2 inch Satin Chrome with H-D Logo
- 43880-96: 1/2 inch Chrome with H-D Logo
- 43881-96: 1/2 inch Chrome
- 43882-96: 9/16 inch Satin Chrome with H-D Logo
- 43892-96: 9/16 inch Chrome with H-D Logo
- 43850-96: 9/16 inch Chrome

### Installation

1. See illustration. Remove plastic retainer (1) from tree and place retainer over hex bolt head.
2. Push hexbolt cover (2) over retainer.

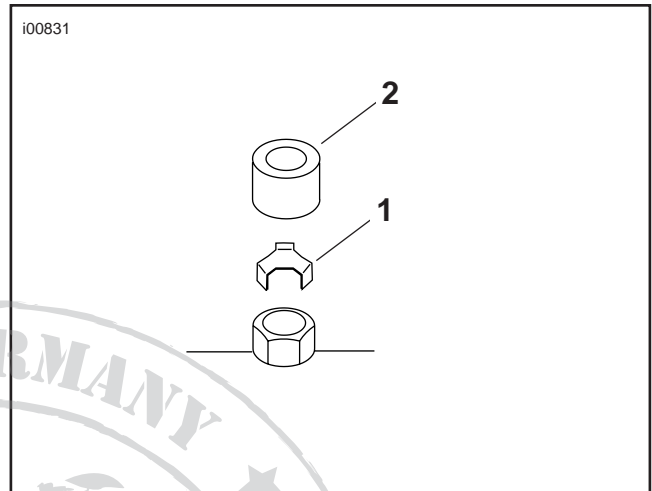

Installing Hexbolt Covers



# INSTRUCTIONS

-J00717

REV. 11-5-96

Kit Numbers 43879-96, 43880-96, 43881-96, 43882-96, 43892-96, 43850-96


## HEXBOLT COVERS

### Description

- 43879-96: 1/2 inch Satin Chrome with H-D Logo
- 43880-96: 1/2 inch Chrome with H-D Logo
- 43881-96: 1/2 inch Chrome
- 43882-96: 9/16 inch Satin Chrome with H-D Logo
- 43892-96: 9/16 inch Chrome with H-D Logo
- 43850-96: 9/16 inch Chrome

### Installation

1. See illustration. Remove plastic retainer (1) from tree and place retainer over hex bolt head.
2. Push hexbolt cover (2) over retainer.

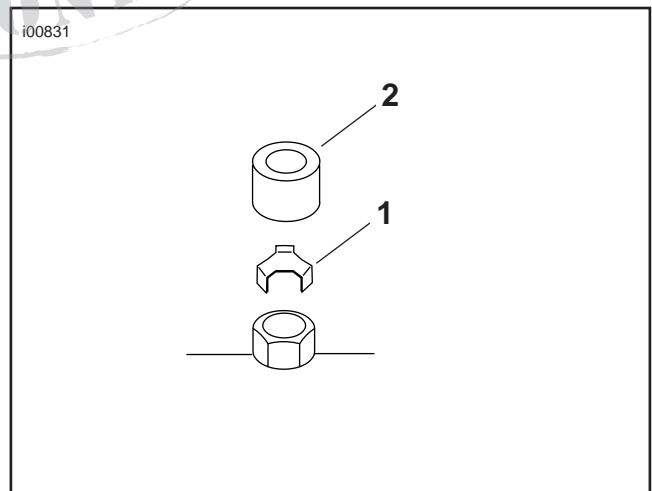

Installing Hexbolt Covers