



# INSTRUCTIONS

-J00114

REV. 11-25-2002

Kit Number 43897-86B

## CLASSIC CHROME SWINGARM BOLT COVER KIT

### General

This kit is designed to fit on 1984-1999 Softail model motorcycles except FLSTS.

### Kit contents

DESCRIPTION	PART NO.
Bolt covers (2)	Not sold
Setscrews (2)	3267
Allen wrench	Not sold
C" washer (for FLSTF and FLSTN models only)	6361

### Installation

#### CAUTION

To avoid burns to hands and fingers, do not install Swingarm Bolt Covers until engine and mufflers have cooled.

#### NOTE

For ease of installation, start setscrew by hand prior to placement of bolt covers. Mild thread sealant can be used on setscrew to assure easy removal.

#### NOTE

When installing swingarm bolt covers on FLSTF or FLSTN models, follow installation steps 1 and 3. For all other models follow installation steps 1 and 2.

1. See Figure 1, Views A and B. On left side of vehicle, place bolt cover (5) over head of nut (1). Install and tighten setscrew (6) at or near bottom of bolt cover.
2. Repeat procedure on right side of vehicle using remaining bolt cover.
3. See Figure 1, View A.

On right side of FLSTF and FLSTN models, loosen bolt (1) enough to allow insertion of "C" washer (4). Do not loosen more than 3/8 in. Insert "C" washer (4) from back of bike. Next, rotate washer so opening faces down. Tighten bolt (1) to 120-150 ft-lbs torque.

"C" washer is not required on any other Softail models.

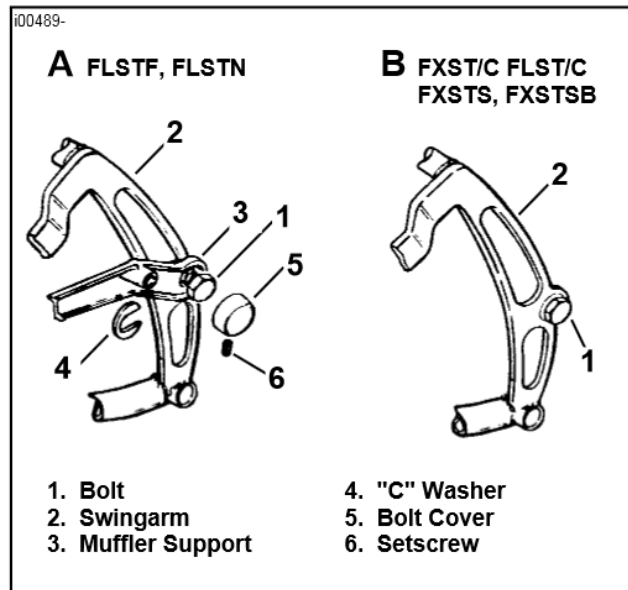


Figure 1. Swingarm Bolt Mounting