



INSTRUCTIONS

-J02722

REV. 2007-02-15

AXLE PINCH NUT AND WASHER KIT (CHROME)

GENERAL

Kit Number

45802-03

Models

For model fitment information, please see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

NOTE

A Service Manual for your model motorcycle is available from a Harley-Davidson Dealer.

Kit Contents

Table 1. Kit Contents

| Description (Quantity) | Part Number |
|------------------------|---------------------|
| Flat washer (chrome) | 94067-90T |
| Lockwasher (chrome) | 94082-90T |
| Nut (chrome) | Not Sold Separately |

INSTALLATION

1. Secure the front wheel of the motorcycle.

2. See Figure 1. Remove the hex nut (4), lockwasher (3) and flat washer (2) clamping the front axle to the right-side fork slider tube.
3. Assemble the chrome flat washer, lockwasher and nut from the kit to the stock socket-head screw (1), and tighten to 21-27 ft-lbs (28-37 Nm).

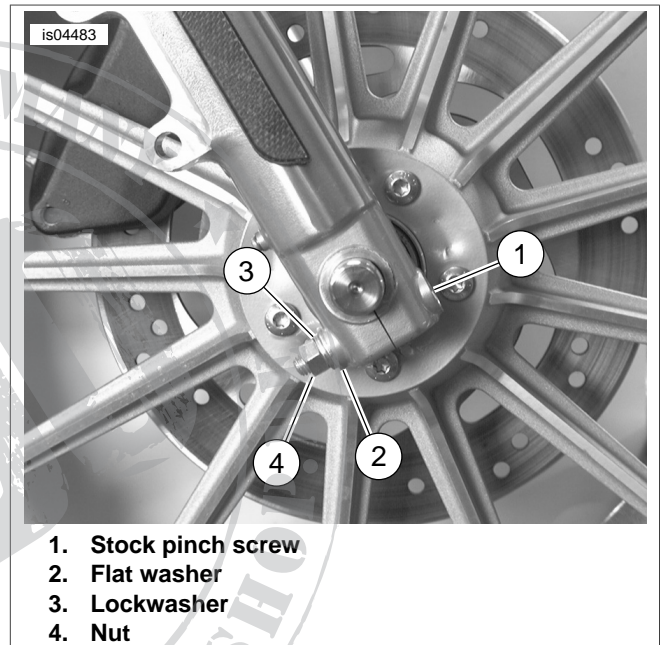


Figure 1. Front Axle Pinch Screw