



INSTRUCTIONS

-J02301

REV. 2006-03-21

VRSC SWINGARM PIVOT BOLT COVERS

GENERAL

Kit Number

48893-01, 48894-02

Models

These kits fit 2002 and later VRSC model motorcycles.

Kit Contents

Kit Number 48893-01 is chrome.

Kit Number 48894-02 is chrome with an engraved insert.

There are no Service Parts available with this kit.

INSTALLATION

1. Place a swingarm pivot-bolt cover in position over a swingarm pivot.

NOTE

For Kit Number 48894-02, orient the engraved insert pattern to the desired position. After installation, rotate the cover to adjust the insert pattern.

2. Firmly press the cover into place with your hand.
3. Repeat steps 1 and 2 for the opposite side.

NOTE

Do not use a hammer to install the swingarm pivot-bolt cover. Installation with a hammer could damage the cover. If installa-

tion is difficult, bend the inner tabs inward slightly, then press the cover into place.

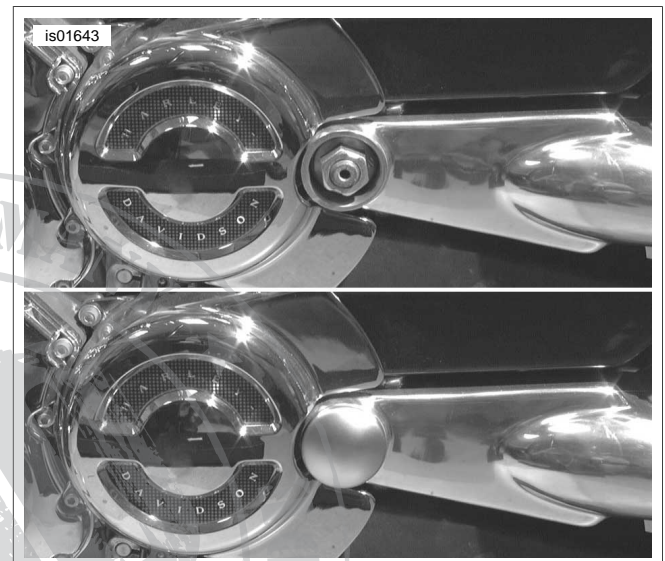


Figure 1. Swingarm Pivot-Bolt Cover Installation Before (Above) and After (Below)

NOTE

For cover removal, use a blade to pry the cover from the swingarm and to prevent damage to the cover.