PASSENGER FOOTBOARD INSERT KITS

GENERAL

Kit Numbers

50420-05, 50537-07, 52312-07, 50500090

Models

These kits are used to complete the installation of a Swept Wing Passenger Footboard Kit on specific model motorcycles.

See the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only) for model fitment information and the correct Passenger Footboard Kit and Passenger Footboard Insert Kit part numbers.

Additional Parts Required

Separate purchase of a Swept Wing Passenger Footboard Kit and additional parts may be required for proper installation of this Passenger Footboard Insert Kit on your model motorcycle.

See the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only) for a list of required parts for your model.

Also see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only) for a collection of matching Genuine Motor Accessory grips, pads and pegs that are available. These can be easily installed at the same time as this kit.

Kit Contents

See Figure 2 and Table 1.

INSTALLATION

If replacing an insert or inserts on a vehicle currently equipped with Swept Wing Passenger Footboards:

Existing Footboard Insert Removal

NOTE

Carefully remove the currently installed footboard insert to avoid damage to chrome surfaces.

- See Figure 1. Fold the passenger footboard (1) into the UP position.
- Loosen, but do not remove the footboard insert setscrew (2).
- 3. With the footboard folded DOWN, carefully raise an outside corner of the existing insert with a suitable flat-bladed tool, taking care to avoid damaging the chrome footboard pan.
- 4. Continue around the insert, using a second tool if necessary to pry the existing insert (3) from the footboard pan.
- 5. If replacing both inserts, repeat for the opposite footboard.

Swept Wing Passenger Footboard Installation

- 1. If installing inserts on a vehicle NOT currently equipped with Swept Wing Passenger Footboards:
- Remove currently installed passenger footboards (if so equipped) per the instructions included with the Swept Wing Passenger Footboard Kit.
- Remove currently installed passenger footpegs (if so equipped) by removing the socket screw with lockwasher retaining the footpeg support bracket to the rear fork (swingarm) bracket.
- 2. Follow the instructions in the Swept Wing Passenger Footboard Kit to install the passenger footboards.

Footboard Insert Installation

- 3. ALL applications: Center the two footboard pivot pins.
- Use soapy water to moisten the rubber dowel pins and pivot pin slots on the bottom of the new footboard insert.
- Place the insert into position with the rubber dowel pins mating the holes in the footboard pan. Firmly press the insert into the footboard until the dowel pins pop into place.
- Fold the passenger floorboard UP and tighten the setscrew to secure the insert.
- 7. Repeat Steps 3 through 6 for the opposite footboard.

NOTE

Avoid the contact of chrome surfaces with abrasive materials (stones, sand, etc.) as damage will result.

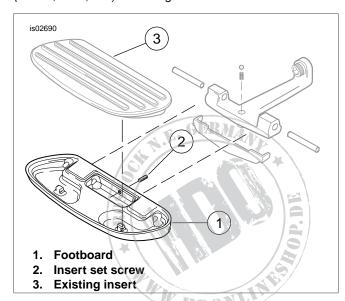


Figure 1. Swept Wing Passenger Footboard

-J03321 1 of 2

SERVICE PARTS

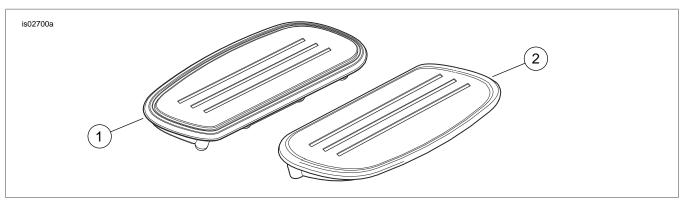


Figure 2. Service Parts: Swept Wing Passenger Footboard Insert Kits

Table 1. Service Parts Table

Kit	Item	Description (Quantity)	Part Number
Kit 50420-05 Streamliner Passenger Footboard Insert	1	Passenger footboard insert (Streamliner, left)	Not Sold Separately
	2	Passenger footboard insert (Streamliner, right)	Not Sold Separately
Kit 50537-07 Centerline Passenger Footboard Insert	1	Passenger footboard insert (Centerline, left)	Not Sold Separately
	2	Passenger footboard insert (Centerline, right)	Not Sold Separately
Kit 52312-07 Ironside Passenger Footboard Insert	1	Passenger footboard insert (Ironside, left)	50819-07
	2	Passenger footboard insert (Ironside, right)	50823-07
Kit 50500090 Slipstream Passenger Footboard Insert	1	Passenger footboard insert (Slipstream, left)	5050060
	2	Passenger footboard insert (Slipstream, right)	5050061



-J03321 2 of 2