



## GLOSS BLACK L. E. D. INSERTS for SADDLEBAG SUPPORTS

### 5055

**THANK YOU FOR CHOOSING KÜRYAKYN!**

**PROTECT YOURSELF AND OTHERS FROM POSSIBLE INJURY AND PROPERTY DAMAGE OR LOSS. PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS, AND NOTICES REGARDING THE INSTALLATION, USE, AND CARE OF THIS PRODUCT.**

### WARNING

**THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.**

### NOTICE

**This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.**

**MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:**

- 2 Gloss Black LED Insert Assemblies
- 1 Hardware Kit containing:
  - 4 Assembly Bracket
  - 4 #8 X 1/2" High-Low Pan Head Screws
  - 1 Run-Turn-Brake Wiring Adapter
  - 2 Dielectric Grease Packs
  - 8 Zip Ties
- 1 Installation Instructions

### TOOLS SUGGESTED:

Phillips head screwdriver, warm soapy water and a clean rag

### NOTICE

**These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future reference.**

### STEP 1


Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn **IGN OFF**. Allow the engine and exhaust system to cool.

### WARNING

**INSTALLATION MAY REQUIRE CONTACT WITH THE EXHAUST SYSTEM. ENSURE THAT THE EXHAUST SYSTEM HAS FULLY COOLED BEFORE BEGINNING TO PREVENT INJURY.**

### STEP 2

Refer to **PIC 1**. Remove both saddlebags to gain access to the saddlebag supports; set the bags on a soft, sturdy surface.

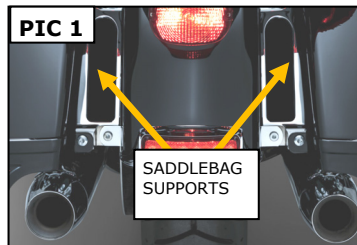

### WARNING

**VISIBILITY IS A MAJOR CONCERN FOR MOTORCYCLISTS. A LIGHT MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY. ENSURE PROPER LIGHT OPERATION BEFORE RIDING THE MOTORCYCLE.**

### CUSTOMER SERVICE

877.370.3604 (toll free)

### INSTALLATION QUESTIONS

techsupport@kuryakyn.com  
or call 715.247.2983

### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
  - The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
  - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn  
454 County Road V V  
Somerset, WI 54025-9031  
Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



**STEP 3**

Refer to **PICS 2 and 3**. Locate the four (4) included #8 X 1/2" High-Low Pan Head Screws and Assembly Brackets in the kit;

insert the Screws through the Brackets and thread them ALL THE WAY into the **LARGE** mounting bosses on the backsides of both LED Insert Assemblies; DO NOT thread the screws into the small bosses.

**NOTICE**

**The holes are not factory threaded; thread the screws into the holes ALL THE WAY to create threads. DO NOT THREAD SCREW IN WITHOUT THE BRACKET, IT WILL DAMAGE THE LED INSERT.**

remove the Screws and Brackets; set them aside for now.

**STEP 4**

The LED Insert Assemblies are not side-specific.

Route the wiring from one of the Assemblies through the opening in the saddlebag support;

insert the Assembly through the opening.

**STEP 5**

Refer to **PICS 2 and 4**. Place one of the Assembly Brackets over the top mounting boss on the backside of the Insert;

align the notch with the small boss on the backside of the Insert;

route the wiring around the mounting boss towards the top of the Insert Assembly;

secure the Bracket to the Insert with one of the included #8 X 1/2" High-Low Pan Head Screws.

**STEP 6**

Refer to **PIC 4**. Install another Assembly Bracket on the lower mounting boss.

**STEP 7**

Repeat **STEPS 4 through 6** on the other side of the bike.

**STEP 8**

Remove the seat.

**NOTICE**

**Secure the wiring away from moving parts, pinch points, or extreme heat. Kuryakyn will not provide warranty coverage on any electrical component that fails due to pinched, crimped, broken, abraded, melted, or frayed wires.**

**STEP 9**

Route both lengths of wire from the LED Inserts toward the battery compartment; use the included Zip Ties to secure the wiring away from moving parts and heat sources.

**STEP 10**

Refer to **PIC 5** In the battery compartment, locate the rear-lighting wiring harness on the bike;

**NOTICE**

**Dielectric grease inhibits moisture and prevents corrosion. Kuryakyn recommends the use of the included dielectric grease on ALL electrical connections. Apply dielectric grease directly to mating surfaces.**

apply some of the dielectric grease to the Run-Turn-Brake Adapter connectors; connect it in-line between the existing harness.

**STEP 11**

Apply dielectric grease to the LED Insert 3-Pin connectors; connect them to the 3-Pin connectors from the Adapter.

**STEP 12**

Turn the **IGN ON**; ensure that ALL lights operate correctly before operating the bike.

**STEP 13**

Reinstall the saddlebags and seat.

**NOTICE**

*Ride On!*

**It is the end user's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not provide warranty coverage on products or components lost or damaged due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.**

