



# INSTRUCTIONS

-J03171

REV. 9-07-2004

Kit Number 50634-05

## OPERATOR FOOTBOARD KIT

### General

This kit is designed for use on 1986 and later FLST/N/S/SI/F/FI/C/CI model motorcycles.

This kit is not compatible with Leather Rider Footboard Fringe Kit 50205-97 or 50206-98.

This kit contains the following items:

QTY	DESCRIPTION	PART NO.
1	Footboard assembly (right)	50698-05
1	Footboard assembly (left)	50699-05
4	Shoulder bolt, 1/4-20 x 1-3/32 in	50674-05
4	Locknut, flanged, 1/4-20	7716

### Footboard Installation

1. Remove and discard the two hinge bolts and locknuts attaching the existing footboard to the mounting brackets, and remove the footboard.
2. Clean and inspect the footboard brackets, and replace if worn, rusted or damaged.

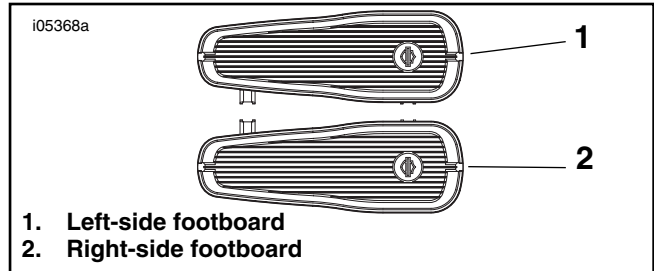


Figure 1. Footboard Installation

3. Set the correct footboard (see Figure 1) in place over the mounting brackets. Line up the holes and install the shoulder bolts and locknuts from the kit. Tighten to 7-9 ft-lbs (9-12 Nm).
4. Check that the footboard pivots freely on the hinge bolts.
5. Repeat for the opposite side.

#### NOTE

Avoid contacting chrome surfaces with abrasive materials (stones, sand, etc.) as damage will result.



# INSTRUCTIONS

-J03171

REV. 9-07-2004

Kit Number 50634-05

## OPERATOR FOOTBOARD KIT

### General

This kit is designed for use on 1986 and later FLST/N/S/SI/F/FI/C/CI model motorcycles.

This kit is not compatible with Leather Rider Footboard Fringe Kit 50205-97 or 50206-98.

This kit contains the following items:

QTY	DESCRIPTION	PART NO.
1	Footboard assembly (right)	50698-05
1	Footboard assembly (left)	50699-05
4	Shoulder bolt, 1/4-20 x 1-3/32 in	50674-05
4	Locknut, flanged, 1/4-20	7716

### Footboard Installation

1. Remove and discard the two hinge bolts and locknuts attaching the existing footboard to the mounting brackets, and remove the footboard.
2. Clean and inspect the footboard brackets, and replace if worn, rusted or damaged.

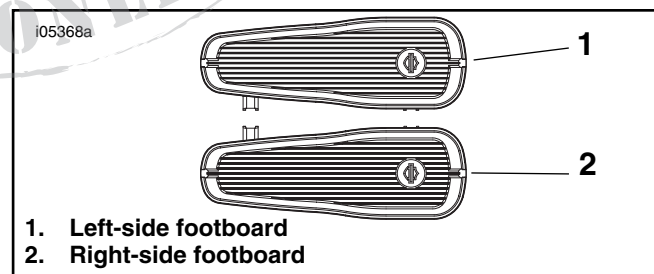


Figure 1. Footboard Installation

3. Set the correct footboard (see Figure 1) in place over the mounting brackets. Line up the holes and install the shoulder bolts and locknuts from the kit. Tighten to 7-9 ft-lbs (9-12 Nm).
4. Check that the footboard pivots freely on the hinge bolts.
5. Repeat for the opposite side.

#### NOTE

Avoid contacting chrome surfaces with abrasive materials (stones, sand, etc.) as damage will result.