



# INSTRUCTIONS

-J05054

REV. 2009-10-13

## EDGE CUT RIDER AND PASSENGER FOOTBOARD INSERT

### GENERAL

#### Kit Number

50753-10, 50760-10

#### Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of [www.harley-davidson.com](http://www.harley-davidson.com) (English only).

#### Kit Contents

See Figure 1 and Table 1.

### INSTALLATION - RIDER

1. Apply liquid dishwashing soap to the footboard-insert rubber beads protruding through the bottom of the footboard.
2. With the operator footboard in the "up" position, use a screwdriver to work the rubber footboard beads out through the top of the footboard.
3. Apply liquid dishwashing soap to the rubber beads on the new footboard insert.
4. Place the footboard insert into position on the footboard. Use a pliers to pull each rubber bead into its footboard hole until the beads protrude through the footboard.
5. Repeat the above steps for the remaining footboard insert.

#### NOTE

*Avoid the contact of chrome surfaces with abrasive materials (stones, sand, etc.) as damage will result.*

### INSTALLATION - PASSENGER

If replacing an insert or inserts on a vehicle currently equipped with Swept Wing Passenger Footboards:

#### Existing Footboard Insert Removal

#### NOTE

*Carefully remove the currently installed footboard insert to avoid damage to chrome surfaces.*


1. Fold the passenger footboard into the UP position.
2. Loosen, but do not remove the footboard insert setscrew.
3. With the footboard folded DOWN, carefully raise an outside corner of the existing insert with a suitable flat-bladed tool, taking care to avoid damaging the chrome footboard pan.
4. Continue around the insert, using a second tool if necessary to pry the existing insert from the footboard pan.
5. If replacing both inserts, repeat for the opposite footboard.

#### Footboard Insert Installation

6. **ALL applications:** Center the two footboard pivot pins.
7. Use soapy water to moisten the rubber dowel pins and pivot pin slots on the bottom of the new footboard insert.
8. Place the insert into position with the rubber dowel pins mating the holes in the footboard pan. Firmly press the insert into the footboard until the dowel pins pop into place.
9. Fold the passenger floorboard UP and tighten the setscrew to secure the insert.
10. Repeat Steps 6 through 9 for the opposite footboard.

# SERVICE PARTS

is06319

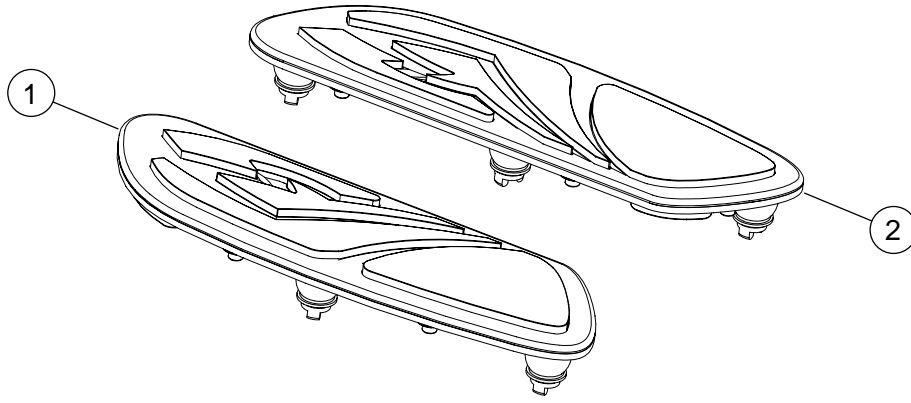

**Figure 1. Service Parts: Rider Footboard Kit (Tribal Shown)**

**Table 1. Service Parts Table**

Kit	Item	Description (Quantity)	Part Number
Kit 50753-10 Swept Wing Rider Footboard Insert	1	Rider footboard insert (Tribal, left)	50755-10
	2	Rider footboard insert (Tribal, right)	50754-10
Kit 50760-10 Swept Wing Passenger Footboard Insert	1	Passenger footboard insert (Tribal, left)	50762-10
	2	Passenger footboard insert (Tribal, right)	50761-10

