



INSTRUCTIONS

-J02044

REV. 2-5-03

Kit Number 52066-97B

FLHR BADLANDER CUSTOM SEAT

General

This kit is designed for installation on 1997 and later FLHR model motorcycles.

See Service Parts illustration for kit contents.

NOTE

A Service Manual for your motorcycle is available from your Harley-Davidson Dealer.

Installation

CAUTION

When performing the following installation procedures, be cautious not to scratch painted surfaces (fender, tank, etc.) with metal seat tabs or tools.

1. Remove left saddlebag from motorcycle, saving all hardware for reinstallation. Remove existing grab strap from left side of vehicle by removing bolt and forward saddlebag mounting bracket, noting mounting orientation of grab strap, saddlebag mounting bracket and hardware for reinstallation.
2. Secure new grab strap to left side of vehicle by reassembling forward saddlebag mounting bracket and bolt to vehicle in same orientation from which they were removed. Tighten bolt finger tight.
3. Remove screw from rear of passenger pillion. Pull pillion rearward to remove pillion from motorcycle. Save screw.

WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift position during vehicle operation, resulting in loss of control of vehicle and death or serious injury.

4. Remove seat mounting studs securing rider seat to fender. Remove seat from motorcycle.
5. Remove two bolts securing rear bracket on pillion and install bracket and bolts on new seat from kit.
6. Install new seat from kit onto motorcycle, making certain that bracket on front of seat fully engages into seat mounting tab on frame.
7. Secure seat onto rear fender using existing screw.
8. Remove right saddlebag from motorcycle, saving all hardware for reinstallation. Remove existing grab strap from right side of vehicle by removing bolt and forward saddlebag mounting bracket, noting mounting orientation of grab strap, saddlebag mounting bracket and hardware for reinstallation.
9. Secure new grab strap to right side of vehicle by reassembling forward saddlebag mounting bracket and bolt to vehicle in same orientation from which they were removed. Tighten bolt finger tight.
10. Reposition saddlebags (left and right) into place and secure.
11. With saddlebags in position, tighten forward saddlebag mounting bolts to 10 ft-lbs.




Service Parts

Part No. 52066-97B

Date 2/03

FLHR Badlander Seat Kit

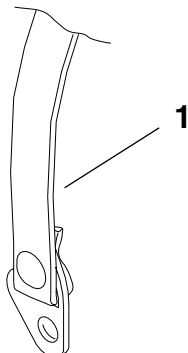

Item	Part No.	Description
1	52521-94	Grab strap
2	not sold separately	Seat (not shown)