



INSTRUCTIONS

-J02096

REV. 2006-01-16

PASSENGER BACKREST MOUNT KIT

GENERAL

Kit Number

53086-01, 53086-04, 52825-05

Models

Kit 53086-01 is designed for installation on all Touring models equipped with Detachable Passenger Sissy Bar Upright 52933-97A or 52805-97A.

Kits 53086-04 and **52825-05** are designed for installation on all Touring models equipped with Detachable Sissy Bar Upright 52933-97B, 52805-97B, or 52723-06

Kit Contents

See Figure 1 and Table 1.

INSTALLATION

1. Remove the stock chrome backrest mount bracket. Discard the stock screws.

NOTE

To install this kit, re-use the plastic spacer/bushings supplied with the backrest pad.

2. See Figure 1. Install the plastic spacer/bushings (A) in the mounting holes on the backrest pad (B).
3. Position the backrest pad on the Low Detachable Backrest upright. Place the backrest mount (1) in position and secure it with three flat-head screws (2).
4. Tighten the screws (2) to 48-60 in-lbs (5.4-6.8 Nm).

WARNING

After installing sissy bar/sideplate assembly, pull upward to be sure it is locked in position. While riding, a loose sissy bar/sideplate assembly can shift causing loss of control, which could result in death or serious injury. (00388a)

SERVICE PARTS

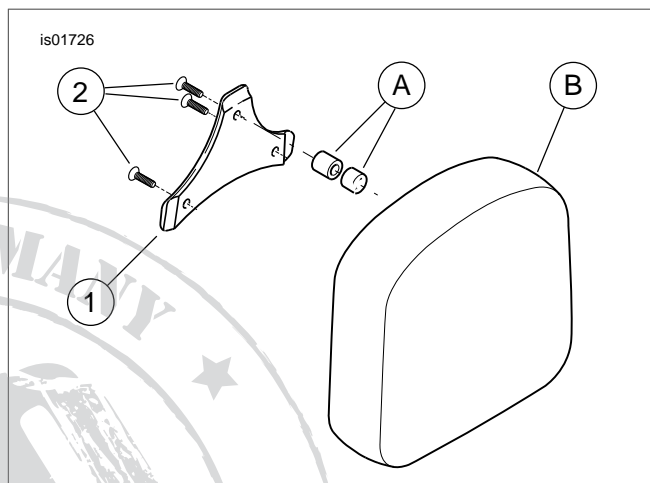


Figure 1. Service Parts: Passenger Backrest Mount Kit

Table 1. Service Parts: Passenger Backrest Mount Kit

Item	Description (Quantity)	Part Number
1	Backrest mount	Not Sold Separately
2	Screw, flat head (3) (used with kits 53086-01 and 53086-04)	94244-00
OR		
2	Screw, button head (3) (used with kit 52825-05)	94388-92T
For Reference Only:		
A	Plastic spacer/bushing	
B	Generic backrest pad (Typical backrest pad is shown)	