



# INSTRUCTIONS

-J03752

REV. 2006-07-25

## MOLDED TOUR-PAK LINER KITS

### GENERAL

#### Kit Number

53285-06, 53301-06, 53302-07

#### Models

Kit 53285-06 fits all models equipped with a **Chopped Tour-Pak** except when equipped with Tour-Pak bottom tub-mounted accessories.

Kit 53301-06 fits all models equipped with a **King Tour-Pak** **with** wrap-around tail lights except when equipped with Tour-Pak bottom tub-mounted accessories.

Kit 53302-07 fits all models equipped with a **King Tour-Pak** **without** wrap-around tail lights or Tour-Pak bottom tub-mounted accessories.

#### Kit Contents

Table 1. Kit Contents

Description (Quantity)	Part Number
Velcro Kit (2)	53314-06
Tour-Pak Liner	Not Sold Separately


### INSTALLATION

#### NOTE

Skip steps 2 and 7 for **King Tour-Pak** Liner kits 53301-06 and 53302-07, and Skip steps 1 and 8 for **Chopped Tour-Pak** liner kit 53285-06.

1. **King Tour-Pak only:** Remove stock document pouch by removing the acorn nuts, mounting screws, and washers from inside pouch. Save for reinstallation later (for models **WITH** wrap-around tail lights, remove acorn nuts and washers only, leave the lock-nuts attached to the Tour-Pak).
2. **Chopped Tour-Pak only:** Remove the cover tether from Tour-Pak bottom. Save screw and washer for re-installation.
3. Wash the inside of the Tour-Pak with warm, soapy water. Rinse and dry thoroughly.
4. Use the alcohol prep pad in the kit to thoroughly clean the interior surface of the Tour-Pak sides where hook fastener strips will be attached. Make sure any residue is removed, then allow Tour-Pak to dry completely. Make sure the surface is free of condensed moisture.
5. See Figure 1 to locate hook fastener strips. Peel the backing paper from the adhesive side of the hook fastener strips and press the strips against the wall of the Tour-Pak.
6. Place the liner into the Tour-Pak and press the liner surfaces against the hooks. Rub each strip firmly onto the Tour-Pak wall from the inside of the liner.
7. **Chopped Tour-Pak only:** Install tether to Chopped Tour-Pak bottom with original screw and washer retained in Step 2.
8. **King Tour-Pak only:** Install document pouch using saved hardware from step 1 as follows:
  - For models WITHOUT wrap-around tail lights*
    - a. Flip up backrest flap.
    - b. Insert the screw into the Tour-Pak mounting hole behind the rider backrest flap.
    - c. Open document pouch to access the plastic mounting insert.
    - d. Place washer over screw threads and hand-tighten the acorn nut.
    - e. Using a T-25 Torx® key wrench and 3/8-inch wrench on the acorn nut, tighten to 21-24 **in-lbs** (2.37-2.71 Nm).
  - For models WITH wrap-around tail lights*
    - a. Open document pouch to access the plastic mounting insert.
    - b. Place washer over screw threads, and hand tighten the acorn nut.
    - c. Using a T-25 Torx® key wrench and 3/8-inch wrench on the acorn nut, tighten to 21-24 **in-lbs** (2.37-2.71 Nm).

is00330

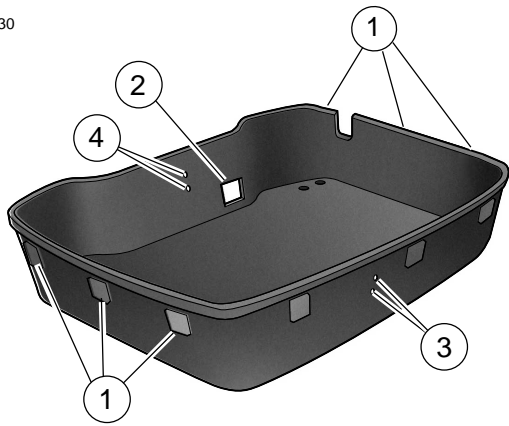

1. Hook fastener location, all sides
2. Tether screw location (Chopped Tour-Pak only)
3. Pouch mount holes (Tour-Pak w/wrap-around lights)
4. Pouch mount holes (Tour-Pak w/o wrap-around lights)

Figure 1. Tour-Pak Liner (Chopped version shown)

