



INSTRUCTIONS

-J00561

REV. 7-10-96

Kit Number 53431-97

TOUR-PAK SIDE LIGHT COVERS

General

This kit is designed for use on all FLT model motorcycles.

This kit contains the following components.

QTY	DESCRIPTION	PART NO.
2	Chrome-look, plastic lens	53731-97
6	Screw, 8-32 Torx	2968

All Service Parts are listed above.

Installation

1. Remove screws and nuts, if applicable, holding red plastic lens covers to sides of Tour-Pak, and take off the lens.
2. Remove light bulbs.
3. Install the chrome, plastic lenses with the provided 8-32 Torx screws.

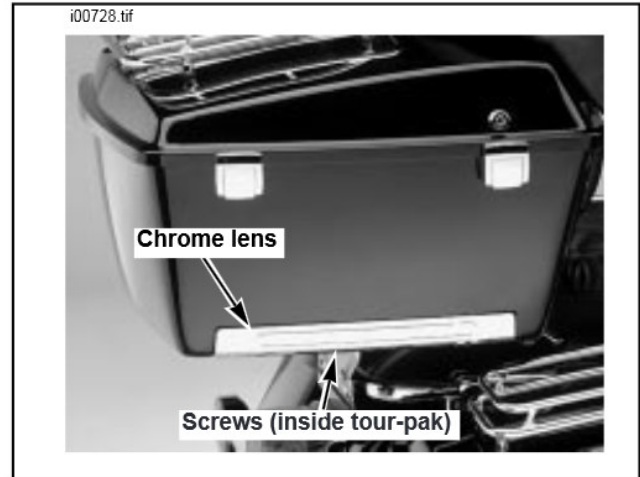


Figure 1. Installed Tour-pak side light covers



INSTRUCTIONS

-J00561

REV. 7-10-96

Kit Number 53431-97

TOUR-PAK SIDE LIGHT COVERS

General

This kit is designed for use on all FLT model motorcycles.

This kit contains the following components.

QTY	DESCRIPTION	PART NO.
2	Chrome-look, plastic lens	53731-97
6	Screw, 8-32 Torx	2968

All Service Parts are listed above.

Installation

1. Remove screws and nuts, if applicable, holding red plastic lens covers to sides of Tour-Pak, and take off the lens.
2. Remove light bulbs.
3. Install the chrome, plastic lenses with the provided 8-32 Torx screws.

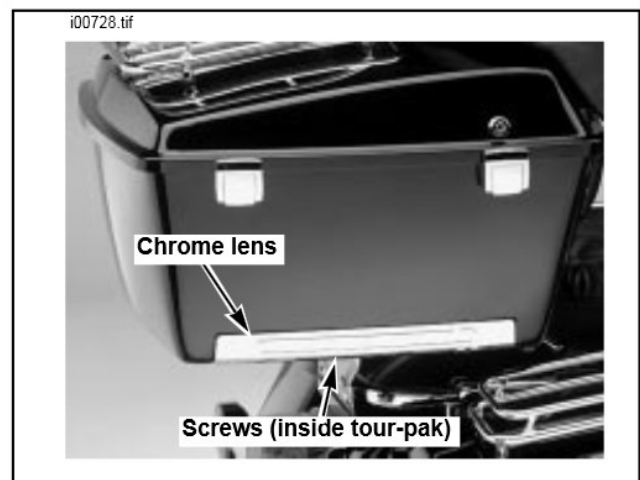


Figure 1. Installed Tour-pak side light covers