



# INSTRUCTIONS

-J03360

REV. 2007-01-04

## SADDLEBAG LID ORGANIZER KITS

### GENERAL

#### Kit Number

54008-04 and 54005-04A

#### Models

For model fitment information, please see the P&A Retail Catalog or the Parts and Accessories section of [www.harley-davidson.com](http://www.harley-davidson.com) (English only).

#### WARNING

**Do not exceed saddlebag weight capacity. Put equal weight in each bag. Too much weight in saddlebags can cause loss of control, which could result in death or serious injury. (00383a)**

#### NOTE

Maximum load capacity of the lid organizer is 2.5 lbs (1.1 Kg). The combined load of lid organizer and saddlebag must not exceed 15 lbs (6.8 Kg).

#### Kit Contents

Table 1. Kit Contents

Description (Quantity)	Part Number
Saddlebag Lid Organizer, Left	Not Sold Separately
Saddlebag Lid Organizer, Right	Not Sold Separately
Warning Label (2)	90820-93C
Alcohol Wipe (2)	Not Sold Separately

### INSTALLATION

1. See Figure 1 and Figure 2. Open leather saddlebag so inside of lid is exposed.
2. See Figure 3. Remove existing warning label from inside of saddlebag lid.
3. Use alcohol wipe (saturated with 70% isopropyl alcohol) included in kit to thoroughly clean saddlebag lid surface. Make sure any residue is removed, then allow lid to dry completely. Make sure the surface is free of condensed moisture.

#### NOTE

The ideal temperature range for applying the tape is 70-100° F (21-38° C). Minimum application temperature is 50° F (10° C). If you attempt to apply the tape below these temperatures, the adhesive will become too firm to adhere readily.



Figure 1. FLHRC Leather Saddlebag (right side shown)

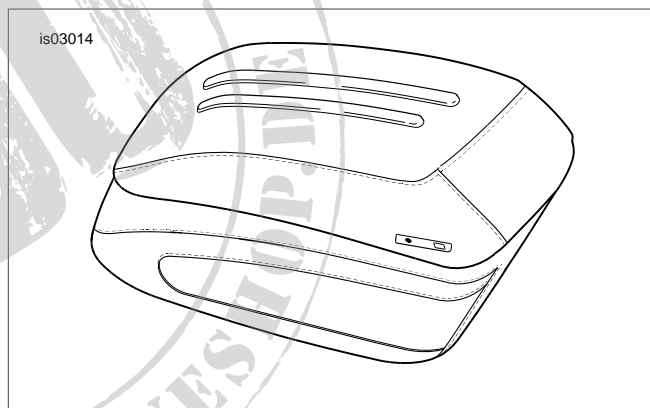


Figure 2. FLHRS Leather Saddlebag (right side shown)



1. Warning label
2. Saddlebag lid

Figure 3. Inside of FLHRC Saddlebag Lid

4. See Figure 4 and Figure 5. Hold organizer up to saddlebag lid (without removing the adhesive backing tape) to verify organizer fits properly within the recess of the lid.
5. Remove adhesive strips from back of saddlebag lid organizer.
6. Carefully center saddlebag lid organizer and press firmly into place.

**NOTE**

*Apply pressure from both outside of lid and around perimeter of organizer. Be sure to apply to the entire length of tape to ensure proper adhesion.*

7. Remove adhesive backing from warning label and apply to visible surface inside the saddlebag.
8. Repeat installation steps for opposite saddlebag lid organizer.
9. Allow tape to cure for a minimum of 48 hours at 70° F (21° C) (allow extra time if temperature is below 70°). Do not place items in the saddlebag lid organizer while adhesive is curing.
10. Close leather saddlebag lid and secure.



**Figure 4. FLHRC Saddlebag Lid Organizer (Front and Back)**



**Figure 5. FLHRS Saddlebag Lid Organizer (Front and Back)**