



INSTRUCTIONS

-J00284

REV. 5-1-89

Kit Numbers 56063-82A and 56066-82A

CHROME HANDLEBAR RISER KIT

Model Application

56063-82A	'77 & later FX's, XL's '82 & later FXR, FXRS
56066-82A	'77 & later FX's, XL's '82 & later FXR, FXRS '79 & '80 XLS

These kits contain the following parts:

QTY	DESCRIPTION
1	Clamp, lower right
1	Clamp, lower left
2	Bolts, hex head

Installation (Figure 1)

1. Remove hex head nuts located underneath upper fork bracket. Remove socket head screws and handlebar clamps. Carefully allow gauges and handlebar to rest on motorcycle.
2. Install handlebar on lower clamps (risers) supplied in kit with upper clamp and gauge bracket. Secure with original four socket head screws by tightening the two forward mounting screws until clamp halves contact. Tighten the rear screws to 12-15 ft-lbs. Then tighten forward mounting screws to 12-15 ft-lbs. (See Figure 2.)

CAUTION

When installation of handlebars is complete, the upper and lower clamps should touch in front and have a slight gap in the rear.

3. Align lower clamps (risers), cup washers on both sides of upper fork bracket, and ground wire (located upper right side only). Secure with two hex head bolts, supplied with kit, from the bottom thru upper fork bracket up into lower clamps (risers). Tighten to 50-60 ft lbs.
4. To reposition handlebar for rider comfort, loosen all four socket head screws in upper clamp. Adjust handlebar to desired position and retighten screws by following the same procedure as specified in Step 2.

CAUTION

Do not overtorque bolts and screws.

WARNING

Prior to motorcycle operation, check throttle cables and wiring harnesses for any binding and/or crimping. Check normal steering range for any restrictions.

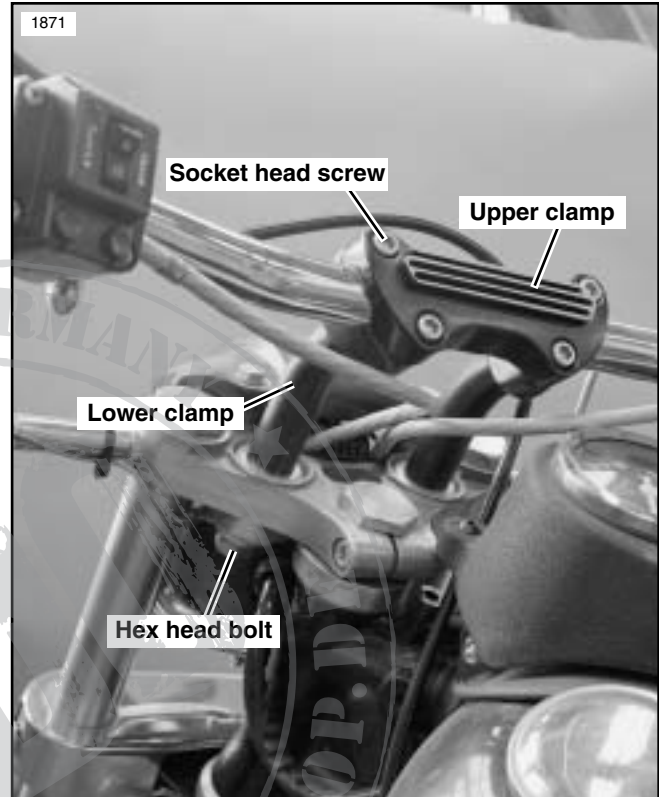


Figure 1. Handlebar Risers

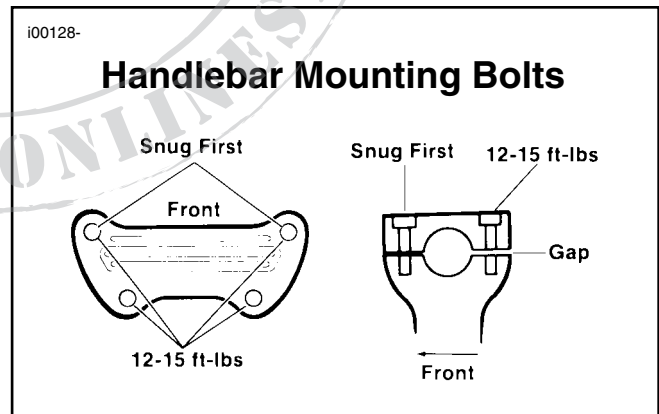


Figure 2. Handlebar Mounting