



INSTRUCTIONS

-J02907

REV. 2006-12-14

HANDLEBAR POLYURETHANE RISER BUSHING KIT

GENERAL

Kit Number

56165-03, 56298-03

Models

For model fitment information, please see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com.

WARNING

The rider's safety depends upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00333a)

NOTE

This instruction sheet references Service Manual information. A Service Manual for your model motorcycle is available from a Harley-Davidson Dealer.

Kit Contents

See Figure 1 and Table 1.

There are no Service Parts available with this kit.

INSTALLATION

NOTE

Cover fuel tank with blanket or towels to keep paint from being scratched.

1. **For All Models Except Touring.** See Figure 1. Remove and save the two capscrews (C) from underneath the

upper fork bracket that hold the existing lower clamps (risers) (B) in place. Remove the handlebar assembly (A) and carefully allow gauges and handlebar to rest on motorcycle. Remove and discard the existing cup washers (D), rubber bushings (E) and spacers (F).

NOTE

See the *Touring Service Manual for the Fairing Removal procedure in order to gain access to the handlebar assembly.*

2. **For the Touring models.** See Figure 1. Remove and save the the existing capscrews (C). Remove the handlebar assembly (A) and carefully allow gauges and handlebar to rest on motorcycle. Remove and discard cup washers (D), rubber bushings (E) and spacers (F). Install the new bushings.

NOTE

The upper bushing and lower bushing must be oriented with flat side opposite from each other as shown.

3. Install the new polyurethane riser bushings (1) in place of the removed cup washers, bushings, and spacers.
4. Align components as shown in Figure 1.
5. Secure components with two hex head capscrews removed in Step 1. Insert the capscrews, from the bottom, thru the upper fork bracket, thru the bushings (1) and into the clamps (risers).

For the XL Models, tighten the lockpatch screws to 25-30 ft-lbs (34-41 Nm) .

For all other Models, tighten the two hex head screws to 144-180 in-lbs (16.3-20.3 Nm) .

6. See the Service Manual for your model motorcycle for the appropriate installation procedure for your handlebar.

SERVICE PARTS

is04261

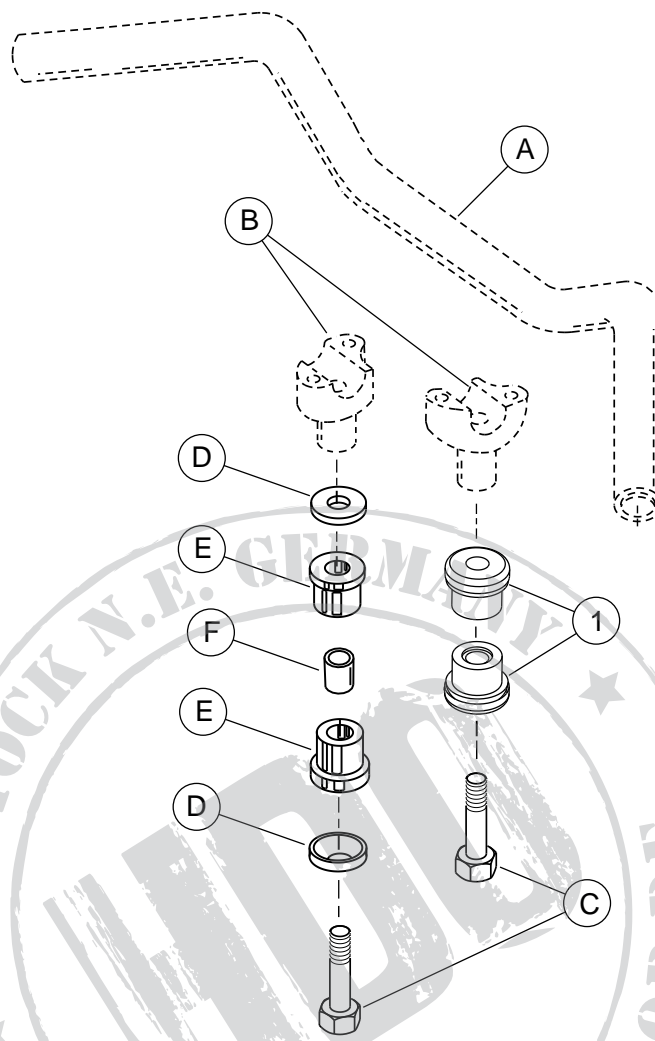


Figure 1. Service Parts: Handlebar Polyurethane Riser Bushing Kit

Table 1. Service Parts Table

Item	Description (Quantity)	Part Number
1	Polyurethane riser bushing (4)	Not Sold Separately
Items mentioned in text, but not included in kit:		
A	Handlebar assembly	
B	Lower clamps risers (2)	
C	Upper fork bracket screw (2)	
D	Cup washer (4)	
E	Rubber bushing (4)	
F	Spacer (2)	