



# INSTRUCTIONS

-J06064

2015-04-21

## WINDSHIELD TRIM

### GENERAL

#### Kit Number

57400299, 57400320

#### Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of [www.harley-davidson.com](http://www.harley-davidson.com) (English only).

#### ⚠ WARNING

The rider's safety depends upon the correct installation of this kit. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00308a)

#### Kit Contents

See Figure 1 and Table 1.

### INSTALLATION

1. See Figure 1. Begin on one side. Remove two original equipment (OE) screws and washers. Discard.
2. Install windshield trim (2 or 3) and screws (1). Leave fasteners loose.

#### NOTE

*Do not over-tighten screws.*

3. Repeat previous steps on the other side.
4. Tighten screws to 0.9–1.3 N·m (8–12 in-lbs).

### SERVICE PARTS

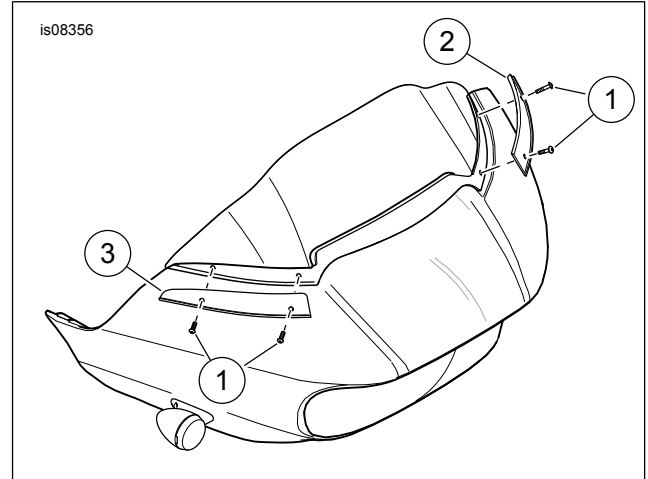


Figure 1. Windshield Trim

Table 1. Service Parts Table

Item	Description (Quantity)	Part Number
1	Screw, silver (4)	2495
	Screw, black (4)	10200400
2	Windshield trim, left side, chrome	57400269
	Windshield trim, left side, black	57400309
3	Windshield trim, right side, chrome	57400268
	Windshield trim, right side, black	57400308

