



INSTRUCTIONS

-J00615

REV. 2007-11-21

COMPACT REPLACEMENT WINDSHIELD KITS

GENERAL

Kit Number

57201-05, 57717-01, 57718-01, 57719-08, 57720-08, 57812-04, 57815-04, 57912-04, 58061-96, 58103-96, 58264-03, 58265-03, 58271-95, 58288-95, 58358-96, 58368-96, 58625-99, 58629-99, 58632-99, 58750-05, 58774-08, 58777-05, 58804-96, 58805-96, 58916-98A, 58917-98A

Additional Parts Required

NOTE

A Service Manual for your model motorcycle is available from your Harley-Davidson Dealer.

Kit Contents

See Figure 1 and Table 2.

INSTALLATION

1. See Figure 1. Remove windshield.
2. Remove all hardware that secures mounting brackets to windshield. The nine screws must be removed with a T-27 TORX® screwdriver. Save all hardware and brackets for installing new windshield.
3. Remove all old tape from brackets and apply new tape (1, 2) from kit onto brackets. Align holes in tape with holes in brackets.

NOTES

A hair dryer may be used to aid in tape removal from brackets.

If original windshield does not use rubber washers, go to Step 5.

4. Install rubber washers (4) between inner vertical brace and windshield.

CAUTION

Do not exceed recommended torque when installing mounting screws. Damage to windshield can result. (00385a)

NOTE

Do not over tighten fasteners. Over tightening can crack the windshield.

5. Install all brackets. Tighten all screws and acorn nuts to 48-60 **in-lbs** (5.4-6.8 Nm).
6. Install windshield (3) on motorcycle.

Models

Table 1. Models

Kits	Models	Fits Accessory Kit:
57201-05	Smoked, low profile	57199-05
57717-01	Smoked, standard height	57715-01
57718-01	Clear, standard height	57716-01
57812-04	Clear with flames	57810-04
57815-04	Clear with flames	57813-04
57912-04	Clear with flames	57898-04
58061-96	Clear, standard height	58034-96, 58112-96, 58001-71E, 58006-87C
58103-96	Smoked, low profile	58034-96, 58112-96, 58001-71E, 58006-87C
58264-03	Smoked, standard height	58880-03, 58865-03
58265-03	Clear, standard height	58880-03, 58865-03
58271-95	Smoked, low profile	58340-96, 58341-96
58288-95	Clear, standard height	58340-96, 58341-96
58358-96	Clear, standard height	58357-96, 58367-96
58368-96	Smoked, low profile	58357-96, 58367-96
58625-99	Smoked, standard height	58626-99, 58056-94A
58629-99	Smoked, standard height	58627-99
58632-99	Clear, standard height	58044-88B
58750-05	Clear, standard height	59802-05
58777-05	Smoked, standard height	58751-05
58804-96	Clear, standard height	58770-96, 58771-96
58805-96	Smoked, low profile	58770-96, 58771-96
58916-98A	Clear, standard height	58059-93A
58917-98A	Clear, standard height	58025-91B
58774-08	Clear, standard height, cutout for auxiliary lamp	57605-08, 57609-08
57719-08	Clear, standard height	57701-08
57720-08	Smoked, low profile	57702-08

CAUTION

Do not use windshield bags with flamed windshields. Damage to graphics will occur. (00393f)

CARE AND CLEANING

NOTE

Sunlight reflections off of the inside curvature of a windshield can, at certain times of the day, cause extreme heat build-up on motorcycle instruments. Exercise care in parking. Park facing the sun, place an opaque object over the instruments, or adjust the windshield to avoid reflections.

CAUTION

Polycarbonate windscreens/windshields require proper attention and care to maintain. Failure to maintain polycarbonate properly can result in damage to the windscreen/windshield. (00483d)

CAUTION

Do not use harsh chemicals including rain sheeting products on Harley-Davidson windshields. They can cause dulling or hazing. If you want to use a windshield protectant on your windshield, try Harley Glaze Polish and Sealant (00231a)

CAUTION

Do not use benzine, paint thinner, gasoline or any other type of harsh cleaner on the windshield. Doing so will damage the windshield surface. (00232a)

Do not clean Lexan® polycarbonate in hot sun or high temperature. Powdered, abrasive or alkaline cleanser will damage the windshield. Never scrape the windshield with a razor blade or other sharp instruments because permanent damage will result.

NOTES

Covering the windshield with a clean, wet cloth for about 15 minutes before washing will make dried bug removal easier.

Harley-Davidson Windshield Water Repellent Treatment part number 99841-01 is approved for use on Harley-Davidson Lexan® windshields.

SERVICE PARTS

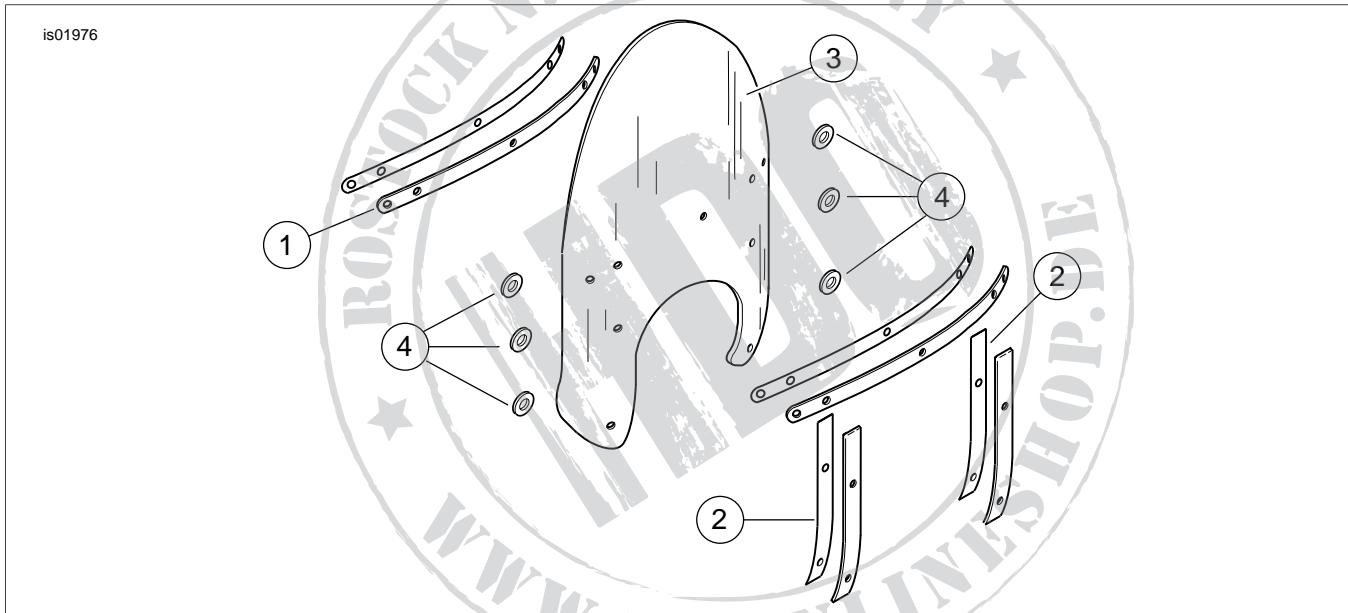


Figure 1. Service Parts: Compact Replacement Windshield Kits

Table 2. Service Parts Table

Kit	Item	Description (Quantity)	Part Number
All Kits except 58774-08	1	Tape for horizontal braces (2)	58052-78
	2	Tape for vertical braces (2)	58417-77
	3	Windshield	Not Sold Separately
	4	Rubber washers (6)	58152-96
Kit 58774-08	1	Tape for horizontal braces (2)	58052-78
	2	Tape for vertical braces (2)	58415-08
	3	Windshield	Not Sold Separately
	4	Rubber washers (6)	58152-96