



INSTRUCTIONS

-J02863

REV. 4-2-03

Kit Number 59664-03

FRONT FENDER EXTENSION KIT

General

This kit is designed to fit 1984 and later Sport Front Fenders on Dyna®, and FX Softail® models.

Kit Contents

Qty	Description
1	Extension, chrome fender
1	Screw, 8-32X1/2 inch stainless
1	Flatwasher, #8 stainless
1	Nut, nylock 8-32 stainless

NOTE

A Service Manual for your motorcycle is available at your Harley-Davidson Dealer.

Installation

1. Use a 50/50 mixture of water and isopropyl alcohol to thoroughly clean the lower fender area where the extension will be installed. Let dry completely.
2. Obtain the extension and carefully peel adhesive backing away from adhesive.
3. Position the extension over the front fender so that hole in extension aligns with hole in fender.
4. Install screw through mounting hole and fender and install flatwasher and nut. Tighten securely.
5. Press firmly on extension, holding in place for at least 1 minute to insure a good bond.

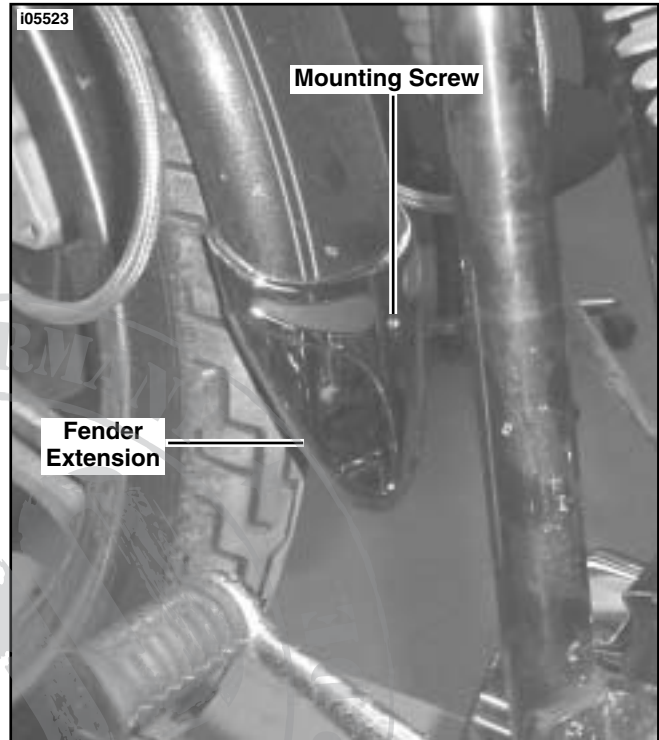


Figure 1. Sport Front Fender Extension