



INSTRUCTIONS

-J01984

REV. 2006-09-13

CHROME UPPER BELT GUARD KIT

GENERAL

Kit Number

60469-01, 60495-04, 60837-07, 60469-01A

Models

For model fitment information, please see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

NOTE

A Service Manual for your model motorcycle is available from a Harley-Davidson Dealer.

Kit Contents

Table 1. Kit Contents


Description (Quantity)	Part Number
Guard, chrome upper	Not Sold Separately
Locknut	7433M

INSTALLATION

NOTE

When performing the following step, it is not necessary to completely remove the shock mount bolt, back the bolt out only until it is flush with the swingarm.


- See Figure 1. Loosen the left rear shock mount bolt (1) and back it out until the threaded portion of the bolt is flush with the swingarm.

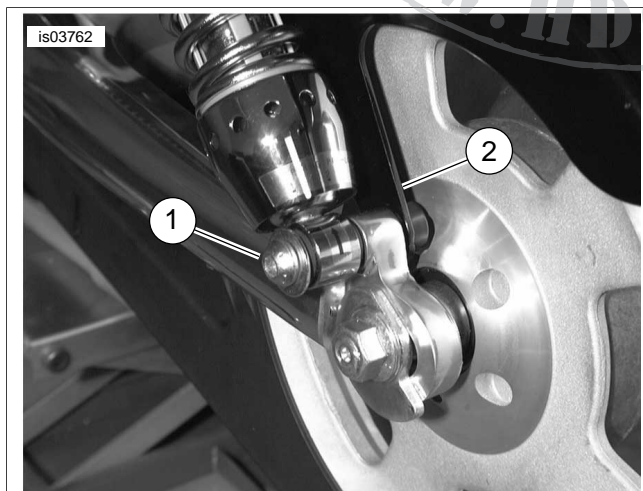

- Shock mounting bolt (left side)
- Belt guard

Figure 1. Loosen Shock Mounting Bolt

- Pull the belt guard (2) straight back toward the rear of the bike to remove the guard from upper and lower grommets. See Figure 2. It may be necessary to work the guard up and down slightly to dislodge it from the upper (1) and lower (2) grommets. Remove the belt guard and discard.

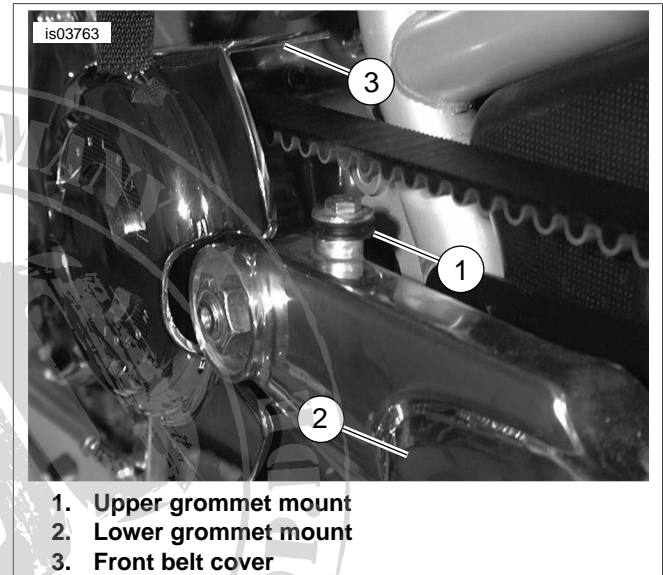

- Upper grommet mount
- Lower grommet mount
- Front belt cover


Figure 2. Rubber Grommet Mount Locations

- Obtain the chrome belt guard from kit. While making sure belt guard is over the belt, slide the guard straight in between the shock and sprocket and align cover just below front belt cover (3). The cutouts in the bracket should be lined up to engage with upper and lower grommets.

NOTE

When performing the following step, gently pull the guard in and out at the center; it should feel fairly tight even though the rear mounting bracket has not been secured.

- See Figure 3. Firmly push the guard toward the front of the bike until the cutouts are secured by the grommets and the belt guard mounting bracket (1) hole lines up with the shock bolt.

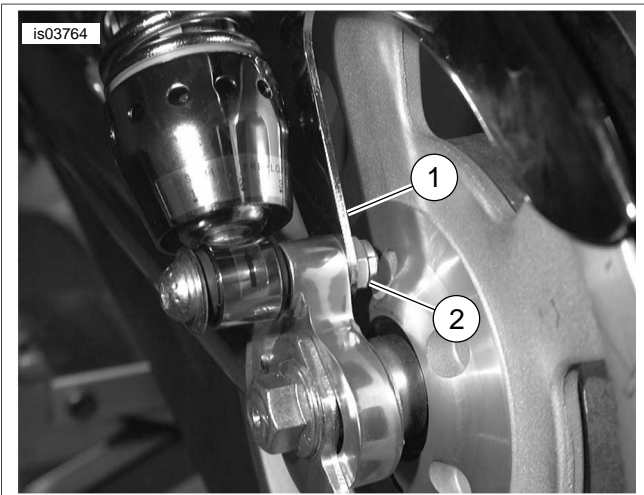

1. Belt guard mounting bracket
2. Locknut

5. Obtain the locknut (2) from kit and install to shock bolt threads securing the belt guard mounting bracket to the swingarm and shock mount.
6. Tighten the shock mounting bolt to 41-68 Nm (35.4-50.2 ft-lbs).
7. Verify clearance between beltguard and sprocket. If required, adjust beltguard away from sprocket to prevent rubbing contact.

Figure 3. Install Locknut to Shock Mount Bolt

