



# INSTRUCTIONS

-J05731

2013-05-31

## BAR & SHIELD WINDSHIELD TRIM

### GENERAL

#### Kit Number

61300275

#### Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of [www.harley-davidson.com](http://www.harley-davidson.com) (English only).

#### Kit Contents

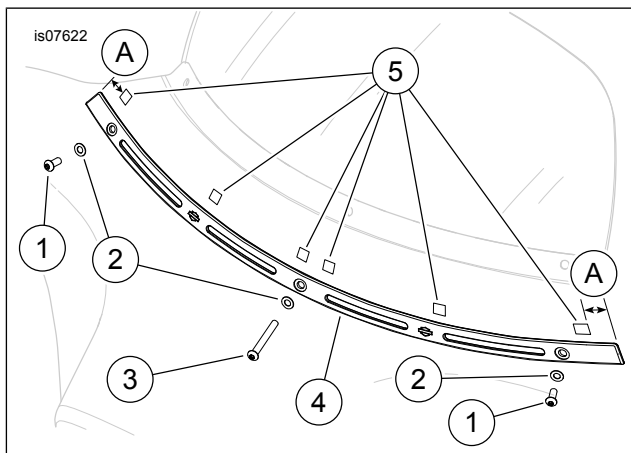


Figure 1. Service Parts: Bar & Shield Windshield Trim Kit

Table 1. Service Parts

Item	Description (Quantity)	Part Number
1	Screw, 1/4-20 x 3/4 inch (2)	4976
2	Washer, stainless (3)	6383
3	Screw, 1/4-20 x 2-1/8 inch	10500034
4	Windshield molding	Not Sold Separately
5	Pad (6)	Not Sold Separately
A	Locate 1/2 inch (13mm) from the end.	

### Additional Parts Required

Separate purchase and installation of additional parts or accessories may be required for proper installation of this kit on your model motorcycle. See the P&A Retail Catalog or the Parts and Accessories section of [www.harley-davidson.com](http://www.harley-davidson.com) (English only) for a list of required parts or accessories for your model.

#### ▲ WARNING

The rider's safety depends upon the correct installation of this kit. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00308a)

### INSTALLATION

1. Remove three screws securing the windshield. Do not remove the outer fairing or windshield. Discard screws.
2. See Figure 1. Adhere six pads (5) to the back of molding (4) at locations shown.
3. Using **new** screws (1, 3) and washers (2) supplied, hold molding in place and start long screw (3) with washer at center of molding. Start remaining two screws and washers.
4. Beginning with the center screw, tighten screws to 2.8–3.3 N·m (25–30 in-lbs).