



# INSTRUCTIONS

-J05338

REV. 2010-11-10

## MID-FRAME AIR DEFLECTOR TRIM

### GENERAL

#### Kit Number

61400028

#### Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of [www.harley-davidson.com](http://www.harley-davidson.com) (English only).

#### Kit Contents

This kit contains a left side and right side mid-frame air deflector trim piece.

There are no Service Parts available with this kit.


### INSTALLATION

1. Without removing the adhesive backing, test the fit of the trim pieces on the mid-frame air deflectors. Note the lip on the trim piece that is designed to engage the front edge of the mid-frame air deflector.
2. Thoroughly clean the mid-frame air deflectors:
  - a. Clean mid-frame air deflectors thoroughly with soap and water and allow to dry.
  - b. Clean the trim mounting area of the mid-frame air deflectors with an approximately 1:1 mixture of isopropyl alcohol and water. Allow to dry completely.
3. Rub the adhesive backings on the trim pieces to activate the adhesive.

#### NOTE

Ambient temperature should be **at least 50 °F (10 °C)** for proper adhesion.

4. See Figure 1. Remove the adhesive backing from a trim piece and install onto the mid-frame air deflector. Start at the top, front corners of the mid-frame deflector and install downward around the mid-frame deflector. Make sure that the lip of the trim piece engages the front edge of the mid-frame deflector. Repeat this step for the opposite side deflector.

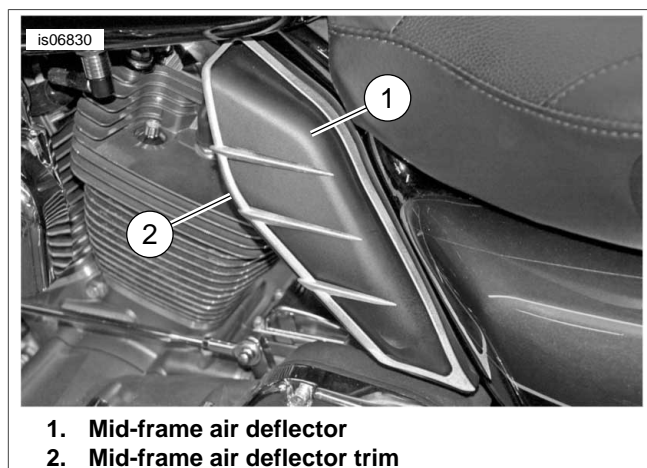

1. Mid-frame air deflector  
2. Mid-frame air deflector trim

Figure 1. Mid-Frame Air Deflector Trim

