



INSTRUCTIONS

-J05705

2013-06-01

TRUNK MOUNT FLAG KITS

GENERAL

Kit Numbers

61400205, 61400206, 61400220

Models

This kit fits all motorcycle models equipped with a Tour-Pak®.

NOTE

Flags are not intended for highway use. The construction of these flags will not hold up to the wind speeds at highway speeds. These flags are designed for parade use only.

Kit Contents


Table 1. Kit Contents

Description (Quantity)	Part Number
Wear pads (2)	94620-98
Flag mast	Not Sold Separately
Flag mast retainer	Not Sold Separately
Rubber pad	61079-82
Flag	Not Sold Separately

INSTALLATION


NOTE

- Wear pads and rubber pads must be installed to avoid damage to the Tour-Pak. Periodically check the mast mounting to verify the mast remains in contact with mounting pads.
 - Water may enter Tour-Pak when flag mast is installed.
1. See Figure 1. Remove adhesive backing from wear pad (1) and install on area where mast base will touch the painted portion of the Tour-Pak.
 2. Attach second wear pad to light bar top taking care to align edge of wear pad to mounting surface of light bar and Tour-Pak.
 3. Attach flag mast to Tour-Pak as shown.
 4. See Figure 2. Cut the self-adhesive rubber pad in half. Remove the backing from the rubber pads and install on the inside of the Tour-Pak on each side of the flag mast (1).

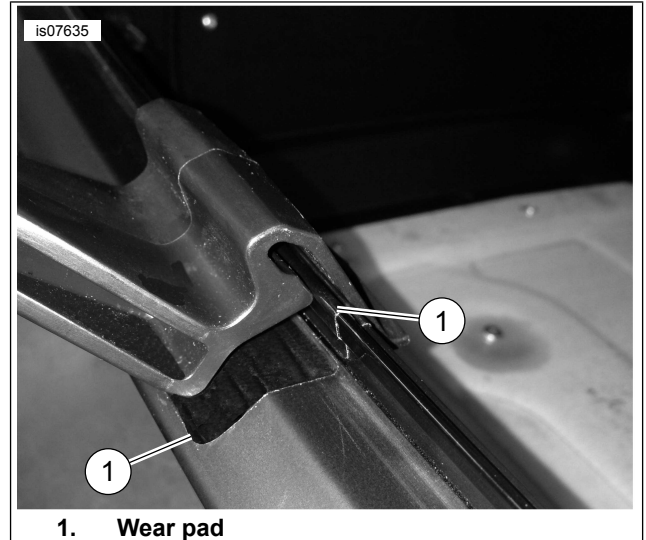

1. Wear pad

Figure 1. Install Wear Pad on Tour-Pak

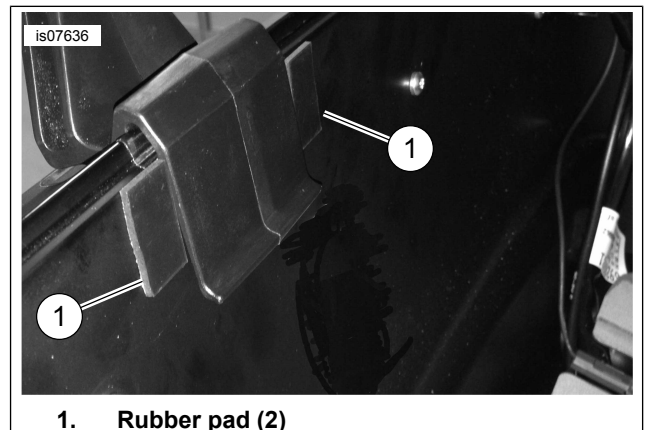

1. Rubber pad (2)

Figure 2. Install Rubber Pads on Interior of Tour-Pak

