



INSTRUCTIONS

-J05913

2013-11-01

MUFFLER END CAP KIT

GENERAL

Kit Numbers

65100056

Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

Kit Contents

See Figure 1 and Table 1.

INSTALLATION

1. See Figure 1. Remove the original muffler end cap. Retain the three clip nuts (A). See the service manual.
2. Slide the three clip nuts (A) onto the bosses of the end cap mounting ring (2).
3. Install mounting ring into end cap (1). Align holes.
4. Align holes in end cap (1) with those in muffler (B). Slide end cap into muffler body.
5. Install the three screws (3). Tighten securely.

NOTICE

Wipe all fingerprints off of exhaust system components after installation and before starting engine. Oil from hands can leave permanent marks on exhaust system finish. (00346a)

6. Wipe end cap and muffler to remove fingerprints and any other oils or dirt.

SERVICE PARTS

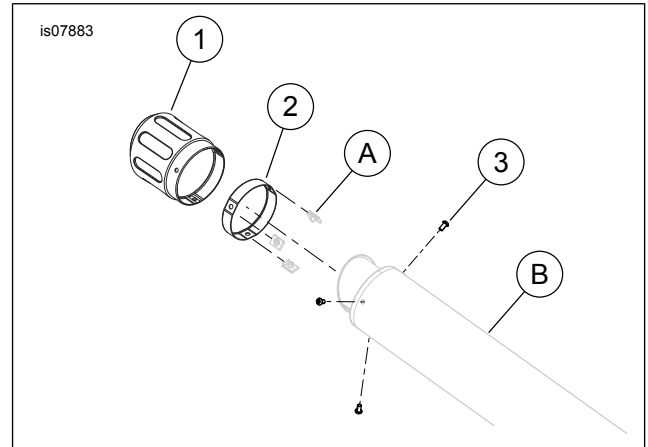


Figure 1. Kit Contents: Muffler End Cap

Table 1. Kit Contents

Item	Description (Quantity)	Part Number
1	End cap	not serviced separately
2	Mounting ring	not serviced separately
3	Screw M6 X 1.0 X 14 (3)	not serviced separately
Items mentioned but not included in kit		
A	Clip nuts	10400025
B	Muffler	

