



INSTRUCTIONS

-J02436

REV. 5-6-02

Kit Numbers 69305-02, 69306-02, 69307-02 and 69308-02

CLEAR/SMOKED DOMED OR FLAT TURN SIGNAL LENS KITS

General

Kit Numbers 69307-02 and 69308-02 are designed for installation on all 1986 and later Harley-Davidson Motorcycles equipped with flat lens style turn signals.

Kit Numbers 69305-02 and 69306-02 are designed for installation on 1986-2001 Harley-Davidson Motorcycles equipped with domed lens style turn signals.

See Service Parts Illustration for kit contents.

Installation

NOTE

A Service Manual for your motorcycle is available from your Harley-Davidson Dealer.

1. See Figure 1. Remove existing turn signal lenses and discard. Retain lens mounting screws for installation.
2. Remove bulbs from turn signal assemblies.
3. Obtain new amber bulbs from kit. Install bulbs marked **1157A** (Dual Filament) to the front turn signal assemblies.

Install bulbs marked **1156** (Single Filament) to the rear turn signal assemblies.

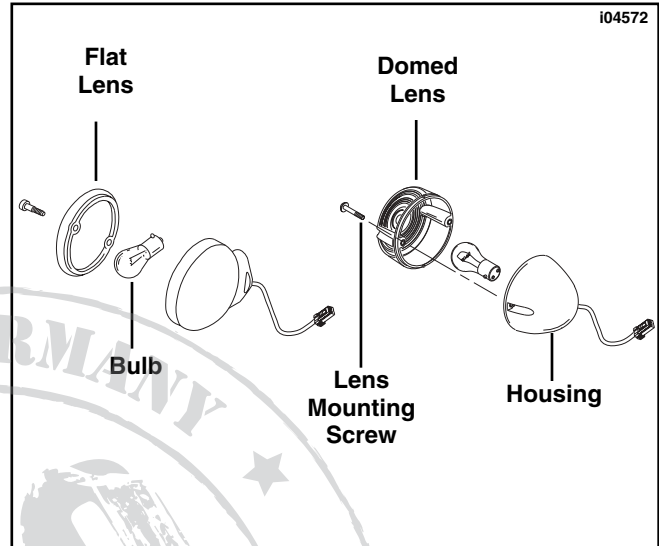


Figure 1. Flat and Domed Lens Turn Signals


4. Refer to Figure 1. Using screws saved during removal, install the new turn signal lenses to front and rear turn signal assemblies.
5. Check turn signals for proper operation.



Service Parts

Part No. 69305-02 and Others | Date 5/02
Clear/Smoked Domed and Flat Lens Kits

i04573

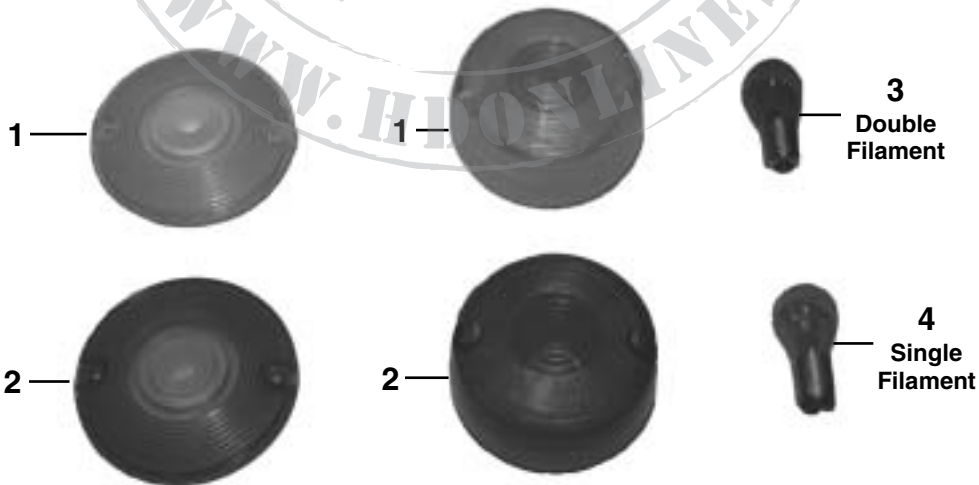

Item	Description	Part Number	Item	Description	Part Number
<i>Kit 69307-02</i>			<i>Kit 69305-02</i>		
1	Clear lens, flat, front and rear (4)	69328-02	1	Clear lens, domed, front and rear (4)	69326-02
<i>Kit 69308-02</i>			<i>Kit 69306-02</i>		
2	Smoked lens, flat, front and rear (4)	69329-02	2	Smoked lens, domed front and rear (4)	69327-02
3	Bulb, amber (front) (2)	69331-02	3	Bulb, amber (front) (2)	69331-02
4	Bulb, amber (rear) (2)	69330-02	4	Bulb, amber (rear) (2)	69330-02