



BAHN SPARK PLUG-HEAD BOLT COVERS

7242

THANK YOU FOR CHOOSING KÜRYAKYN!

PROTECT YOURSELF AND OTHERS FROM POSSIBLE INJURY AND PROPERTY DAMAGE OR LOSS. PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS, AND NOTICES REGARDING THE INSTALLATION, USE, AND CARE OF THIS PRODUCT.



THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.



This indication alerts you to the fact that ignoring the contents described herein can result in minor or moderate potential injury.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Front Head Bolt Cover
- 1 Rear Head Bolt Cover
- 1 Hardware Kit containing:
 - 4 Mounting Caps
 - 8 #10-32 X 1/4" Set Screws
 - 4 #10-32 X 3/8" Socket Head Cap Screws
- 1 Installation Instructions

TOOLS SUGGESTED:

Set of hex wrenches

NOTICE

These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future reference.

STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Allow the engine and exhaust system to cool.



YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.



Working around the sharp edges of the cylinder-head fins exposes your hands to injury. Wear protective gloves to prevent serious injury.

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.

• Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn
454 County Road V V
Somerset, WI 54025-9031
Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



STEP 2 Refer to **PIC 1**. Loosely install two of the included Set Screws into each of the Mounting Caps. Install one of the Mounting Caps on each headbolt. Push down on the Caps to hold them tight against the headbolts, then tighten the Set Screws securely.

STEP 3 Refer to **PIC 2**. Determine the Front and Rear Bahn Spark Plug Head Bolt Covers. The Covers are marked FRONT and REAR on the underside.



STEP 4 Refer to **PIC 3**. Place the Front Bahn Spark Plug Head Bolt Cover over the front Mounting Caps. Secure the Cover to the Caps with the included #10 Socket Head Cap Screws; leave the screws loose until both have been started in their threads.

STEP 5 Holding the Cover centered in the spark plug opening and sitting level to the head, tighten the Socket Head Cap Screws securely.

STEP 6 Repeat **STEPS 4 and 5** for the rear Cover.

NOTE: **Disconnecting the spark plug wires may ease installation.**

It is not necessary to remove the Covers when replacing spark plugs.

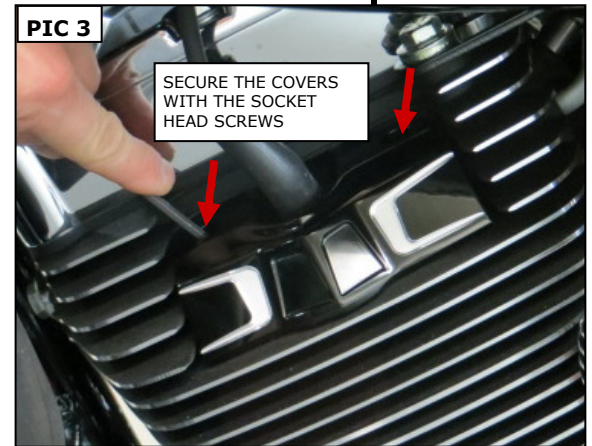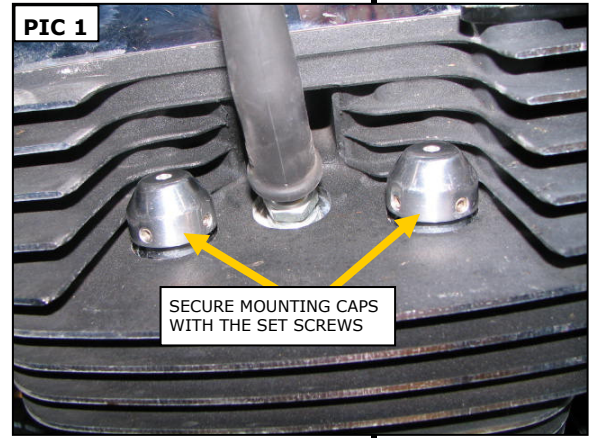

NOTICE

It is the end user's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

TIPS FOR PROPER CARE:

Your new BAHN product is made out of anodized aluminum. Anodized aluminum requires special attention when cleaning. Some cleaning products or procedures can actually remove the anodized treatment which will lead to pitting in the aluminum.

Thoroughly clean the BAHN product often with a soft cloth, mild soap and water. Regular cleaning keeps contaminants from building up.

Rinse thoroughly with FRESH water.

Use only metal protection products that are formulated for anodized aluminum.

DO NOT USE bleach or chlorides to clean the BAHN product.

DO NOT USE products containing abrasives to clean the BAHN product. **Never** use steel or brass wool, wire brushes, polishing wheels, rubbing or polishing compounds on the Bahn product.

DO NOT USE concentrated alkaline based solutions to clean the BAHN product. Many detergents are alkaline based.