



INSTALLATION

L.E.D. REAR SADDLEBAG ACCENTS

7263

PARTS INCLUDED

- 2 Black Housing/Smoke Lens L.E.D. Rear Saddlebag Accents
- 1 Hardware Kit Containing:
 - 4 12" Pieces of Hold-Down Tape
 - 1 Dielectric Grease Pack
 - 4 6" Black Nylon Cable Ties
 - 2 Alcohol Pads
 - 1 8-Pin Wiring Adapter
 - 4 Cord Keepers—**Optional use—Step 12**
 - 2 3-Pin Male Connectors
 - 2 Rubber Grommets
 - 6 Female T-Tap Connectors
 - 6 Insulated Male Spade Connectors
 - 1 3-Pin Wiring Adapter— **For use on 2010-Up FLHX, FLTRX, FLTR**
 - 2 Warning Labels
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
NOTICE	This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product it is being attached to.
CAUTION	This indication alerts you to the fact that ignoring the contents described herein can result in minor or moderate potential injury.

TOOLS SUGGESTED

Drill and Drill Bits, Phillips Screwdriver, Center Punch, Masking Tape, Wire Crimper, Side Cutter, Test Light

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

NOTICE

IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

NOTE: Pictures shown of Chrome parts. Installation of Black parts will be the same.

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.

- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.

- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



kuryakyn.com



YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

NOTICE

Due to manufacturing and assembly variances, some adjustments may be necessary after the initial installation to achieve proper fit and/or function. Kuryakyn recommends "mocking up" components secured with non-removable fastening devices, such as double-sided tape or silicone, before full installation.

STEP 2 Thoroughly clean the back surface of both saddlebags. PIC 1

NOTICE

Ensure the area of installation is free of grease, oil, dirt or other debris including wax/polish products and bugs to ensure proper adhesion. Kuryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

STEP 3 Place one of the Accents on the rear of the right saddlebag. The top of the Accent will fit up to the lip on top of the bag. PIC 3 Decide if you would like to center (on bikes with short turn signal bar) the Accent on the bag or offset it (on bikes with long turn signal bar) to the outside of the bag. PIC 2 (**You may want to use a couple pieces of masking tape to temporarily hold the Accent in place, stand back, and check to see which location appeals to you the best.**)

STEP 4 Making sure the Accent is straight top to bottom and in the location chosen in Step 3, make reference marks along both sides of the top of the Accent and along both sides of the Accent. PIC 3

STEP 5 Remove the Accent from the saddlebag. Place a piece of tape between the two top reference marks. PIC 4 Measure the distance between the top reference marks made and mark the center. Measure down from the top lip of the saddlebag approximately 1/2" at this location and make a reference mark using a center punch. PIC 4

NOTICE

MEASURE TWICE – DRILL ONCE. Double check all reference marks made on the saddlebag and that there is nothing inside the saddlebag BEFORE drilling. Kuryakyn will not be responsible for incidental or consequential damages resulting from this installation.

STEP 6 Using a drill with a 1/4" bit, carefully drill a hole at the mark made with the center punch in Step 5. **Drill slowly, using light pressure, the saddlebag will drill easily.**

STEP 7 Remove the tape from around the hole just drilled and using one of the included alcohol pads, thoroughly clean the installation area to remove any residue. Let dry completely.







STEP 8 Rub the backing on the Accent with the back of your fingernail to activate the adhesive. Remove the backing. Insert the wire harness from the Accent through the hole just drilled. Using the reference marks made in Step 4, attach the Accent to the back of the saddlebag. Press in place for one minute, full bonding will occur in 24 hours.

STEP 9 Repeat Steps 3 through 8 for the left saddlebag and the other Accent.

NOTE: If the motorcycle is to be operated before the 24 hour cure time has expired, use a good quality masking or painter's tape over the Accent to assist in holding the Accent in place until the cure time is over.

NOTICE

Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.

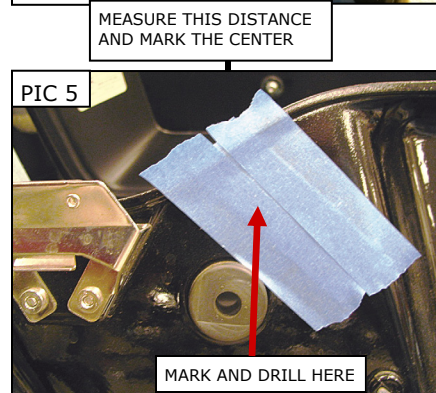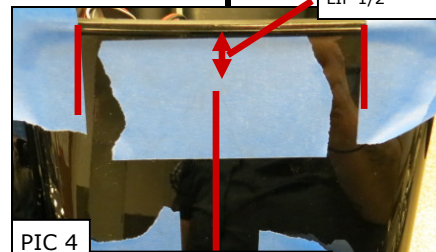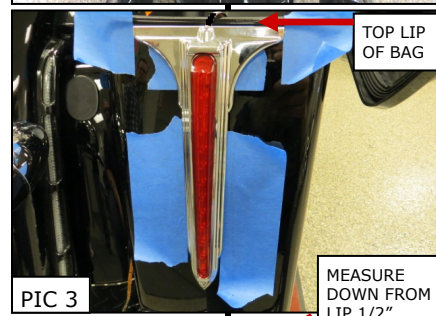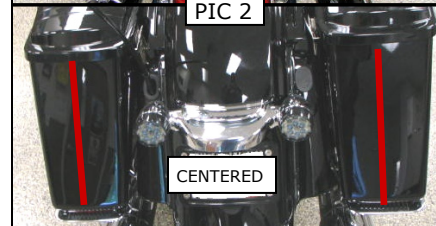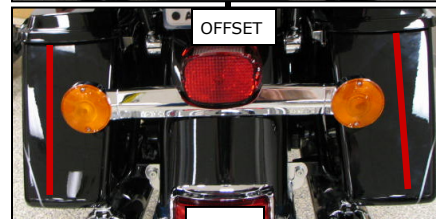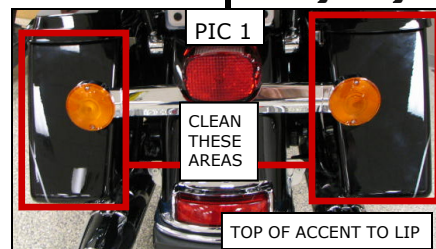

-cont.-

STEP 10 Remove the saddlebags, placing them on a soft cloth or blanket.

STEP 11 Place a piece of masking tape in the front inner portion of the saddlebag as shown in PIC 5. Make a mark in each saddlebag with a center punch in the masking tape. Drill a 3/8" hole in the back side of each saddlebag.

STEP 12 Starting from where the wire harness from the Accent enters at the top of the rear of the saddlebag, cover the wire harness around the inside wall of the saddlebag to the hole drilled in Step 11 with the included tape. (You may also use the included cord keepers to secure the harness in the bag.)

STEP 13 Place a one of the included rubber grommets in each of the holes drilled in Step 11 and thread the excess wire harness through the rubber grommet. PIC 6

NOTE: For '10-up Road Glides & Street Glides, skip to STEP 18. The included 3-Pin wiring adapter is required for this installation.

NOTE: For '93-'96 models, it will be necessary to hardwire the lights, skip to STEP 24.

NOTICE Kuryakyn recommends the use of dielectric grease on electrical connections used in the following sections.

Wiring for '97 and Later FLHT, FLHR, FLHTK Models

STEP 14 Re-install the saddlebags. Remove the seat from the motorcycle and locate the main taillight harness. PIC 7

STEP 15 Disconnect the wiring harness. Place a small amount of dielectric grease on the 8-pin connections from the main taillight wiring harness and plug the 8-Pin wiring adapter into the ends of the main taillight harness.

NOTE: If there is a run-turn-brake controller installed, the wiring adapter needs to be installed upstream (in front) of the controller. The installation order MUST BE main harness from front of bike, then the 8-Pin wiring adapter, then the controller, finally the taillight harness.

STEP 16 Route the wires from the saddlebags under the seat. Use the included cable ties to secure the wires away from pinch points, extreme heat or moving parts.

NOTICE Secure all wiring away from any moving parts, pinch points or extreme heat. Kuryakyn WILL NOT warranty any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

STEP 17 Locate the male three pin connectors from the hardware kit. Connect the male connector to one of the female three pin connectors from the wiring adapter. PIC 8 Install the pins on the Accent wire harness (PIC 9) as follows:






ACCENT HARNESS	WIRING ADAPTER
WHITE	RED
BLACK	BLACK
RED	BLUE

NOTE: Push the wires into the male connector until you feel them lightly click. Gently pull on each wire after the click to ensure they are locked into place.

Wiring for '10 and Later FLHX and FLTRX Models

STEP 18 Remove the left side cover to expose the wiring harness. Locate the coiled up harness with the black three pin connector. PIC 10

-cont.-

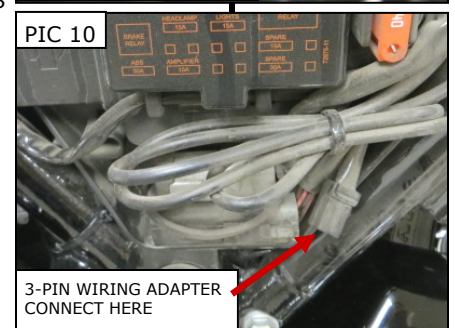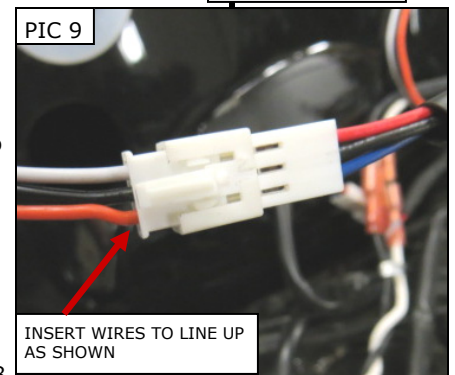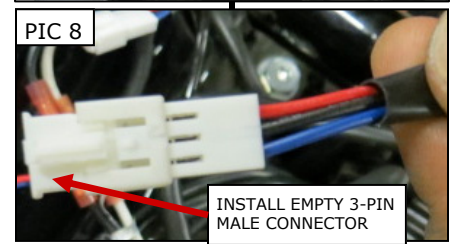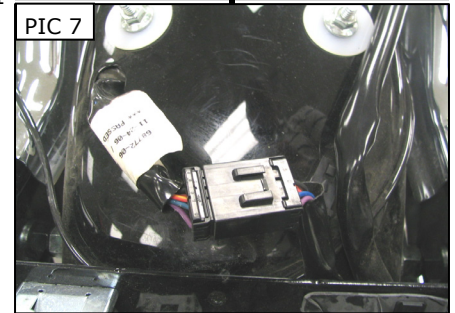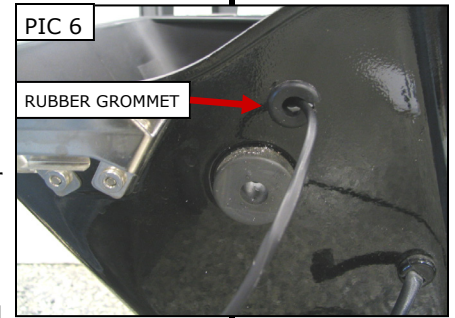

STEP 19 Place a small amount of dielectric grease on the three pin connector and plug it into the included 3-Pin wiring adapter.

STEP 20 Remove the seat to provide proper space, and route the adapter wire to the right side of the bike. Use the included cable ties to secure the harness out of the way.

NOTICE Secure all wiring away from any moving parts, pinch points or extreme heat. Kuryakyn WILL NOT warranty any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

STEP 21 Locate the male three pin connectors from the hardware kit. Connect the male connector to one of the female three pin connectors from the wiring adapter. PIC 8 Install the pins on the Accent wire harness (PIC 9) as follows:

ACCENT HARNESS	WIRING ADAPTER
WHITE	RED
BLACK	BLACK
RED	BLUE

NOTE: Push the wires into the male connector until you feel them lightly click. Gently pull on each wire after the click to ensure they are locked into place.

STEP 22 Test mount the left saddlebag to determine how much excess of the 3-Pin wiring adapter harness you will need reach each Accent light. Once you have determined the amount of harness needed, use the included cable ties to secure the excess under the left side cover. Replace the side cover and mount both saddlebags. Locate the other male three pin connector from the hardware kit and repeat Step 21 for the wires from the other Accent. Proceed to Step 29.

Wiring for '93-'96 Models and CVO Models with Saddlebag Filler Panel Taillights

STEP 23 Cut the two pigtails with the three pin connectors from the supplied wiring adapter as close to the connection point as possible. PIC 11 The remaining 8-Pin Connectors and harness will not be used.

STEP 24 Using wire strippers remove a small amount of insulation from the cut ends of the wires. Insert the exposed end of each wire into an included insulated male spade connector and crimp the end. PIC 12 make sure that the wire is secure in the spade.




STEP 25 Re-install the saddlebags. Remove the seat from the motorcycle and locate the main taillight harness.

STEP 26 **On '93-'96 models:** Place two each of the female T-Tap connectors over the black, red and blue wires in the OEM main taillight wiring harness; close the connectors ensuring that the tabs are engaged as shown in PIC 13.

NOTE: If there is a run-turn-brake controller installed, the female T-Taps need to be installed upstream (in front) of the controller. The installation order must be main harness from front of bike with the female T-Taps installed, then the controller, finally the taillight harness.

On CVO Models: Determine the input side of the main harness. This will be the end coming under the frame from the front of the motorcycle. PIC 14 Place two each of the female T-Tap connectors over the black, red with yellow stripe and blue wires in the OEM main taillight wiring harness; close the connectors ensuring that the tabs are engaged as shown in PIC 13.

NOTE: If there is a run-turn-brake controller installed, the female T-Taps need to be installed upstream (in front) of the controller. The installation order must be main harness from front of bike with the female T-Taps installed, then the controller, finally the taillight harness.

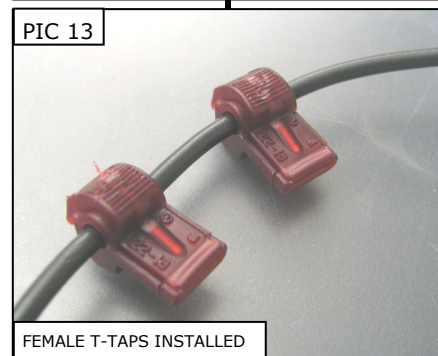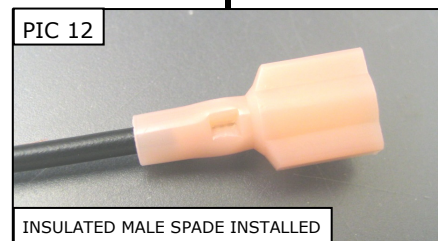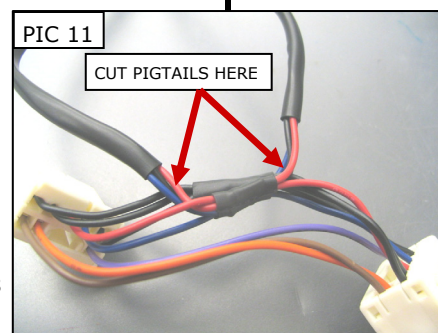

USE THE WIRES ON THIS END OF THE CONNECTOR

STEP 27 Place a small amount of dielectric grease on the female T-Tap connectors; insert the insulated male spade connectors from the **BLACK** wires into the female T-Tap connectors that were installed on the **BLACK** wire, the insulated male spade connectors from the **RED** wires to the female T-Taps on the **RED or RED WITH YELLOW STRIPE** wire and the insulated male spade connectors on the **BLUE** wires to the female T-Taps on the **BLUE** wire in the taillight harness. Use the included cable ties to secure the excess wiring out of harms way.

NOTICE Secure all wiring away from any moving parts, pinch points or extreme heat. Kuryakyn **WILL NOT** warranty any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

STEP 28 Locate the male three pin connectors from the hardware kit. Connect the male connector to one of the female three pin connectors from the wiring adapter. PIC 8 Install the pins on the Accent wire harness (PIC 9) as follows:

ACCENT HARNESS	WIRING ADAPTER
WHITE	RED
BLACK	BLACK
RED	BLUE

NOTE: Push the wires into the male connector until you feel them lightly click. Gently pull on each wire after the click to ensure they are locked into place.

Finishing all Installations

STEP 29 Start the motorcycle and test to make sure that the lights function as both running lights and brake lights.

WARNING ENSURE PROPER LIGHT OPERATION BEFORE RIDING THE MOTORCYCLE. VISIBILITY IS A MAJOR CONCERN FOR MOTORCYCLISTS. A LIGHT MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY.

STEP 30 Place the warning stickers on the inside of the bags as shown in PIC 15 to serve as a reminder to prevent the wires from being damaged when the saddlebags are removed from the motorcycle.

STEP 31 Replace the seat.

WARNING AFTER INSTALLING THE SEAT, PULL UP ON IT TO ENSURE IT IS LOCKED INTO PLACE. A LOOSE SEAT CAN SHIFT AND CAUSE LOSS OF CONTROL RESULTING IN SERIOUS INJURY OR DEATH.

