

7348

BAHN IGNITION SWITCH COVER, '14-UP TOURING & TRIKE, CHROME

INFORMATION AND SUPPORT

INFO@BAHNPRODUCTS.COM

866 294 2827

⚠ WARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Bahn Ignition Switch Cover
- 2 Foam Tape
- 1 Hardware Kit containing:
 - 2 Foam Tape
 - 1 Alcohol Pad
- 1 Installation Instructions

YOU WILL ALSO NEED:

Warm, soapy water and a clean rag, small pick tool.

NOTICE

These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future reference.

STEP 1 Read and understand all **STEPS** in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn **IGN OFF**. Remove the main fuse.

⚠ WARNING

ACCIDENTAL VEHICLE START-UP COULD CAUSE DEATH OR SERIOUS INJURY, REMOVE THE MAIN FUSE BEFORE PROCEEDING.

STEP 2 Refer to **PIC 1**. Using a small pick tool, remove the existing ignition switch insert; set it aside it will not be reused.

STEP 3 Refer to **PIC 1**. Using warm soapy water and a clean rag, remove all dirt and debris from the installation area; allow the area to dry completely. Wipe the installation area with the included alcohol pad to remove any wax or polish; allow the area to dry completely.



7348

BAHN IGNITION SWITCH COVER, '14-UP TOURING & TRIKE, CHROME

INFORMATION AND SUPPORT

INFO@BAHNPRODUCTS.COM

866 294 2827


NOTICE

Ensure proper adhesion of this product. Remove debris (including wax and polish) from the installation area. Küryakyn will not provide warranty coverage on products lost or damaged due to improper installation.

Do not attempt this installation in temperatures below 50° F. Proper adhesive bonding **ONLY** occurs above 50° F. Allow the engine to cool to room temperature.

STEP 4 Test fit the Accent as shown in **PIC 2**; remove the Accent.

Remove any free play between the Cover and the ignition switch by applying one or both of the included Foam Tape strips to the inside of the Cover. Ensure that the inside surface of the Cover is clean and dry and the adhesive backing has been prepared (see below).

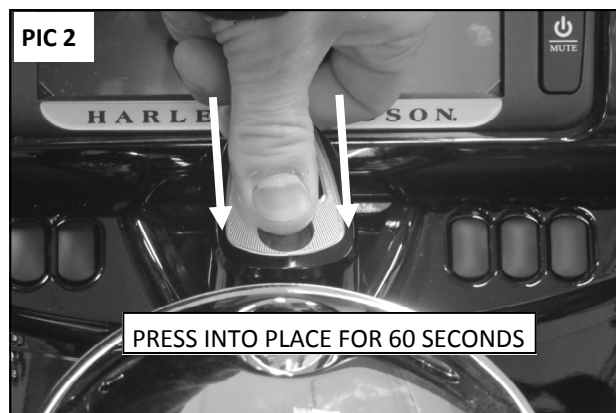

STEP 5 Use your fingernail to rub the adhesive backing; this will activate the adhesive. Remove and discard the backing.

STEP 6 Refer to **PIC 2**. Align the Accent and press it into place for one minute; full bonding will occur after 24 hours. Remove and discard the masking tape.

STEP 7 Reinstall the main fuse.

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials & workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

1. Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
2. The product must be properly installed, maintained & operated under normal conditions.
3. Küryakyn shall not be liable for any consequential & incidental damages, including labor & paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Küryakyn & a customer.
4. Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
5. Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'s contained in components of Küryakyn products will be warranted for defects in materials & workmanship for 3 years from the date of purchase where as all other components shall be warranted for one (1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
6. Exhaust systems are warranted for manufacturing defects only. There is no warranty on exhaust pipes & mufflers with regard to any discoloration. Discoloration or "blue-ing" is caused by tuning characteristics, exhaust timing, carburetor jetting, overheating, etc. & is not caused by defective manufacturing.
7. Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer & where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.
8. Merchandise purchased directly from internet auction sites or any other third party seller is considered sold as is & shall not carry a Küryakyn warranty. All warranty claims must be directed to the original seller. If unsure please contact the seller to verify they are an authorized Küryakyn retailer.