



# INSTALLATION

## FLIP BLADES HIGHWAY PEGS

## 7541

### PARTS INCLUDED

- 1 Right Hand Flip Blade Highway Peg
- 1 Left Hand Flip Blade Highway Peg
- 1 Right Hand Stiffener Plate—Swept Wing Boards
- 1 Left Hand Stiffener Plate—Swept Wing Boards
- 1 Hardware Kit Including:
  - 10 1/4"-20 x 5/8" Button Head Cap Screws
  - 8 1/4" Flat Washers
  - 6 1/4"-20 Nylock Nuts
  - 2 #10-32 x 3/8" Set Screws
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

### THANK YOU FOR CHOOSING KÜRYAKYN!

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**WARNING** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**NOTICE** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

**CAUTION** This indication alerts you to the fact that ignoring the contents described herein can result in potential injury.

**NOTICE** IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.

### TOOLS SUGGESTED

Set of Hex Wrenches, Combination Wrenches or Socket Set and Ratchet, Screwdrivers, Drill Bits, Drill, Center Punch, Pliers, Side Cutters/Knife, Blue Loctite

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

**WARNING** YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

### CUSTOMER SERVICE

877.370.3604 (toll free)

### INSTALLATION QUESTIONS

techsupport@kuryakyn.com  
or call 715.247.2983

### LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
  - The product must be properly installed, maintained and operated under normal conditions.
  - Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
  - Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Küryakyn and a customer.
- Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Küryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.

• Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### ABOUT OUR CATALOG

For purchasing Küryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Küryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.




kuryakyn.com

**WARNING**


THIS ASSEMBLY IS ONLY AS STRONG AS THE OEM COMPONENTS IT IS ATTACHED TO. ADDING THIS FOOTREST POSITION CAN INCREASE LEVERAGE ON THE OEM EQUIPMENT. THIS ACCESSORY IS INTENDED AS A FOOT REST ONLY. DO NOT STAND ON, OR APPLY EXCESSIVE FORCE TO THESE PEGS.

**STEP 2** Starting with the left side, remove the footboard pad from the base by gently pulling up on the rubber pad while simultaneously pushing on the rubber darts (PIC 1) protruding from the underside of the footboard assembly.

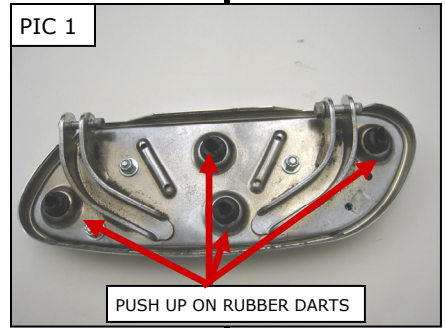

**NOTE:** It will be easier to fully remove the floorboard before attempting to drill any of the holes.


**STEP 3** Lay the stiffener plates on the footboard base as shown PIC 2. Make sure that you place the stiffener plate with the two Flip Blade mounting holes to the front of the board. PIC 2 Use this plate as a template to mark the position of the five mounting holes. PIC 2 Use a center punch or felt tip pen to mark the hole positions.

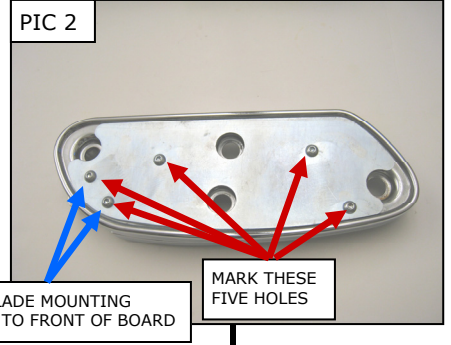


**NOTICE**

**MEASURE TWICE – DRILL ONCE.** Double check all reference marks made on the floorboard base BEFORE drilling. Kuryakyn will not be responsible for incidental or consequential damages resulting from this installation.

**STEP 4** Once the holes are clearly marked, remove the plate and use at least a 1/4" drill bit (or slightly oversized drill bit for tolerance) to drill all five of the holes.

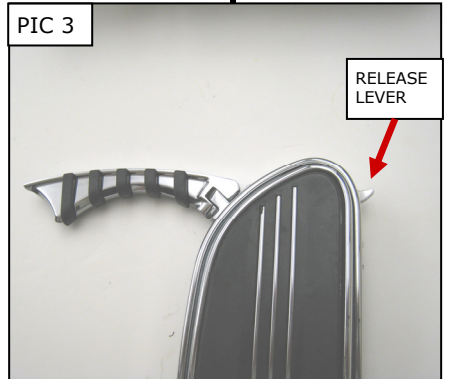

**STEP 5** Loosely install the stiffener plate using the three rear mounting holes making sure that the two Flip Blade mounting holes are to the front of the board (PIC 2). Insert the 1/4"-20 x 5/8" button socket cap screws through the stiffener plate and base. Secure with the 1/4" flat washers, and nylock nuts from the bottom. PIC 2

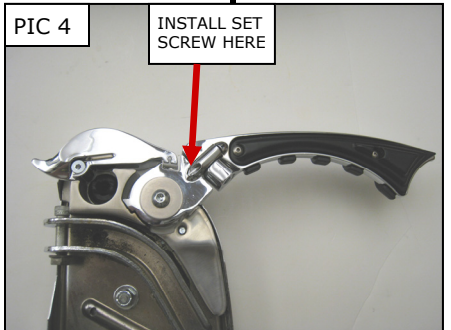

**STEP 6** Place the Left flip blade under the footboard so its mounting holes line up with the forward two mounting holes. PIC 2 Place a drop of Blue Loctite on two of the 1/4"-20 x 5/8" button socket cap screws and install them from the top through the stiffener plate, through the floorboard base and into the mount on the bottom of the floorboard base.

**STEP 7** Tighten all five mounting bolts securely.

**STEP 8** Wet the Isolators with soapy solution and reinstall the rubber pad to the steel footboard base. You may have to carefully pull the rubbers through the holes in the base with pliers.

- STEP 9** Install one of the included #10-32 X 3/8" set screws into the location shown in PIC 4. This set screw will allow you to fine tune the footpeg angle. Raise the end of the footpeg by tightening the set screw. Loosening it will lower the end of the peg. **Always check to make sure the footpeg will fully retract under the floorboard after angle adjustment.**

**NOTICE**

**It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.**

- STEP 10** Reinstall the board back to the bike after all the Flip Peg fasteners have been tightened. Tighten the board mounting fasteners securely.

- STEP 11** Repeat all steps for opposite side.

- STEP 12** To open the Flip Blade simply reach down and physically flip it out with your hand. To close you will have to press the release lever (PIC 3) to unlock the arm and fold it in.

**WARNING** MAKE SURE THE NEW FOOT POSITION WITH THE FLIP BLADES OPEN DOES NOT INTERFERE WITH THE OPERATION OF THE FOOT CONTROLS. INTERFERENCE WITH THE FOOT CONTROLS MAY CAUSE LOSS OF CONTROL RESULTING IN SERIOUS INJURY OR DEATH.

**WARNING** DO NOT ATTEMPT TO OPEN OR CLOSE THE FLIP BLADES WHILE THE MOTORCYCLE IS IN MOTION.

**WARNING** CHECK TO MAKE SURE THAT THERE IS PROPER GROUND CLEARANCE FOR CORNERING. LOSS OF CONTROL OF THE MOTORCYCLE AND SERIOUS INJURY MAY OCCUR IF THERE IS INADEQUATE CORNERING CLEARANCE.

**CAUTION** Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.