



INSTRUCTIONS

-J04773

REV. 2008-06-26

SHORT CB ANTENNA MAST

GENERAL

Part Numbers

76386-08, 76386-09

Models

These masts fit Touring model motorcycles with Tour-Pak® mounted CB antennas.

Mast 76386-08 fits 1998 through 2008 models.

Mast 76386-09 fits 2009 and later models.

The antennas are similar in appearance. See Figure 1 for identifying features.

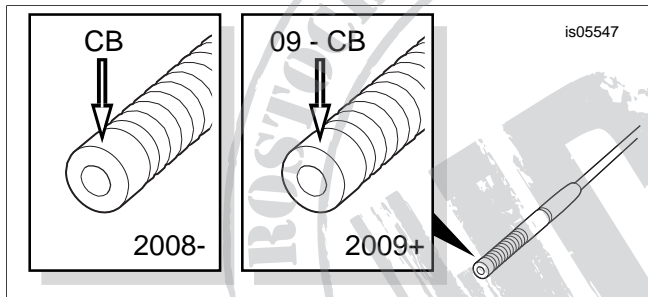


Figure 1. CB Antenna Mast Identification

Additional Parts Required

1998 through 2008 models require use of the original equipment (OE) load coil.

2009 and later models DO NOT require use of a load coil.

Kit Contents

There are no service parts available with this kit.

INSTALLATION

1. **2008 and earlier models:** Use a 2 mm hex key to loosen the **bottom** set screw of the antenna mast.

ALL models: Unscrew the antenna mast from the antenna base.

2. Thread the **new** antenna mast onto the threads of the antenna base.

IN SERVICE

2008 and earlier models: If a degradation of CB performance is detected:

1. Open the Tour-Pak.
2. Open the map pocket (if present), and remove the acorn nuts with flat washers. Remove the map pocket and molded liner from the Tour-Pak.
3. Check the routing of the load coil wiring (see Figure 2). Wire routing other than as shown can cause a degradation of the CB signal.

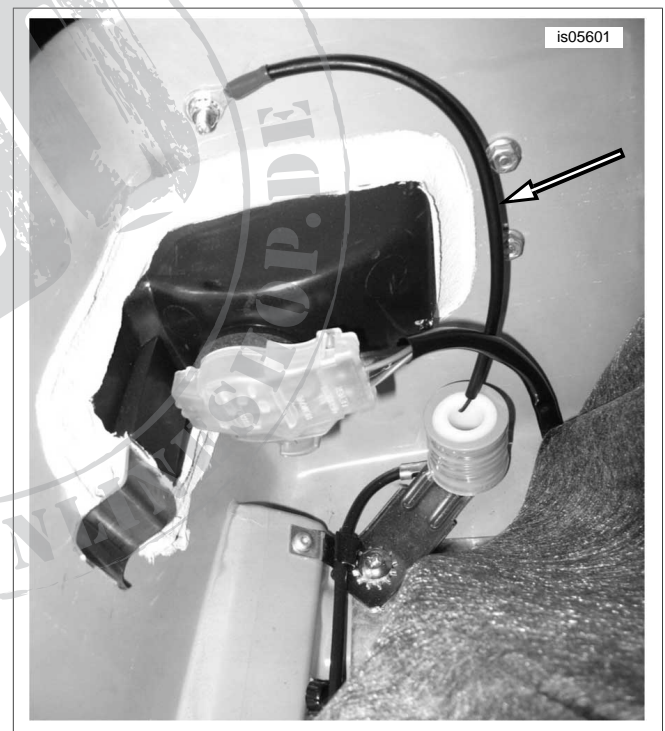


Figure 2. CB Load Coil Wire Routing