



INSTALLATION

CRUISE PEG MOUNT FOR XL

7868

FITS: '04-UP SPORTSTER MODELS

PARTS INCLUDED

- 2 Cruise peg bar outer clamp
- 2 Cruise peg bar inner clamp
- 1 Cruise peg weld tube
- 2 Cruise peg clevis
- 1 Mount plate
- 1 P-clamp (1-3/8" to 1-1/2")
- 1 Hardware Kit, including:
 - 4 5/16-18 x 5/8 socket head cap screw
 - 2 3/8-16 x 3/4 socket head cap screw
 - 2 3/8-16 x 1 socket head cap screw
 - 2 5/16-18 x 1 socket head cap screw
 - 4 3/8 Wave washer
 - 2 3/8-16 x 3/4 button head cap screw
 - 1 1/4-20 x 1 button head cap screw
 - 1 1/4-20 Flange nut
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

PLEASE NOTE

It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

ATTENTION! A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all the steps in the procedure; consult a trained technician.

CAUTION! AVOID LOSS OF CONTROL. ENSURE PROPER CLEARANCE OF THE BRAKE PEDAL AND THE SHIFT LEVER BEFORE OPERATION.

TOOLS SUGGESTED

Set of hex wrenches, set of combination wrenches.

PROCEDURE

STEP 1 Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

STEP 2 Gently bend the aluminum P-clamp insert enough to fit around the right side frame down tube (rider's perspective); install the insert just above the cross brace on the right down tube.

-cont.-

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



STEP 3 Install the P-clamp over the aluminum insert. The "leg" of the P-clamp should face inward. See [PIC.1](#).

STEP 4 Install the 10-24 screw into the P-clamp; finger tight for now. See [PIC.1](#).

STEP 5 Position the mount plate against the cross brace on the down tubes; Install the 3/8 fasteners and tighten as shown in [PIC.2](#).

STEP 6 Insert 1/4-20 bolt through the mount plate and P-clamp and secure with the included nut; tighten the bolt and nut. See [PIC.2](#).

STEP 7 Fully tighten the 10-24 fastener installed in STEP 4. Do not over tighten.

STEP 8 Install the rear clamp halves using the 3/8-16 x 3/4 fasteners; snug but do not fully tighten yet. See [PIC.3](#).

STEP 9 Align the rear clamp halves. Place the cruise peg bar into the clamp halves and align the clamps until the bar fully bottoms in the clamp.

STEP 10 Remove the cruise peg bar; tighten the rear clamp half fasteners while keeping the clamps aligned.

STEP 11 While holding the cruise peg bar against the rear clamp halves, install a front clamp half with two 5/16-18 fasteners; snug the fasteners at this time, do not fully tighten.

STEP 12 Install the other front clamp half; snug the fasteners to allow for cruise peg bar adjustment.

STEP 13 Install the clevises at this time. Adjust the clevis so that when folded up the foot peg does not interfere with the brake pedal or shift lever; tighten fastener. See [PIC.4](#) and [PIC.5](#).


NOTE Position the clevis so the peg mount stop is on the topside, regardless of which side the clevis is installed on the bike. (See [PIC.6](#))

STEP 14 Center the bar in the clamps and adjust the height of the foot pegs for comfort. See [PIC.7](#).

PIC.1



PIC.2

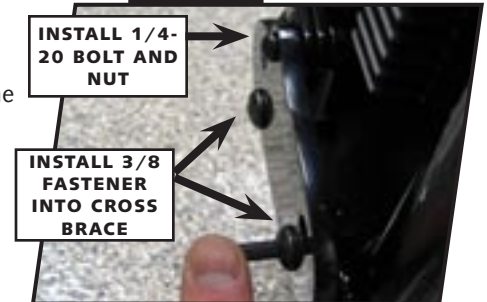

PIC.3



PIC.4



-cont.-


PIC.7



PIC.5



PIC.6

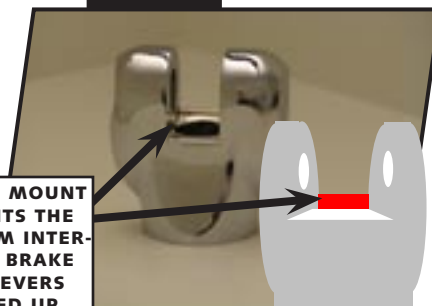

STEP 15 Install your foot pegs onto the Cruise Peg clevises at this point, adjust the pegs for comfort and proper clearance. An assistant can be a big help with tightening fasteners and adjusting pegs while you sit on the bike.

STEP 16 Once proper fit and clearance have been achieved, fully tighten all fasteners.

CAUTION! ENSURE PROPER CLEARANCE OF THE BRAKE PEDAL AND THE SHIFT LEVER BEFORE OPERATION. FAILURE TO DO SO COULD RESULT IN LOSS OF CONTROL, SERIOUS INJURY OR DEATH.

Kuryakyn

Ride On!

PAGE

3

CRUISE PEG MOUNT FOR XL INSTALLATION