



## TRANSMISSION SHROUD SET

## 7877

**FITS: '07-UP TOURING MODELS (DRESSERS, ROAD KINGS, ROAD GLIDE, STREET GLIDE) WITH TRUE DUAL HEAD PIPES**

### PARTS INCLUDED

- 1 Front Transmission Shroud
- 1 Rear Transmission Shroud
- 1 Hardware Kit containing:
  - 4 Stand-Off Studs 5/16"-18 x 1-1/4"
  - 1 1/4-20 x 3/4" Button Head Cap Screw (BHCS)
  - 4 10-24 x 3/8" Button Head Cap Screw
  - 4 5/16 Flat Washers
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

### THANK YOU FOR CHOOSING KÜRYAKYN!

**WARNING!** YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

**ATTENTION!** Some applications will require loosening or removal of the exhaust for installation.

**NOTE** It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

### TOOLS SUGGESTED

Set of hex wrenches, set of combination wrenches or socket/ratchet set, torque wrench.

### PROCEDURE


**STEP 1** Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

**STEP 2** Remove the stock fastener that is in the location marked "A" in PIC.1.

**STEP 3** Install an included stand-off stud with a flat washer in location "A"; torque to 13-18 ft. lbs.

**STEP 4** Remove the stock fastener in location "B"; install an included stand-off stud with a flat washer in location "B". Torque to 13-18 ft. lbs.

-cont.-

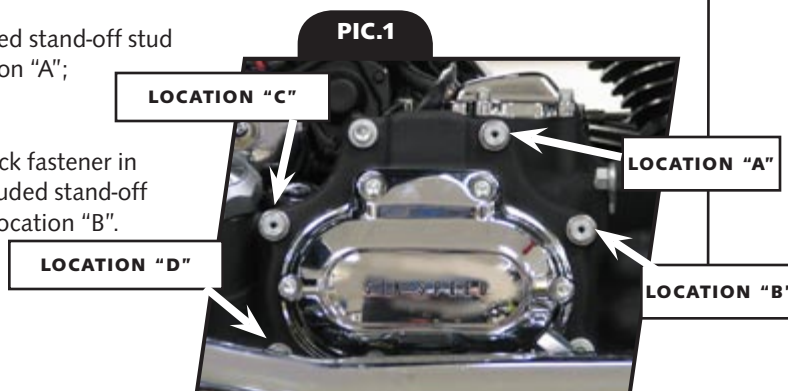

### CUSTOMER SERVICE

877.370.3604 (toll free)

### INSTALLATION QUESTIONS

techsupport@kuryakyn.com  
or call 715.247.2983

### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



**STEP 5** Remove the stock fastener in location "C"; install an included stand-off stud with a flat washer in location "C". Torque to 13-18 ft. lbs.

**STEP 6** Remove the stock fastener in location "D"; install an included stand-off stud with a flat washer in location "D". Torque to 13-18 ft. lbs.

**STEP 7** Slide the Front Transmission Cover into place; first, slide the bottom of the cover behind the exhaust then pivot the cover in until it locates over the stand-offs.

**STEP 8** Slide the Rear Transmission Cover into place.

**NOTE** Temporarily removing the fastener securing the wire clamp, shown in PIC.2, will ease installation. Ensure that the fastener is replaced after the cover has been secured in place.

**STEP 9** Secure the two covers together with the 1/4"-20 x 3/4" BHCS; loosely for now. See PIC.3.

**STEP 10** Install the four 10-24 fasteners through the covers and into the stand-off stud; loosely for now.


**STEP 11** Re-install the wire clamp.

**STEP 12** Ensure proper clearance and alignment of the covers then tighten the 1/4-20 and 10-24 fasteners.

*Ride On!*

**Kuryakyn**

**PIC.2**

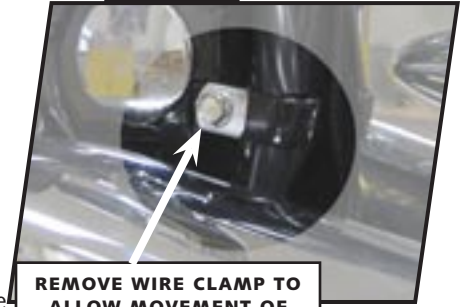

**REMOVE WIRE CLAMP TO ALLOW MOVEMENT OF WIRES.**

**PIC.3**



**PAGE**

**2**

**TRANSMISSION SHROUD SET**

**INSTALLATION**