



MID FRAME COVERS

8239

FITS: '97-'07 ELECTRA GLIDE, ROAD GLIDE, STREET GLIDE, AND ROAD KING

PARTS INCLUDED

- 1 Right Side Chrome Mid-Frame Cover
- 1 Left Side Chrome Mid-Frame Cover
- 1 Hardware Kit Includes:
 - 2 10-32 Well Nuts
 - 2 10-32 x 3/4" Button Socket Head Cap Screw
 - 2 #10 Flat Washer
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KURYAKYN!

PLEASE NOTE

It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

PROCEDURE

STEP 1 Starting with the left side of the bike, remove the saddlebags (if so equipped), seat and side/fuse panel. (See PIC.1)

STEP 2 Remove the Torx bolt that holds the rear of the tank to the frame using your T40 Torx wrench.

STEP 3 The '06 and later models have the wires running through a plastic tunnel. PIC.1A shows where you will need to pry up on the tunnel. This will give you enough room to pull this slightly out of the way to get the well nut and covers in place.

STEP 4 Slide the Left Side Chrome Mid-Frame Cover in place making sure the cover is between the passenger peg mount and the frame.

STEP 5 To insure that your tank does not get scratched, lift the rear of the tank to allow the front of the Chrome Mid-Frame Cover to be placed under it and next to the frame.

-cont.-

PIC. 1



PIC.1A



CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in non-conforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn™ product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.


©2005 Kuryakyn USA™ All Rights reserved.



STEP 6 Fasten the Chrome Mid-Frame Cover (See [PIC.2](#)) by installing the #10-32 well nut into the existing frame hole. Then put the #10 flat washer on the 10-32 x 3/4" button socket head cap screw and put the screw through the top hole of the mid-frame cover. Thread the screw into the well nut and tighten until snug.

STEP 7 Re-install your saddlebag and side panel then repeat STEP 1 through STEP 5 for the right side of the bike. Re-install the Torx bolt you removed in STEP 2 and the seat when finished.

PIC.2

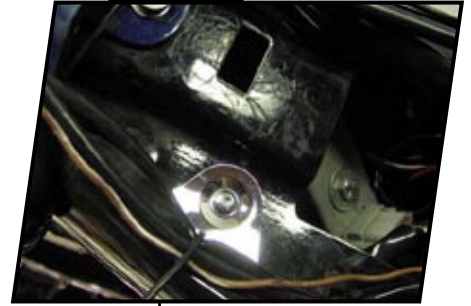

Ride On!

PAGE

2