



# INSTRUCTIONS

-J00502

REV. 2006-11-28

## LEATHER THROW-OVER SADDLEBAGS

### GENERAL

#### Kit Number

91008-82B

#### Models

For model fitment information, please see the P&A Retail Catalog or the Parts and Accessories section of [www.harley-davidson.com](http://www.harley-davidson.com) (English only).

#### Additional Parts Required

This kit requires the separate purchase of Chrome Saddlebag Support Kit.

If the rear turn signals interfere with the mounting of the throw-over saddlebags, a Directional Relocation Kit is required.

Refer to the P&A Retail Catalog at a Harley-Davidson dealer for the appropriate fitment and part number for these kits.

#### Kit Contents

Table 1. Kit Contents

Description (Quantity)	Part Number
Saddlebag, Right	Not Sold Separately
Saddlebag, Left	Not Sold Separately
Buckle Assembly With Male Clip	88305-07
Screw (XL1200N With Solo Seat Only)	2420
Washer (XL1200N With Solo Seat Only)	7230
Leather Dressing	Not Sold Separately

### PREPARATION

#### WARNING

Be sure headlamp, tail and stop lamp and turn signals are operating properly before riding. Poor visibility of rider to other motorists can result in death or serious injury. (00478b)

1. Install Turn Signal Relocation Kit (if applicable) according to the instructions included in that kit. Refer to P&A Retail Catalog.

#### NOTE

The chrome saddlebag supports must be installed before the leather throw-over saddlebags.

2. Install appropriate Chrome Saddlebag Support Kit according to the instructions included in that kit. Refer to P&A Retail Catalog.

### INSTALLATION

#### NOTE

Saddlebags must be clear of rear wheel, drive chain or belt, sprocket, rear brake components, swingarm, and rear shocks.

#### WARNING

Do not exceed saddlebag weight capacity. Put equal weight in each bag. Too much weight in saddlebags can cause loss of control, which could result in death or serious injury. (00383a)

#### NOTE

Maximum saddlebag weight capacity is 7 pounds (3.18 Kg.)

#### XL1200N Models With Solo Seat

1. Remove seat and mounting hardware. Discard mounting hardware but save seat.
2. See Figure 1. Place throw-over saddlebags and securing straps (1) over top of rear fender.


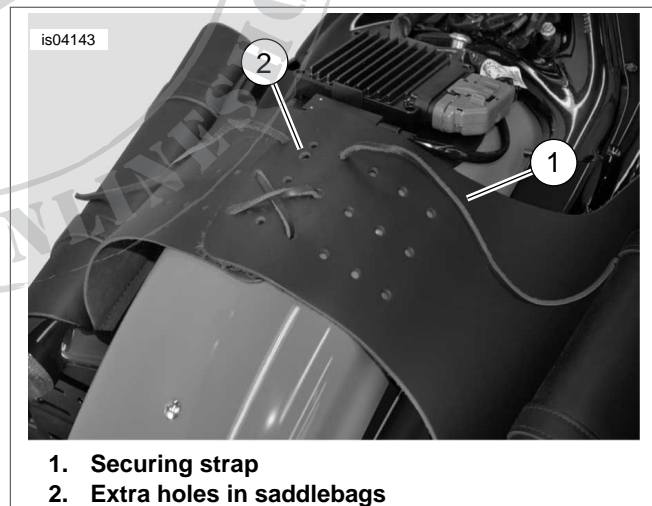


Figure 1. Saddlebag Placement (XB1200N With Solo Seat)

3. Align extra set of holes in saddlebags (2) over the seat mounting nut location.
4. Place seat and mounting bracket over rear hole as shown in Figure 2.
5. See Figure 2. Secure seat and throw-over saddlebags to rear fender using screw (1) and star washer (2) from kit.

6. Check to make sure saddlebags do not interfere with license plate mount.

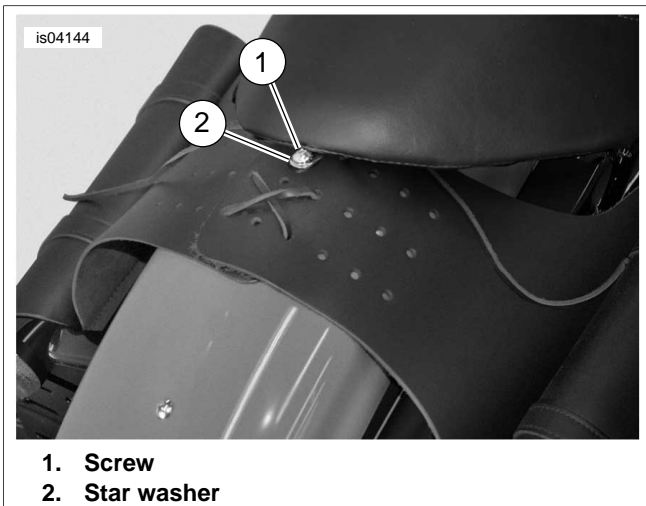


**Figure 2. Solo Seat Mounting**

7. Relace top of throw-over saddlebags tighter or looser if necessary. Saddlebags should ride high and fit snugly against the saddlebag supports.
8. Fasten front securing straps to chrome saddlebag supports.

**NOTE**

*After both saddlebags are mounted correctly, check all securing straps to make sure they do not interfere with (or are exposed to) moving parts.*

9. See Figure 3. Tuck the tails of the leather straps underneath that part of the straps that connect the two saddlebags.
10. Tie straps on top of throw-over saddlebags to secure in place.

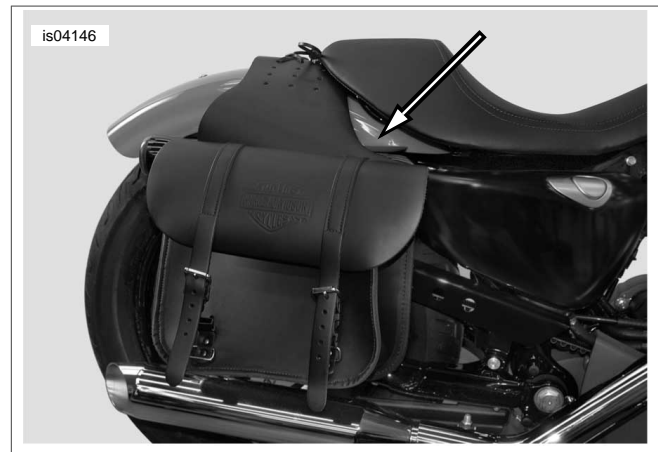

**Figure 3. Throw-Over Saddlebags (Solo Seat Shown)**

**Models With 2-Up Seats**

1. Place throw-over saddlebags on passenger seat with securing straps toward front of vehicle.
2. Relace top of throw-over saddlebags tighter or looser if necessary. Saddlebags should ride high and fit snugly against the saddlebag supports.
3. Fasten front securing straps to chrome saddlebag supports.

**NOTE**

*After both saddlebags are mounted correctly, check all securing straps to make sure they do not interfere with (or are exposed to) moving parts.*

4. Tuck the tails of the leather straps underneath that part of the straps that connect the two saddlebags.
5. Tie straps on top of throw-over saddlebags to secure in place.