



# INSTRUCTIONS

-J00760

REV. 2-1-92

Kit Number 91913-91, 91914-91, 91915-91

## CONCHO LEATHER TIES & ROSETTES

### General

This rosette and leather tie are intended to be replacement parts for existing conchos. This kit does not have a medallion. Use the existing medallion with this kit.

The kit consists of:

QTY	DESCRIPTION
1	Rosette
1	Leather tie

### INSTALLATION

#### NOTE

There is more than one way to tie these leather ties, but the first three steps are the same, no matter how you finish tying them.

1. See Figure 1. Slide one end of the leather tie through the slots in the surface of the item on which you intend to install the concho.
2. See Figure 2. Center the tie with the rough side facing toward you. Slip the rosette and medallion onto the leather tie through their respective slots. Pull the rosette and medallion snugly against the surface of the item and check to be sure the tie is centered.
3. See Figure 3. Note the slits in the leather tie. Hold the top half of the tie toward you, then slip the bottom half of the tie up and through the slit in the top half.

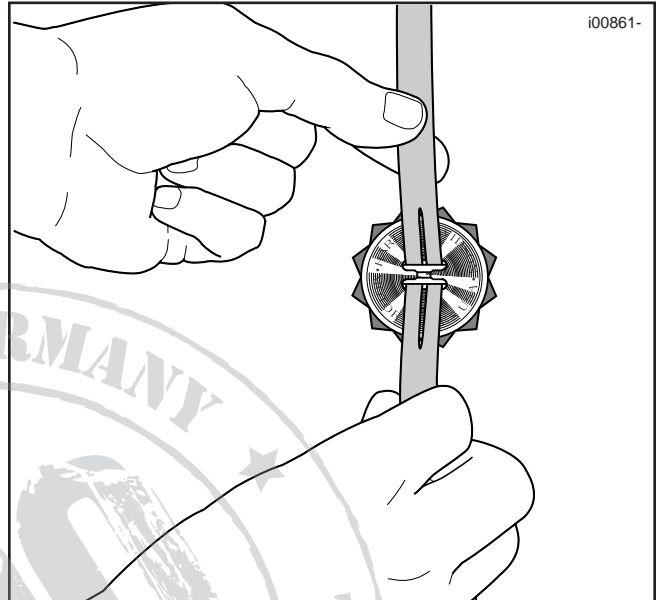


Figure 2. Slip Rosette and Medallion Onto Tie

#### NOTE

Stop here. Do you want both smooth sides showing? See "SMOOTH SIDES SHOWING". Do you want one smooth side and one rough side showing? See "ONE ROUGH SIDE SHOWING". Do you want a knot with tightly wound sides? See "KNOT".

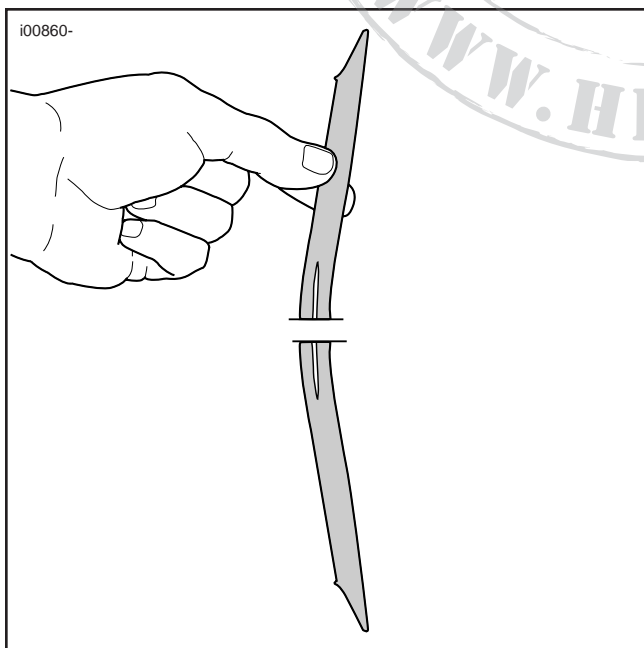


Figure 1. Slide Leather Tie Through Slots

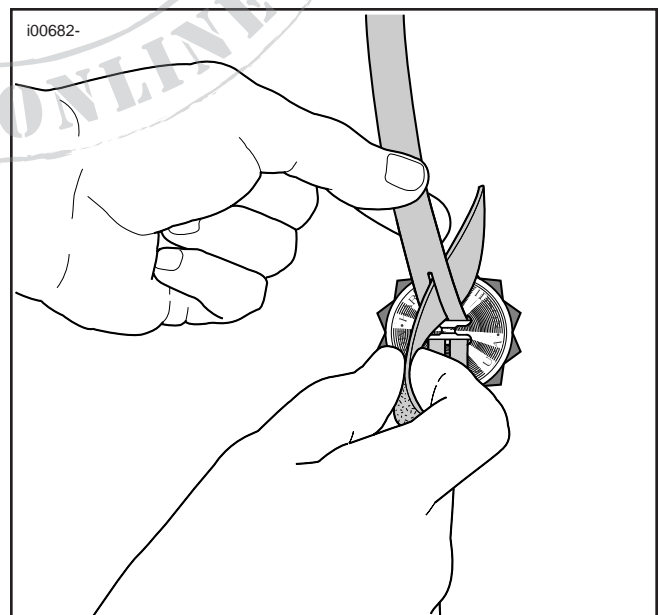


Figure 3. Slip Bottom Half Through Top Half

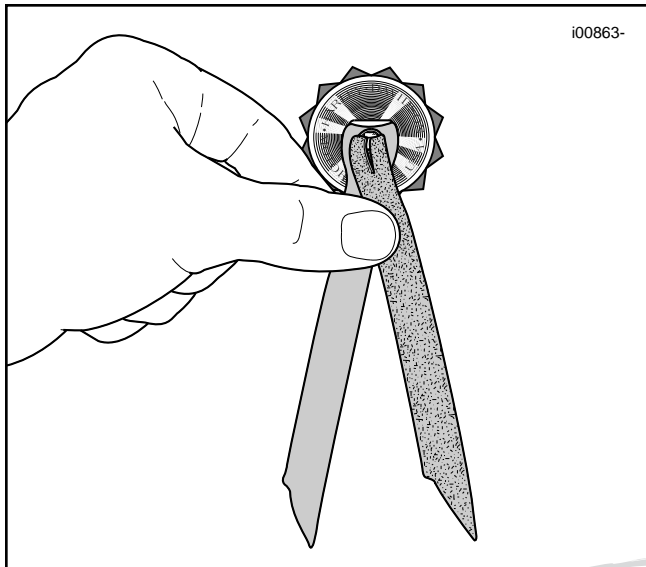


Figure 4. One Rough Side and One Smooth Side

See Figure 4. If you followed steps 1 thru 3 correctly you now have one rough side and one smooth side showing. At this point, the smooth side is at the bottom.

## KNOT

### NOTE

*Before performing step 4, do this for a tightly wound knot.*

- 3A. See Figure 5. Take the top (rough) side, turn the pointed end downward and slip it into its own slit from the bottom. Finish by pulling the strap toward you. this will twist the sides of the slit. After doing this, proceed to Step 4.

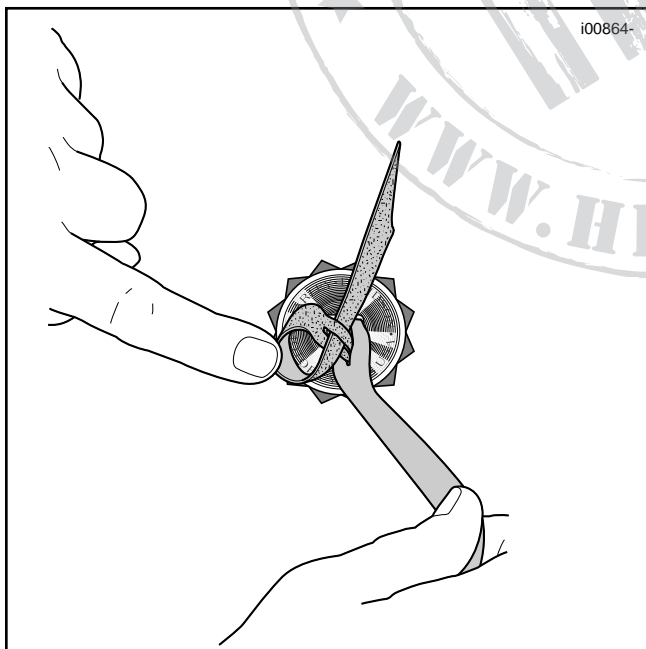


Figure 5. Slip Top Into Its Own Slit

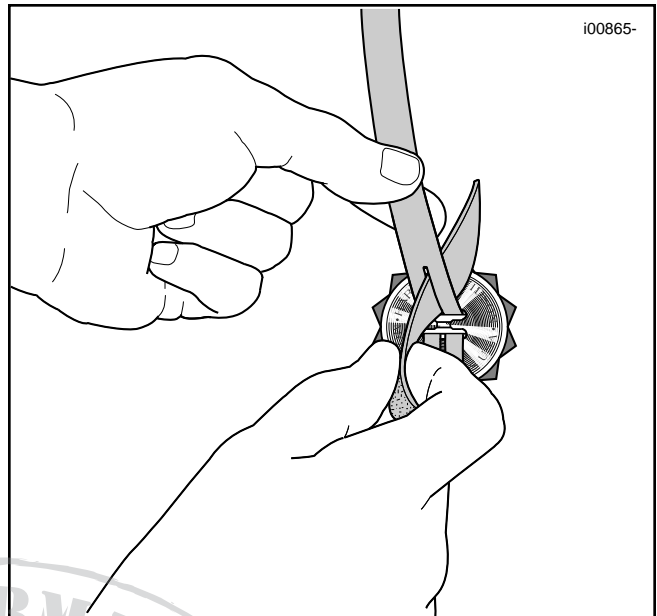


Figure 6. Slide Bottom Half Through Top Strap

## ONE ROUGH SIDE SHOWING

4. See Figure 6. Slide the new bottom half (smooth) up through the top strap slit. You will now have a smooth top and a rough bottom strap. Smooth both straps downward until they lay flat.

## SMOOTH SIDES SHOWING

4. See Figure 7. Hold the new top (rough) side as close to the medallion as you can and twist it 1/2 turn, until the smooth side is facing up. in the portion of the slit closest to you. You will now have smooth top and bottom straps. Smooth both straps downward until they lie flat.

Those were some of the possible variations. There are others, some you can invent yourself.

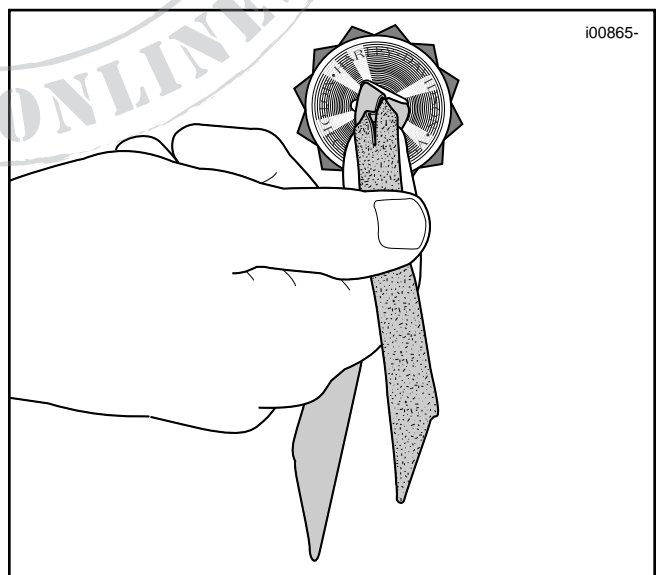


Figure 7. Twist Top (Rough) Side 1/2 Turn